


Bently Nevada 81545-01

XDCR I/O and Record Terminals / Dual Epoxy Relays Module

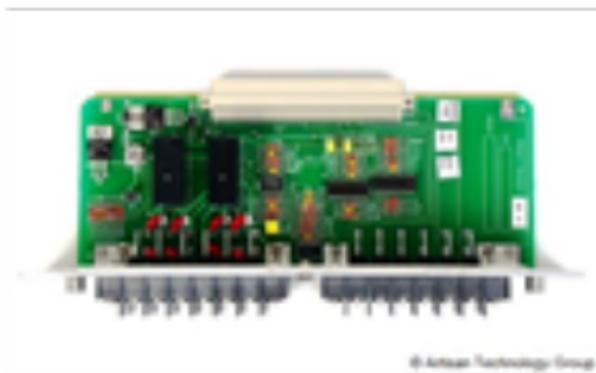

\$395.00

In Stock

Qty Available: 1

New From Surplus Stock

Open Web Page

<https://www.artisanng.com/85553-2>

All trademarks, brandnames, and brands appearing herein are the property of their respective owners.



Your **definitive** source
for quality pre-owned
equipment.

Artisan Technology Group

(217) 352-9330 | sales@artisanng.com | artisanng.com

- Critical and expedited services
- In stock / Ready-to-ship
- We buy your excess, underutilized, and idle equipment
- Full-service, independent repair center


Artisan Scientific Corporation dba Artisan Technology Group is not an affiliate, representative, or authorized distributor for any manufacturer listed herein.

PART NO. 84417-01

3300/48
CASE EXPANSION
MONITOR

OPERATION MANUAL

BENTLY
NEVADA 

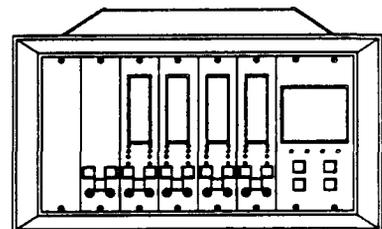

NOTICE

READ THE FOLLOWING BEFORE INSTALLING OR OPERATING EQUIPMENT

Bently Nevada Corporation has attempted to identify areas of risk created by improper installation and/or operation of this product. These areas of information are noted as **WARNING** or **CAUTION** for your protection and for the safe and effective operation of this equipment. Read all instructions before installing or operating this product. Pay particular attention to those areas designated by the following symbols.

 WARNING
<p>High Voltage present Could cause shock, burns or death.</p> <p>Do Not touch exposed wires or terminals.</p>

CAUTION
<p>Machine Protection Will Be Lost</p>


In this document procedures are given only for channel A. Procedures for channel B are similar except for the obvious substitution of corresponding switches, terminals, and indicators.

SYMBOLS


Special symbols are used in the manual to illustrate specifics in the step by step processes. For example:



PRESS

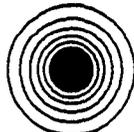

FLASHING

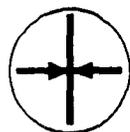

CONNECT



DISCONNECT



OBSERVE



SCREWDRIVER

FOREWORD

This document is for control room personnel who operate the 3300 Monitoring System. The procedures are presented in step-by-step graphic format.

RELATED DOCUMENTS

3300 System Overview, 80177

3300 System Installation Instructions, 80172

3300 System Troubleshooting, 80173

3300/10 Power Supply, 80174

3300/01 System Monitor, 80175

3300/48 Case Expansion Maintenance, 84418-01

Dynamic Data Manager System, 46390-01

Keyphasor® is a registered trademark of Bently Nevada Corporation

Proximator® is a registered trademark of Bently Nevada Corporation

Document No. 84417 ■ First Printing: April 1989 ■ Revision NC: April 1989

Copyright© 1989 Bently Nevada Corporation

All Rights reserved

No Part of this publication may be reproduced, transmitted, stored in a retrieval system nor translated into any human or computer language, in any form or by any means, electronic, mechanical, magnetic, optical, chemical, manual, or otherwise, without the prior written permission of the copyright owner.

Bently Nevada Corporation
P.O. Box 157
Minden, Nevada 89423 USA
Telephone 800-227-5514 702-782-3611
Telemail/Telex 7400983 BNC UC
Fax 702-782-9253

Copyright infringement is a serious matter under
United States of America and Foreign Copyright Laws


Blank Page

CONTENTS

SECTION	TITLE	PAGE
1.	Case Expansion Monitor System	1
2.	Monitor Options	2
3.	Programmable options	3
4.	Monitor Functions	4,5
5.	OK	6
6.	Bypass	7
7.	Alert and Danger	8
8.	Read Direct and Differential Mode	9
9.	Read Setpoint Levels	10
10.	Self Test	11-15
	Three levels	11
	Reading Error Codes	12-14
	List of Error Codes	15
	INDEX	16,17


Blank Page

1 CASE EXPANSION MONITOR SYSTEM

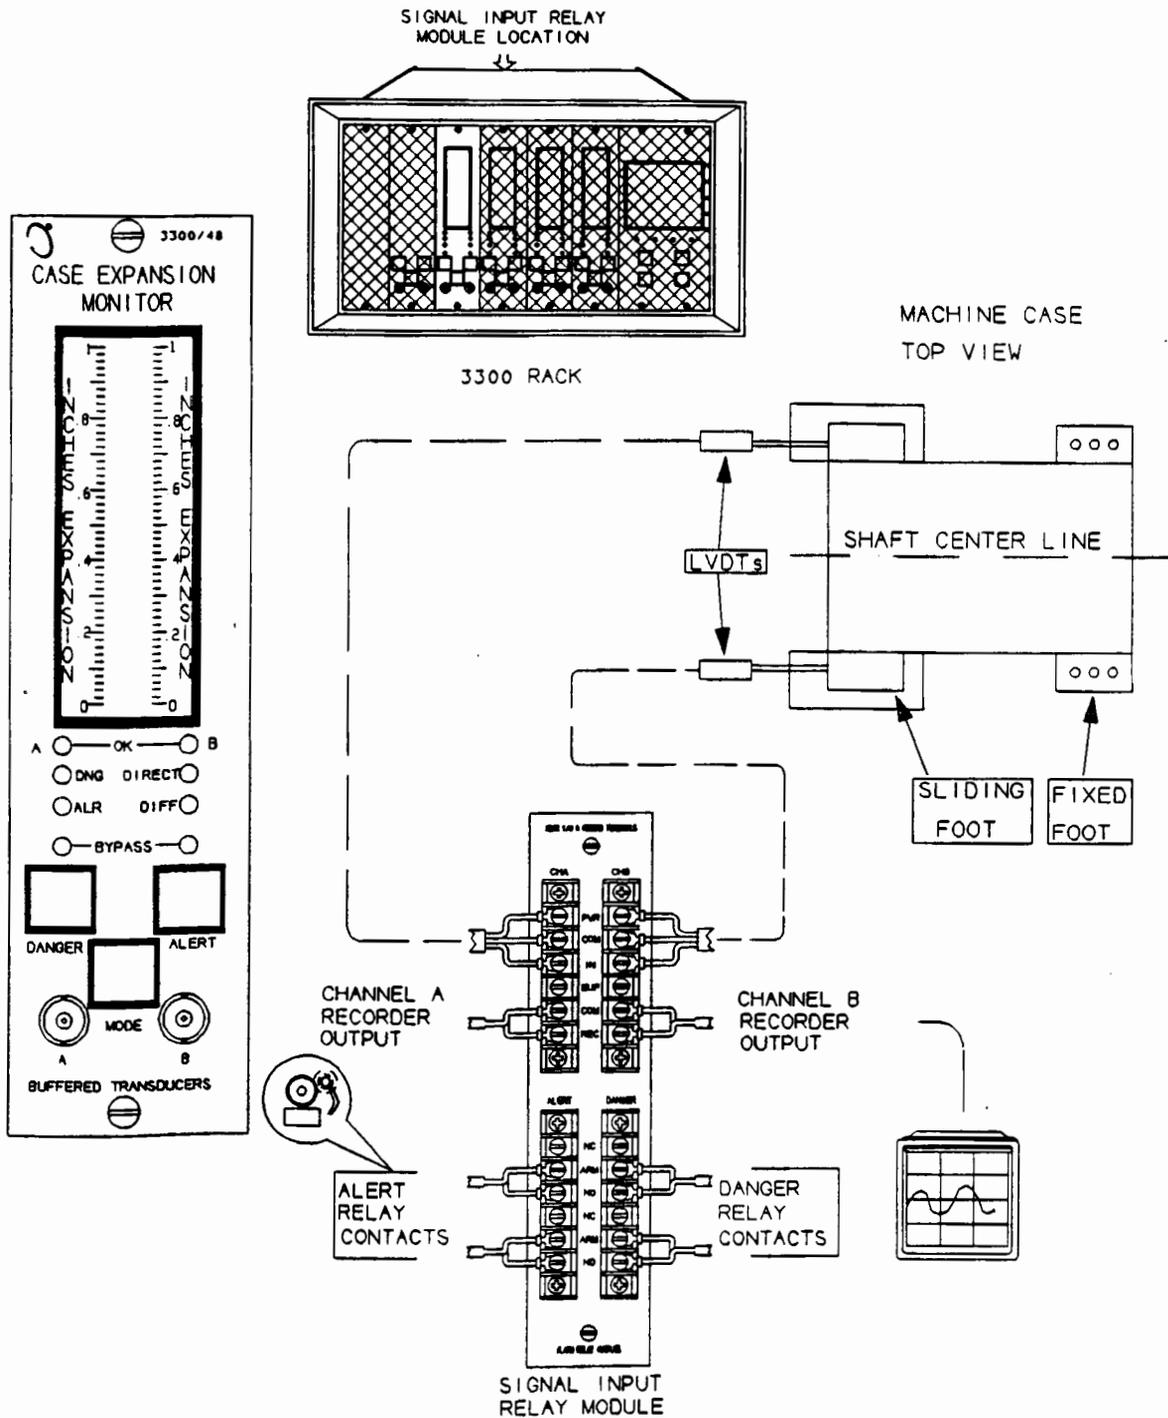

2 MONITOR OPTIONS

CASE EXPANSION
MONITOR PART NUMBER

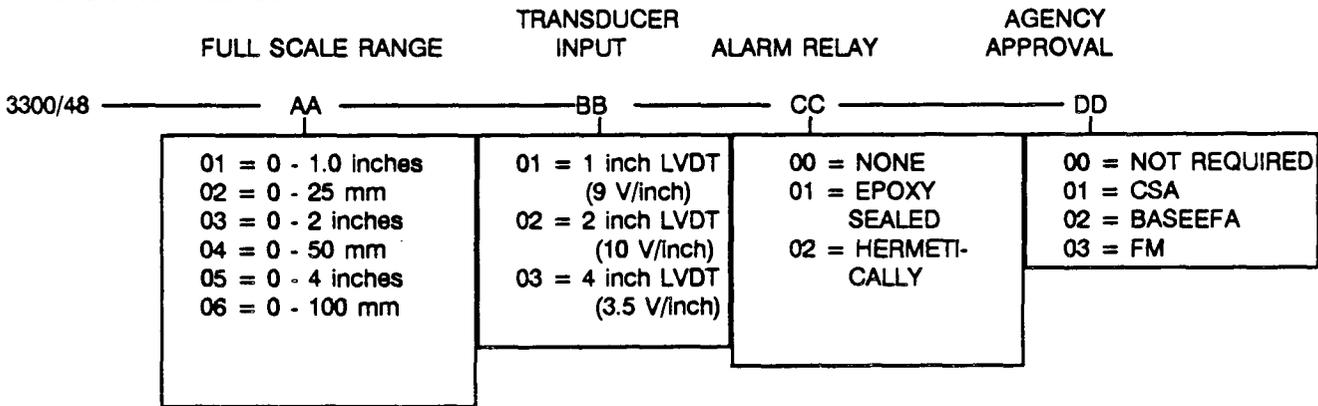

3

PROGRAMMABLE OPTIONS

Monitor Feature	Option	Monitor Feature	Option
First Out	Enabled * Disabled	Danger Mode	Latching Non-Latching
Alarm Delays	0.1 sec 1 sec 3 sec * 6 sec	Recorder Output	+4 to +20 mA * +1 to +5 Vdc 0 to -10 Vdc
OK Mode	Latching Non-Latching *	Recorder Mode	Differential * Direct
Alert Mode	Latching * Non-Latching	Upscale Direction	Toward Transducer * Away from Transducer
Meter Response Time	Fast * Slow	Danger Bypass Switch	Enabled Disabled *
Channel B	On * Off	Timed OK Channel Defeat	Enabled Disabled *#

* As Shipped from Factory

Requires Non-Latching OKs

4

MONITOR FUNCTIONS

CASE EXPANSION - The Case Expansion Monitor continuously monitors the expansion of the machine case on both sides of a machine. The monitor uses signals from two linear variable differential transducers (LVDT) mounted on both sides of the machine case. LVDTs can be oriented so that the expansion of the machine case is either toward or away from the LVDT. The Case Expansion Monitor provides an alarm if the expansion of the machine case is not the same on each side.

OK - When the output voltage of the LVDTs is within its upper/lower limits, the transducer is defined as OK. The OK detection circuit controls the channel OK LED and the monitor relay drive to the OK Relay. If the monitor has the Latching Not OK option chosen, a System Reset is required to reset the OK function.

OK RELAY - The OK Relay is located on the Power Input Module. Every channel in the rack must be OK or bypassed to energize the OK Relay.

DIRECT AND DIFFERENTIAL MODE - The Case Expansion Monitor can display the expansion of the machine case in two ways, direct or differential. In the direct mode, the monitor shows the amount of expansion as measured by the LVDTs on both sides of the machine. The two measurements are displayed on the bar graphs for channel A and B. In the differential mode, the monitor displays the difference between the two measured expansions. This difference is displayed on the bar graph for channel A, and the bar graph for channel B is blanked. The monitor can be toggled between direct and differential modes by pressing the MODE switch.

ALARM - Since alarms for the case expansion monitor use differential values, alarm setpoints may be read when the monitor is in the differential mode only. Pressing the Alert or Danger Switch on the front panel of the monitor causes the corresponding Alert (first-level alarm) or Danger (second-level alarm) set points to be displayed on the channel A bargraph on the front panel. Pressing alarm switches when the monitor is in direct mode gives a blank display. When the differential expansion signal exceeds the preset levels for the selected time delay, the Alert and Danger LEDs come on and the appropriate Alert and Danger alarm relay contacts activate.

FIRST OUT - Separate First Out circuits exist for Alert and Danger alarms. A monitor with First Out option selected flashes a channel alarm LED if that channel was the first channel in the rack to go into alarm since the last reset. Pressing the RESET switch acknowledges the First Out.

ALARM RELAYS - Monitor alarms can be programmed for either the latching or non-latching mode. In the non-latching mode, the alarm resets automatically when the alarm no longer exists. In the latching mode, the alarm condition must be reset manually by pressing the RESET switch on the front panel of the System Monitor or by closing external Reset contacts. The alarm will not reset if the alarm condition still exists.

DANGER BYPASS - Danger Bypass inhibits the danger relay drive. Other monitor functions continue. When Danger Bypass is on, the Bypass LEDs for both channels are on. This function can be enabled by installing a programming jumper on the monitor.

4

MONITOR FUNCTIONS [CONT]

BUFFERED OUTPUT - The Case Expansion Monitor provides the buffered output from the LVDTs at two locations: at the coaxial cable connectors on the front panel and at the terminals on the Signal Input Relay Module. These connectors can be used to connect the monitor to external equipment.

RECORDER OUTPUT - The range of recorder output can be 0 to -10Vdc, +1 to +5Vdc, or +4 to +20mA depending on which option is selected. In addition, recorder output can be in either direct or differential mode. In the direct mode, the recorder outputs are given for both channels and is proportional to the amount of expansion as measured by each transducer. In the differential mode, the recorder output is given on channel A only and is proportional to the absolute value of the difference between the expansion as measured by the two LVDTs.

SELF TEST - The monitor has three categories of self test: power-up, cyclic, and user-invoked.


Power-up self test is performed automatically each time the monitor power is turned on. A series of basic tests and transducer OK tests are performed.

Cyclic self test is performed automatically during monitor operation. Errors encountered during cyclic tests disable the monitor, and flash an error code on the LCD bar graph. If the error is intermittent, the monitor will return to operation, and the error codes are stored. Error codes can be read by performing a user-invoked test. Stored error codes are indicated by OK LEDs flashing at 5 Hz provided that the channel is OK.

The User-Invoked test performs a power-up self test and allows error messages stored during cyclic tests to be read and cleared. Stored errors are annunciated by flashing the OK LEDs at 5 Hz and displaying the error codes on the front panel LCD bar graph.

Timed Ok Channel Defeat - The Timed OK channel defeat function prevents faulty transducer wiring from causing false alarms. If a transducer is determined to be Not OK, the channel OK LED goes off, the Channel Bypass LED comes on, the channel alarming is disabled, and the OK relay de-energizes. If a channel's input signal returns to an OK condition, the channel's OK LED will start flashing at a 1 Hz rate to indicate that the OK state is restored, the Bypass LED will go off, and after a 10 second delay monitoring is enabled. The Reset switch on the System Monitor front panel must be pressed to stop the OK LED from flashing.

5 OK

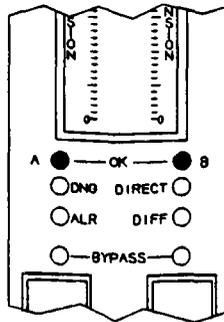


Note: Since each channel in the system controls the OK Relay, either channel can cause a Not OK Relay condition (de-energized relay).

LED DISPLAY		CONDITION	OK RELAY DRIVE *
A	B		
●	●	Channel A and B in operating range	ON
●	○	Respective channel A or B transducer in Not OK condition or bypassed. *	OFF *
○	●		
○	○	Monitor in self test, or both transducers in Not OK condition or bypassed. *	OFF *
⊙	⊙	Flashing at 5 Hz = error encountered during cyclic test. To read error messages see section 10, pages 11-15. Flashing at 1 Hz = Transducer has been Not OK since last Reset	ON



* Not OK channel can be bypassed to restore relay OK conditions

6 **BYPASS**

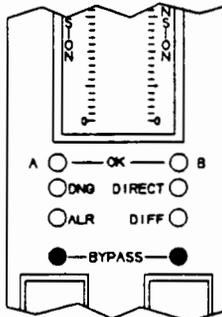

LED DISPLAY		CONDITION
A	B	
●	BYPASS ●	Monitor in DANGER BYPASS MODE System in POWER UP MODE User-Invoked Self Test in progress Both channels bypassed
●	BYPASS ○	Channel A or B bypassed
○	BYPASS ●	


7 ALERT AND DANGER

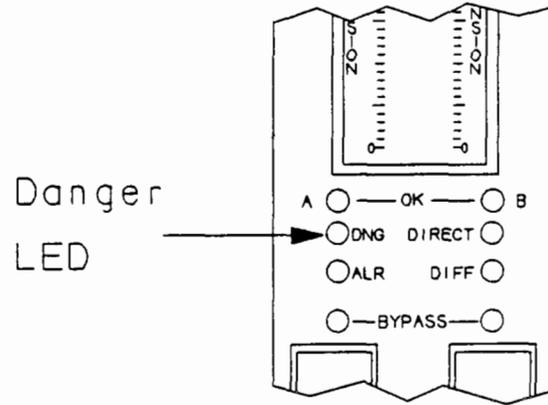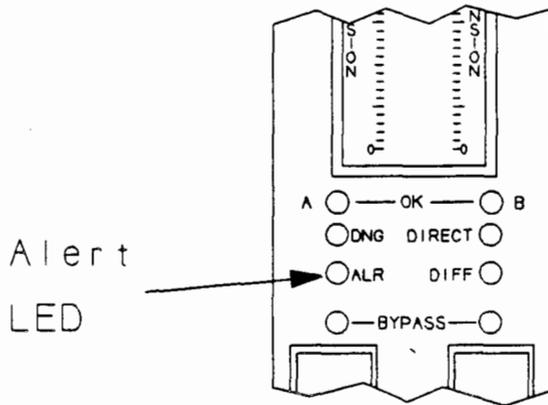

LED DISPLAY	CONDITION	ALERT RELAY DRIVE
○ ALR	The difference in case expansion as measured by channels A and B is less than the alert level.	OFF
● ALR	The difference in case expansion exceeds the alert level.	ON
◎ ALR	The difference in case expansion exceeds the alert level, and this is the first alert alarm on the rack.	ON

LED DISPLAY	CONDITION	DANGER RELAY DRIVE
○ DNG	The difference in case expansion as measured by channels A and B is less than the danger level.	OFF
● DNG	The difference in case expansion exceeds the danger level.	ON
◎ DNG	The difference in case expansion exceeds the danger level, and this is the first danger alarm on the rack.	ON

8 READ DIRECT OR DIFFERENTIAL MODE

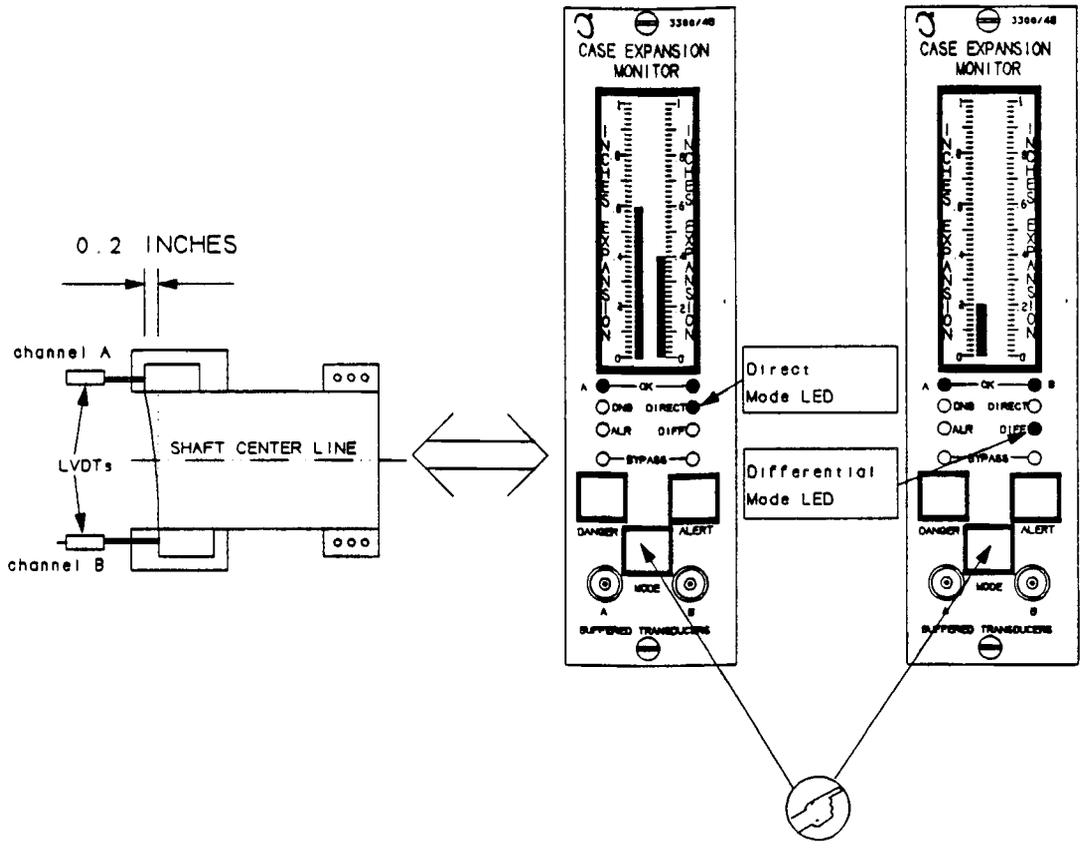

Use the Mode Key to toggle between direct and differential mode.



The monitor in the illustration on this page indicates that the total expansion of the machine case
 on channel A side = 0.6 inches
 on channel B side = 0.4 inches
 Difference in expansion = 0.2 inches

9 READ SETPOINT LEVELS

Note: You can read the setpoints in Differential Mode only. If you try to read the setpoints in direct mode, the display will be blank.

Alert SetPoint = 0.4 inches


Danger SetPoint = 0.6 inches

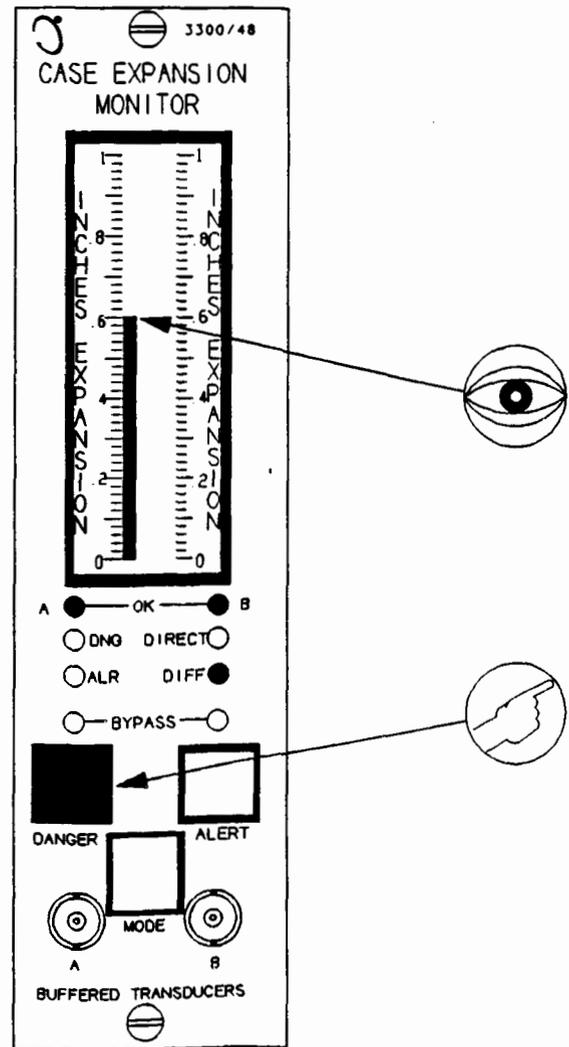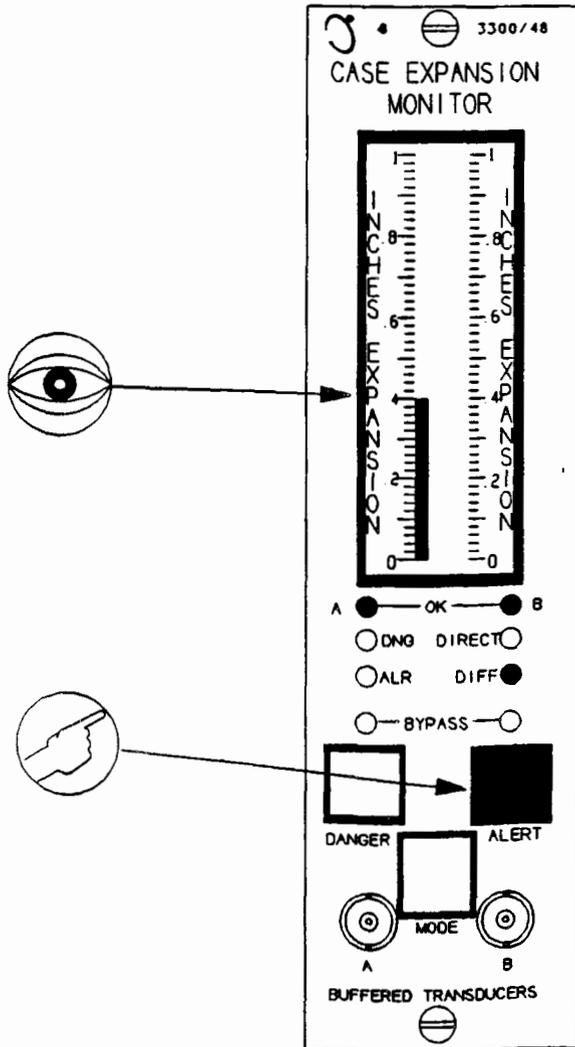

10 SELF TESTS

The three levels of self tests are

- power-up - performed only when the monitor is turned on
- cyclic - continuously performed by the monitor
- user-invoked - performed only when initiated by the user.

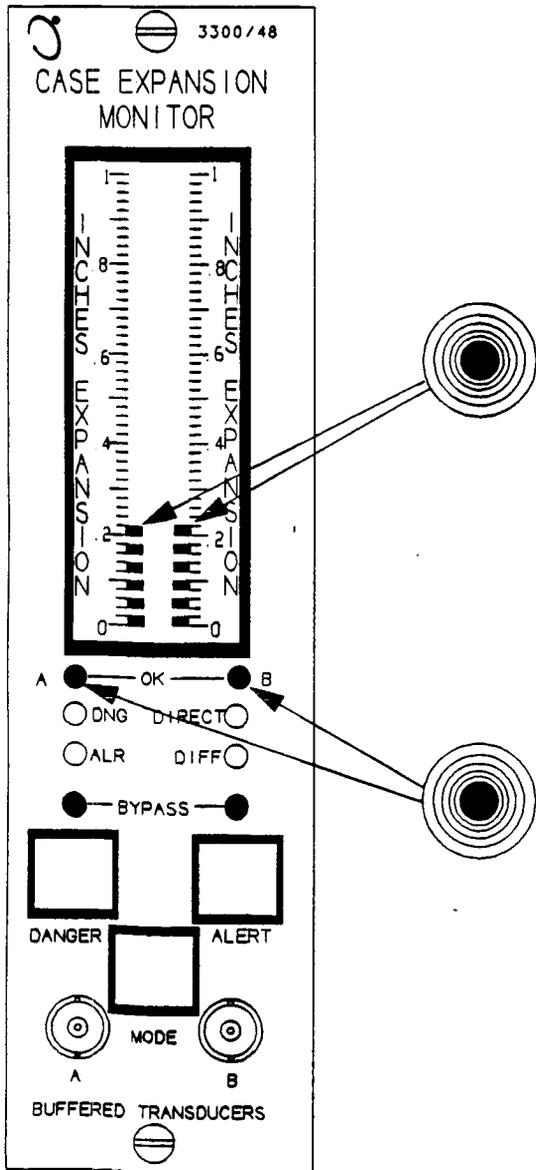

The monitor on this page is giving a signal that a continuing error has been detected during a self test. When a continuing error is detected,

monitoring is stopped until the error is resolved,

the error code is flashed on the LCD bar graph and stored in memory,

the Bypass LED comes on and the OK LED flashes at 5 Hz.




If the error goes away, monitoring is resumed and the OK LEDs flash at 5 Hz. The error code, however, remains stored in the monitor and may be read by using the user-invoked self test.

Note:

Although both columns of the bar graph flash, the error code is only the sum of the bar graph segments displayed in one column. For example the monitor on this page is displaying error code 6.

10 SELF TESTS

Follow these steps to read the error codes that have been stored in the monitor:

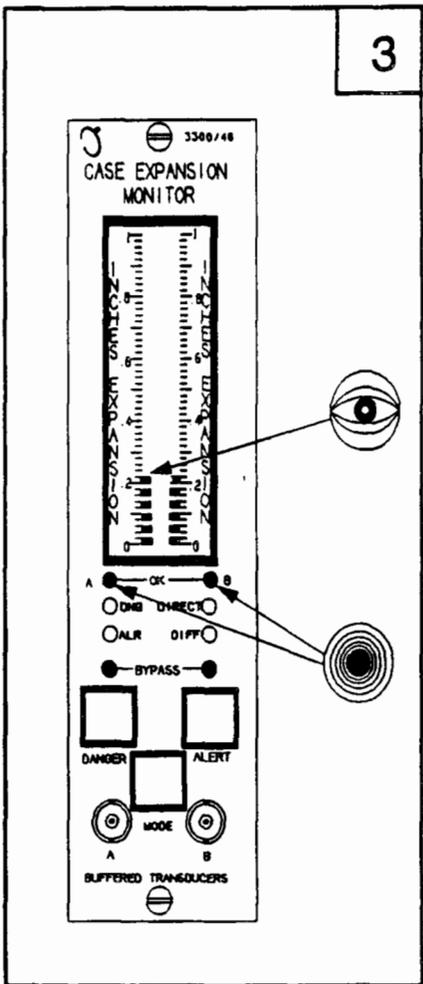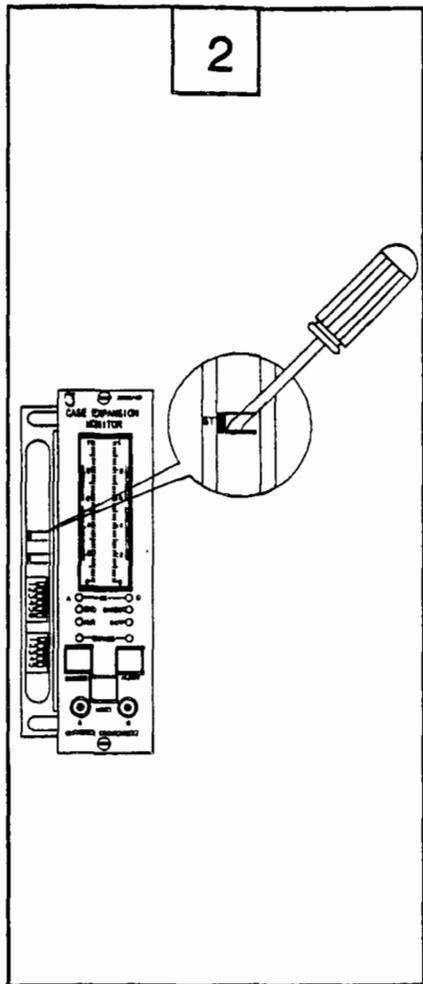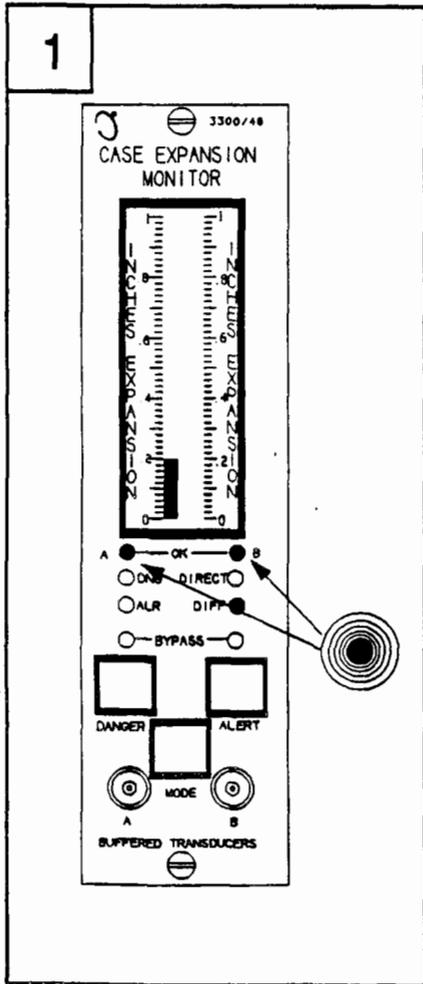

1

Flashing OK LEDs show that error codes are stored in the monitor.




2

Initiate the user-invoked test by shorting across the self-test pins behind the panel. The self-test pins are labeled ST on the inner panel.

3

The first error code is displayed on the bar graph. Read the code by counting the number of bars on one side. Error code number 6 is displayed on this monitor.

10 SELF TESTS

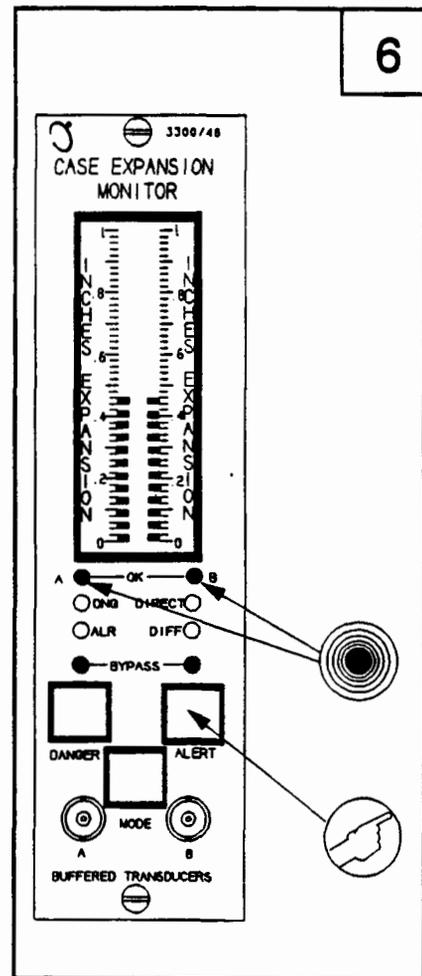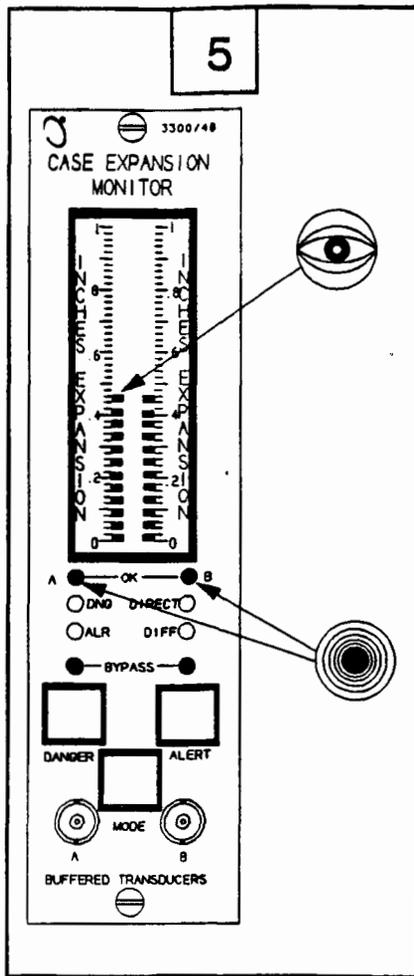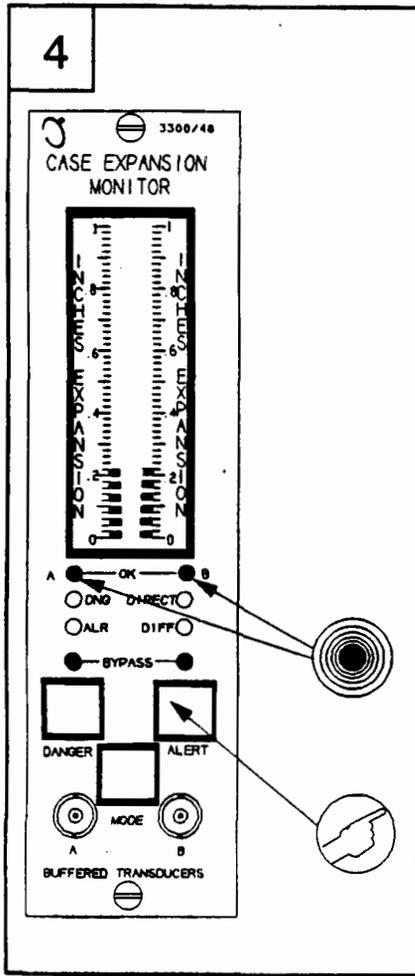

4

Press and hold the alert switch for 1 second to toggle to the next error code.


5

Read the second stored error code. This bar graph is displaying error code 12.

6

Read through all the other stored codes by pressing and holding the alert switch one second.

10 SELF TESTS

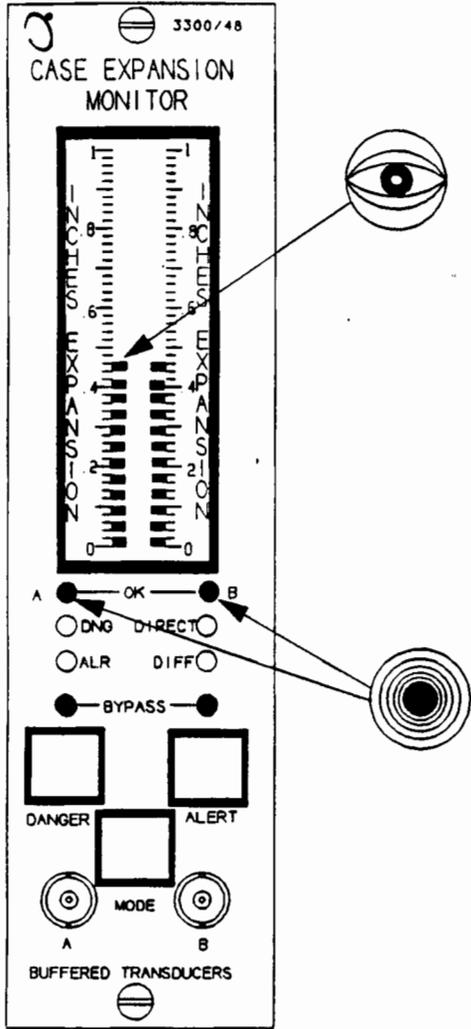

Error Code	Description
2	ROM CHECKSUM has failed. *
3	EEPROM failure number 1. **
4	EEPROM failure number 2. *** Adjust set points
5	+7.5V/-VT node out of tolerance. **
6	+VRH node out of tolerance. **
7	+5V node out of tolerance. **
8	MVREF node out of tolerance. **
9	+7.5V node out of tolerance. **
10	+VRL node out of tolerance. **
12	+5V/-7.5V node out of tolerance. **
14	RAM failure. *
17	COP Watchdog not configured.
18	+5V/-5V or +15V node out of tolerance. **
21	Incorrect switch or switch combination. ****
22	Incorrect jumper configuration. *

- * Tested only at Power Up or User Invoked Self Test. This error is displayed on the front panel but is not stored in memory.
- ** Tested only at Cyclic Self Test. Errors 2, 3, and 14 are non-recoverable and errors 5 through 13 could be intermittent and recoverable.
- *** Error 4 is a setpoint failure and may be corrected by adjusting all setpoints in the monitor.
- **** Tested only when monitor is in calibration mode.

INDEX

Alarm	
Alarm Relays	4
Alert	4, 8
Danger	4, 8
Levels of Alarm	4
Alarm Delays	3
Buffered Output	4
Bypass	3, 7, 11
Danger Bypass	4
Errors	
Continuing Errors	11
Description of Error Codes	15
Error Code	6, 11
Intermittent Errors	11, 15
Reading error codes by using the User-invoked Self Test	12
LVDT (See Transducer)	
First Out	3, 4, 8
Meter Response Time	3
Mode	
Alert Mode	3
Calibration Mode	15
Danger Bypass Mode	7
Danger Mode	3
Direct and Differential Mode	4, 9, 10
Mode Key	9
OK Mode	3
Power Up Mode	7
OK	4, 6
Output	
Connectors for Buffered Output	1, 4
Direct and Differential Recorder Output	3, 4
Range of Recorder Output	3, 5
Overview of the system.	1
Part Number	2
Range	
Operating Range	6
Scale range options	2
Recorder Output	5
Relay	
Alarm relay options	2
Alert Relay Drive	8
Danger Relay Drive	8
OK Relay	4, 6

INDEX

Self Tests

- Cyclic 5, 6, 11, 15
- Power-up 5, 11
- User-Invoked 5, 7, 11, 12

Self Test Pins 12

Setpoint 11, 15

Signal Input Relay Module 1, 4

Transducer

- Linear variable differential transducers 4
- Transducer input options 2

Upscale Direction 3, 4




PART NO. 84418-01

3300/48
CASE EXPANSION
MONITOR

MAINTENANCE MANUAL

BENTLY
NEVADA 

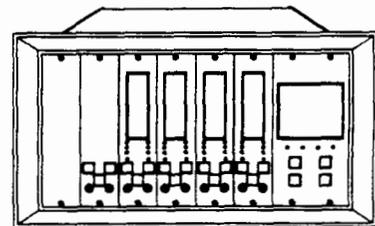

NOTICE

READ THE FOLLOWING BEFORE INSTALLING OR OPERATING EQUIPMENT

Bently Nevada Corporation has attempted to identify areas of risk created by improper installation and/or operation of this product. These areas of information are noted as **WARNING** or **CAUTION** for your protection and for the safe and effective operation of this equipment. Read all instructions before installing or operating this product. Pay particular attention to those areas designated by the following symbols.


 WARNING
<p>High Voltage present Could cause shock, burns or death.</p> <p>Do Not touch exposed wires or terminals.</p>

CAUTION
<p>Machine Protection Will Be Lost</p>


In this document procedures are given only for channel A. Procedures for channel B are similar except for the obvious substitution of corresponding switches, terminals, and indicators.

SYMBOLS


Special symbols are used in the manual to illustrate specifics in the step by step processes. For example:

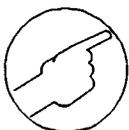

PRESS

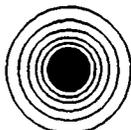


FLASHING

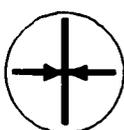

CONNECT



DISCONNECT

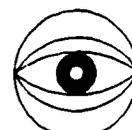

OBSERVE



SCREWDRIVER

FORWARD

This document is intended for personnel who maintain the 3300 Monitoring System. The procedures are presented in step-by-step graphic format.

RELATED DOCUMENTS

3300 System Overview, 80177

3300 System Installation Instructions, 80172

3300 System Troubleshooting, 80173

3300/10 Power Supply, 80174

3300/01 System Monitor, 80175

3300/48 Case Expansion Operation, 84417-01

Dynamic Data Manager System, 46390-01

Keyphasor® is a registered trademark of Bently Nevada Corporation

Proximito® is a registered trademark of Bently Nevada Corporation

Document No. 84418 ■ First Printing: April 1989 ■ Revision A: December 1989

Copyright© 1989 Bently Nevada Corporation

All Rights reserved

No Part of this publication may be reproduced, transmitted, stored in a retrieval system nor translated into any human or computer language, in any form or by any means, electronic, mechanical, magnetic, optical, chemical, manual, or otherwise, without the prior written permission of the copyright owner,

Bently Nevada Corporation
P.O. Box 157
Minden, Nevada 89423 USA
Telephone 800-227-5514 702-782-3611
Telemail/Telex 7400983 BNC UC
Fax 702-782-9253
Copyright infringement is a serious matter under
United States of America and Foreign Copyright Laws


Blank Page

CONTENTS


SECTION	TITLE	PAGE
1.	Case Expansion Monitor System	1
2.	Front Panel Features	2
3.	Monitor Removal	3
4.	Monitor Disassembly	4,5
5.	Signal Input Relay Module	6
6.	Monitor Options	7-11
7.	Meter Scale Replacement	12
8.	Alarm Setpoint Adjust	13
9.	Bypass Monitor Channel	14
10.	Danger Bypass	15
11.	Test Channel Alarms	16-18
12.	Test OK Limits	19,20
13.	Calibrate Channels	21-24
14.	Self Test	25-29
15.	Field Wiring Diagrams	30
16.	Recommended Spare Parts	31
17.	Specifications	32,33
	INDEX	34,35
	Schematics and PWA Drawings	Appendix

Blank Page

1 Case Expansion Monitor System

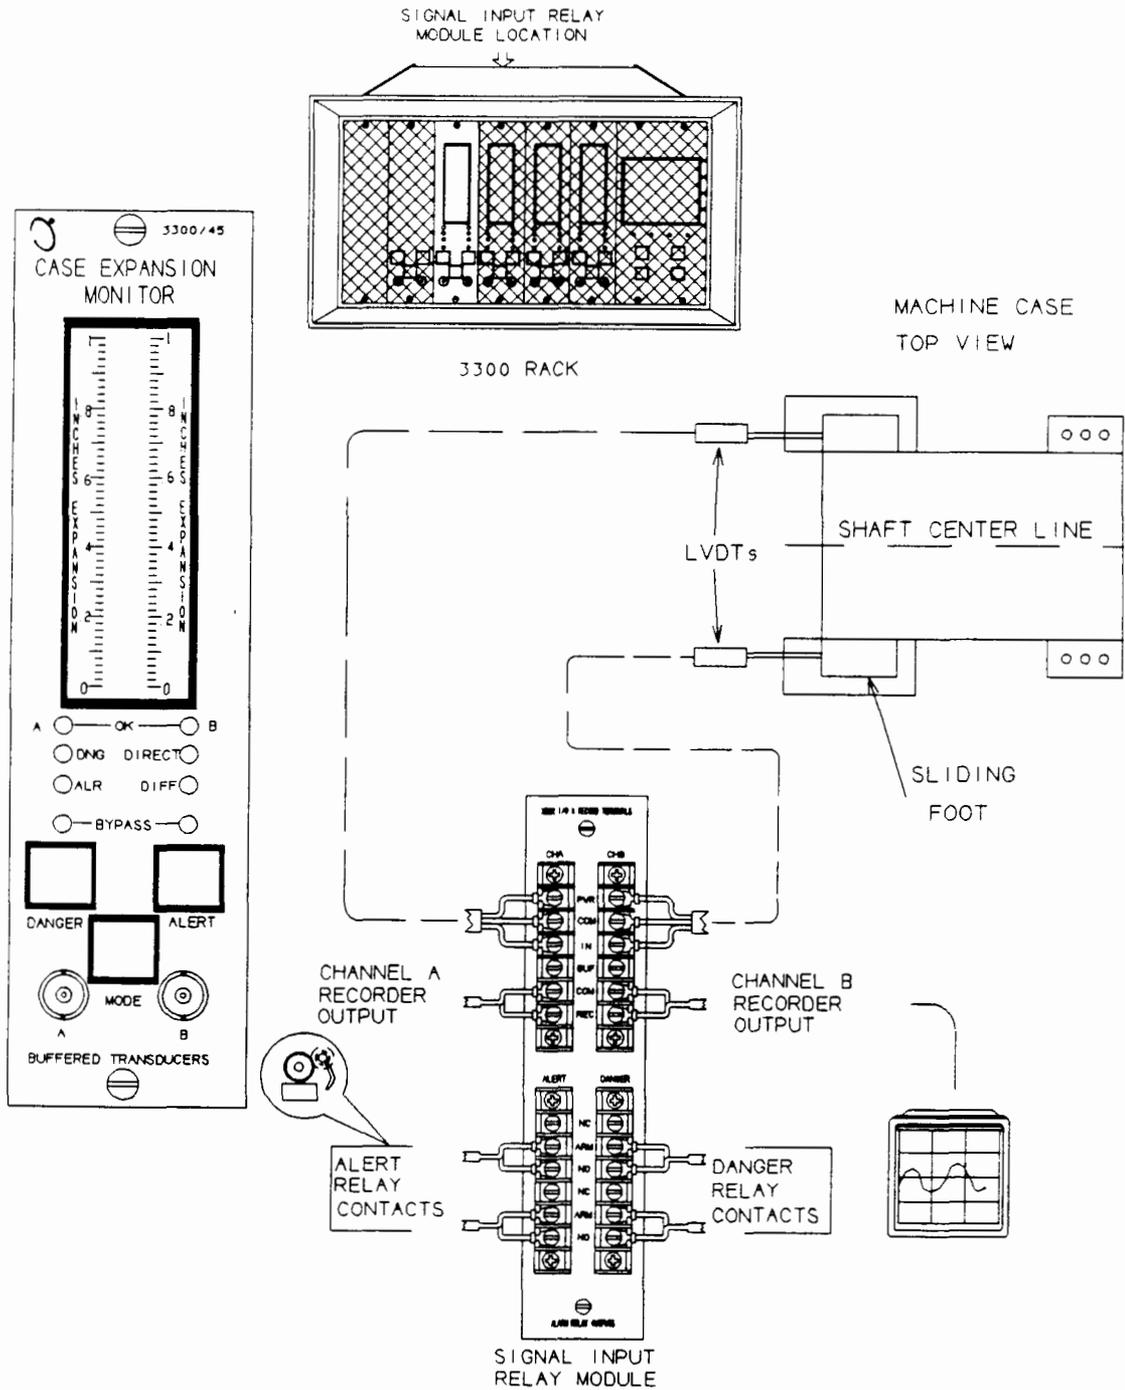

2 Front Panel Features

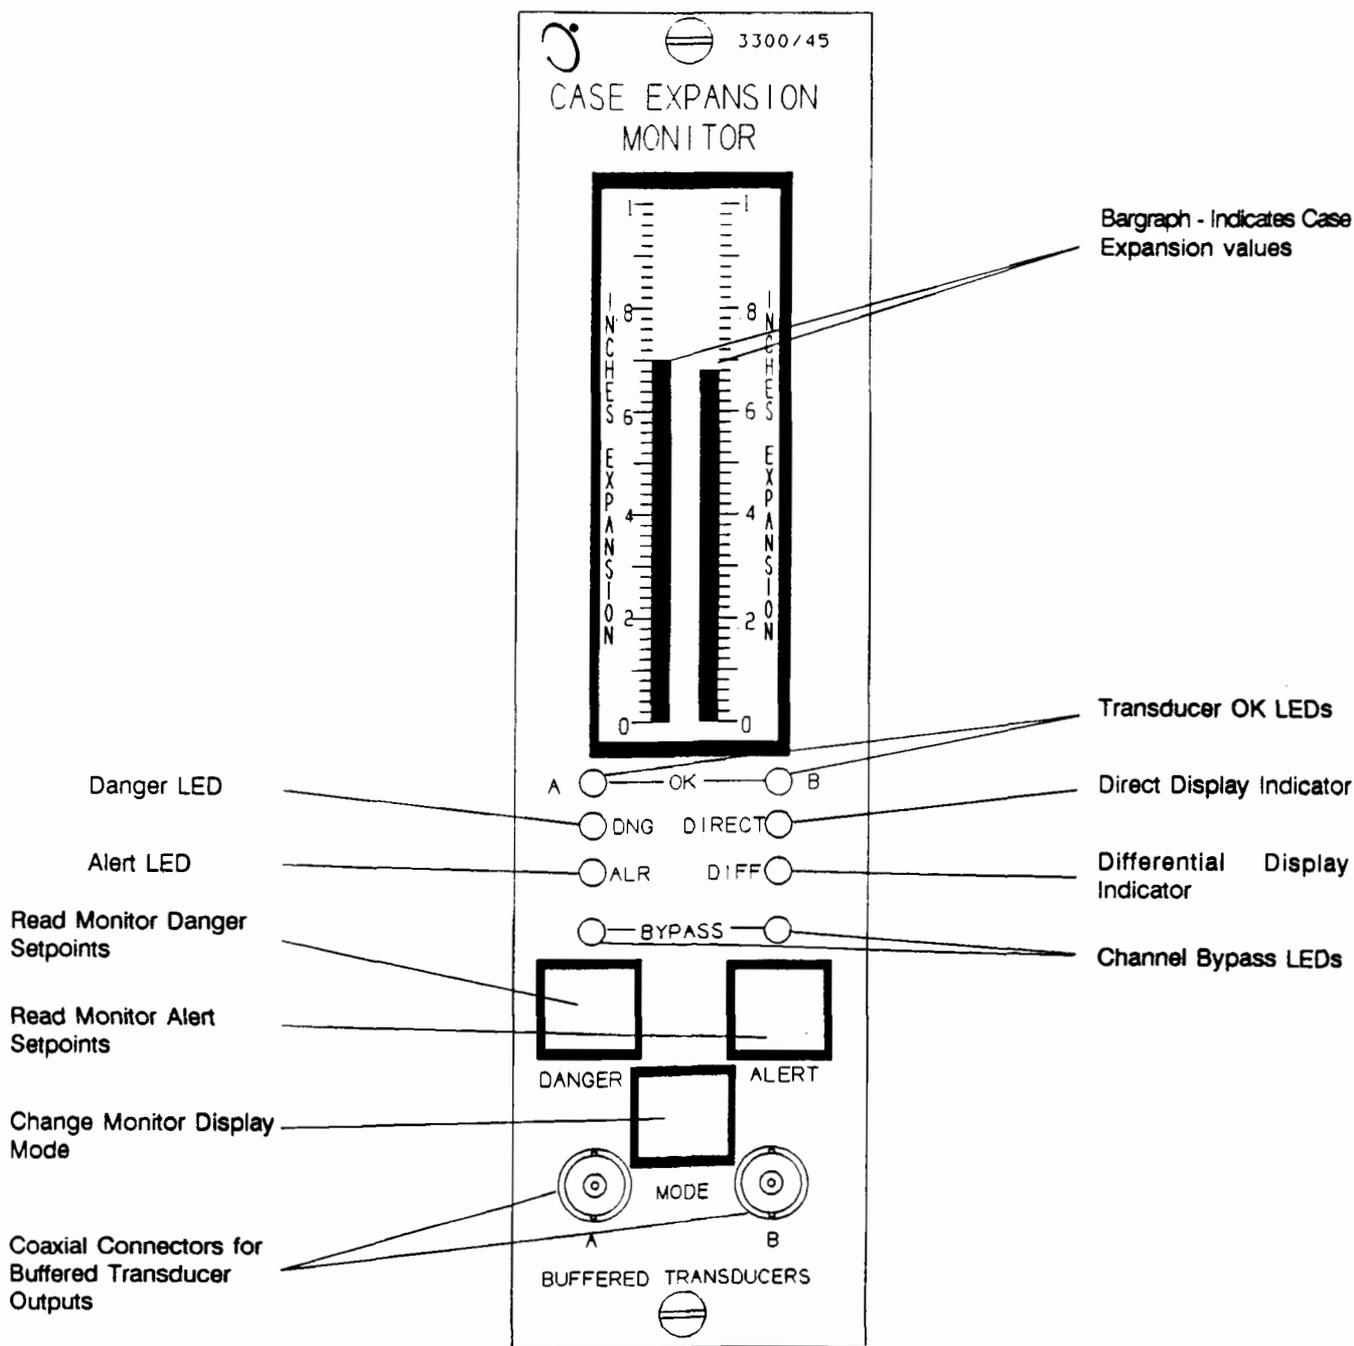


3

Monitor Removal

CAUTION

The machine is not protected when the monitor is removed from the rack.


1. Loosen two screws.
2. Pull monitor from rack.

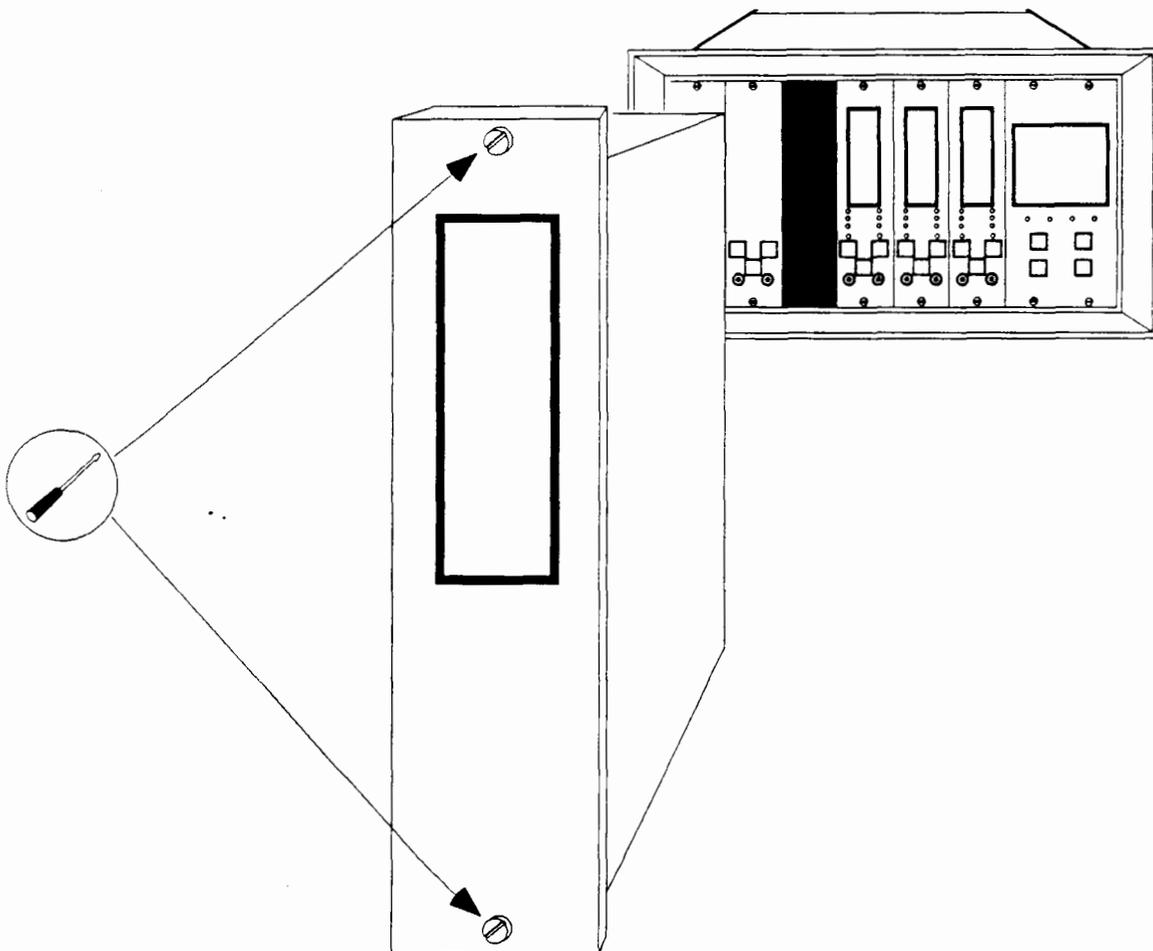

4 Monitor Disassembly


Side Cover Removal

Squeeze the retaining tips on each standoff, and remove the side cover from the monitor.

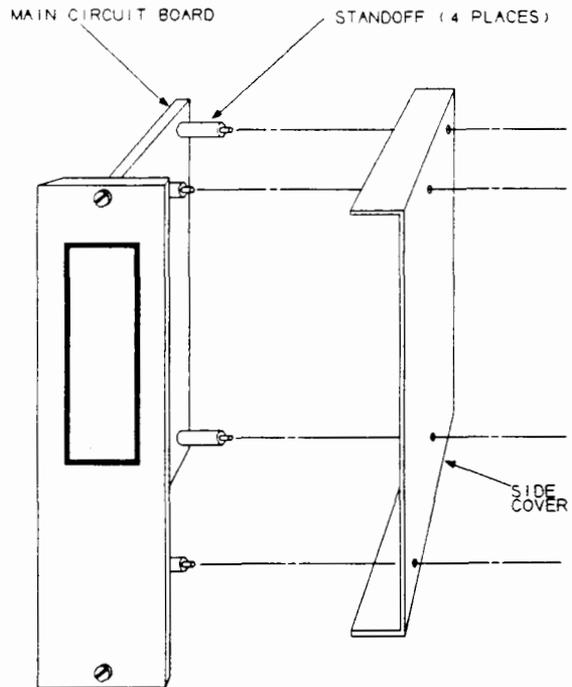


Circuit Board Removal

Squeeze the retaining tips on each standoff, and remove the expander board from the main board.

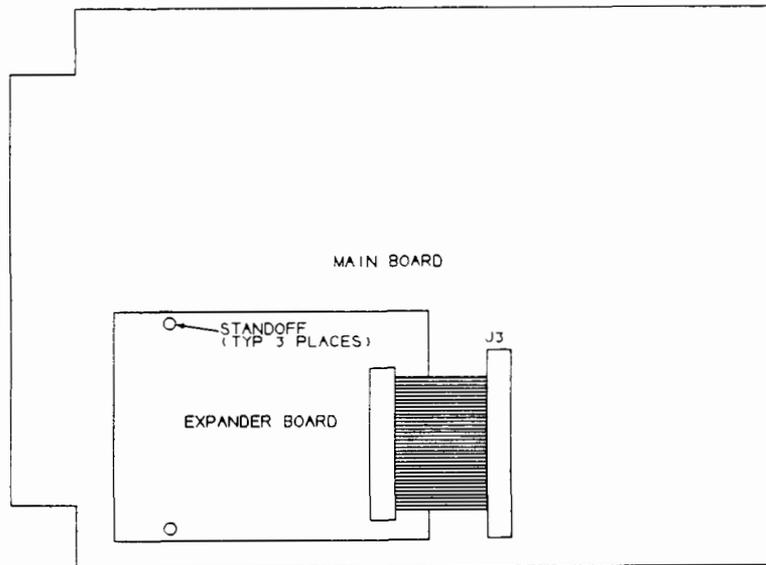

4 Monitor Disassembly [Cont]

Front Panel Removal

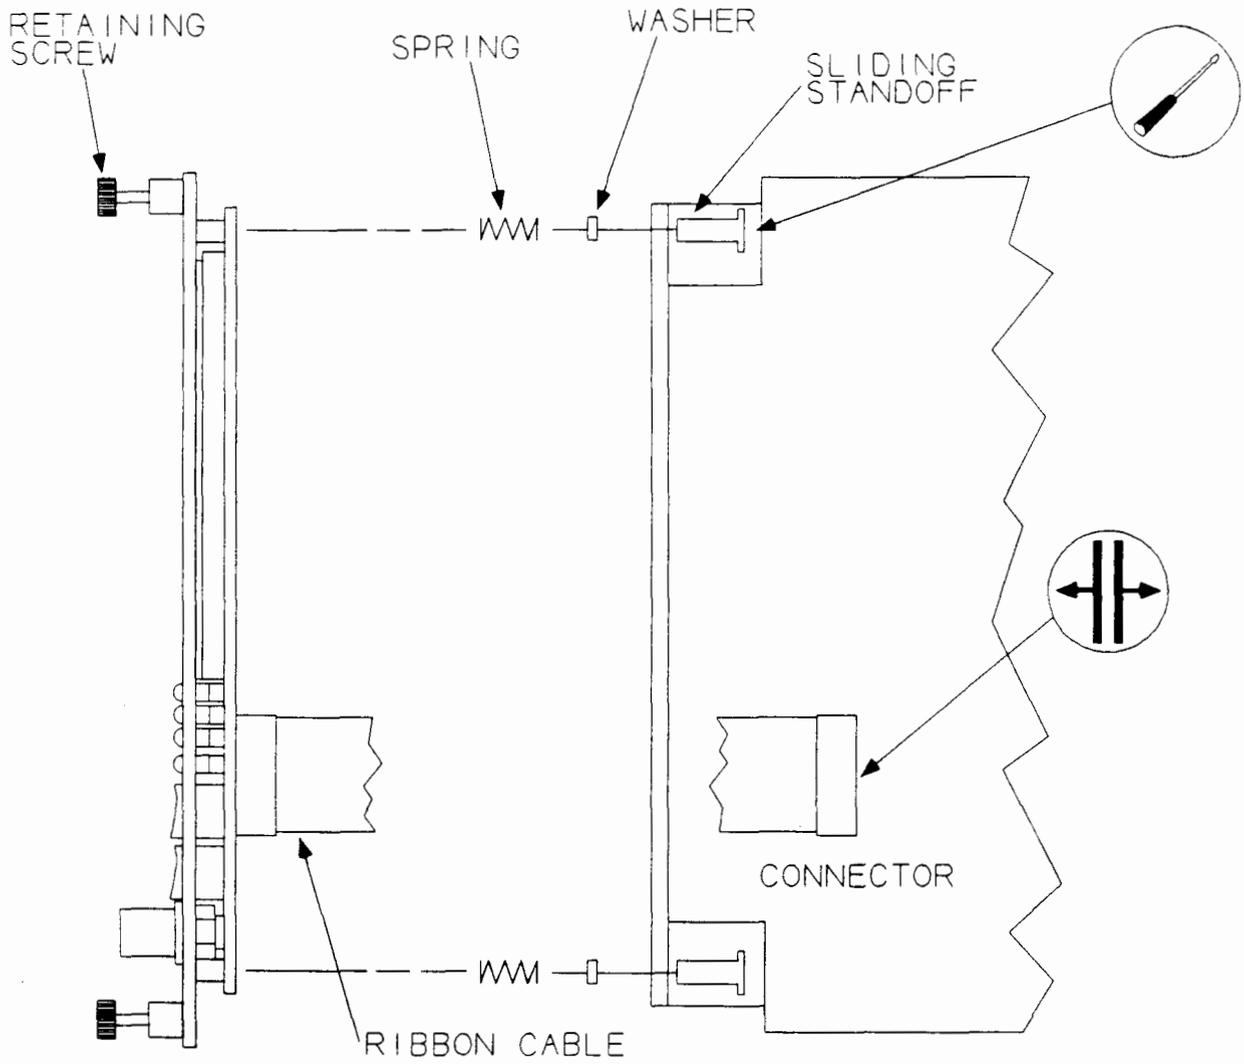

5 Signal Input Relay Module (Dual Relay)

⚠ WARNING


High Voltage present
Could cause shock, burns
or death.

Do Not touch exposed
wires or terminals.

The Signal Input Relay Module is on the back of the rack. For relay configuration, see Installation Manual. For field wiring, see Section 15 (Field Wiring Diagrams).


Module Removal

Loosen two screws and remove the module.

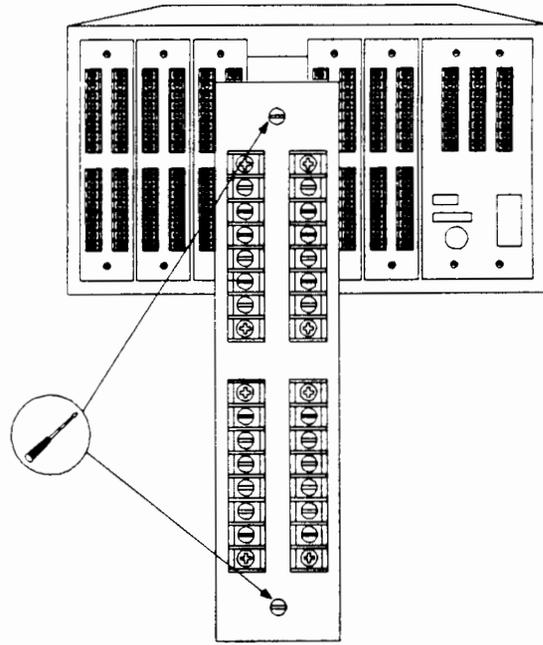


Module Options

Alert Relay	Jumper	
	In	Out
Normally Energized	W3	W4,W11
Normally De-energized	W4,W11	W3
Danger Relay	Jumper	
	In	Out
Normally Energized	W2	W1,W12
Normally De-energized	W1,W12	W2

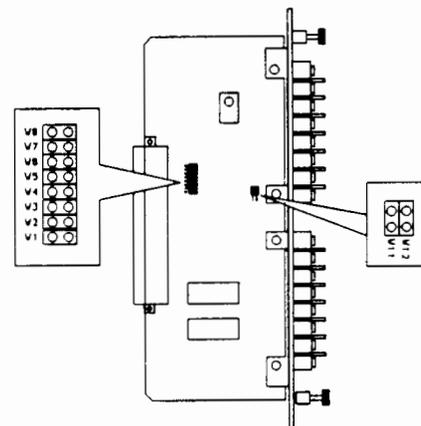


6 MONITOR OPTIONS

CASE EXPANSION
MONITOR PART NUMBER

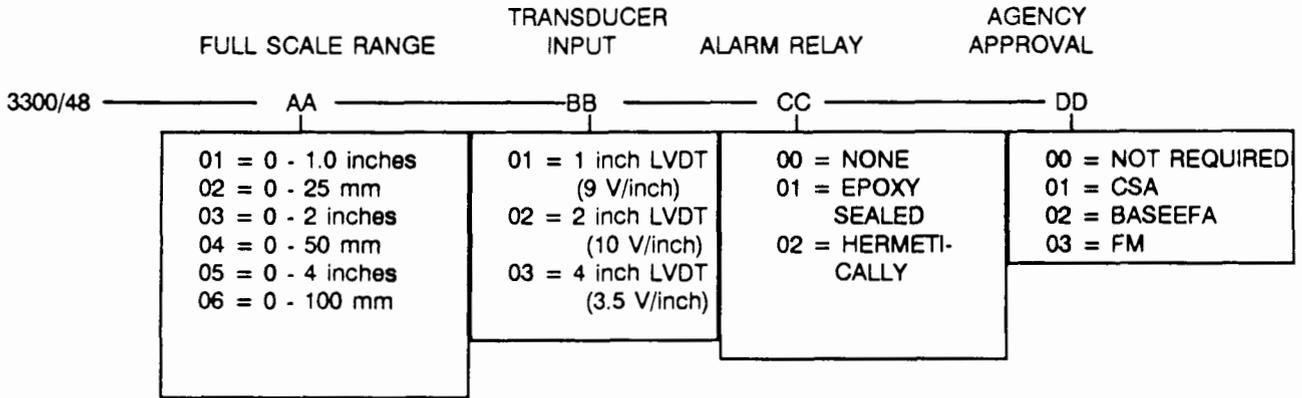

6 Monitor Options [Cont]

The Case Expansion Monitor has several user-programmable options. The options can be changed by removing and installing jumpers on the printed circuit boards.

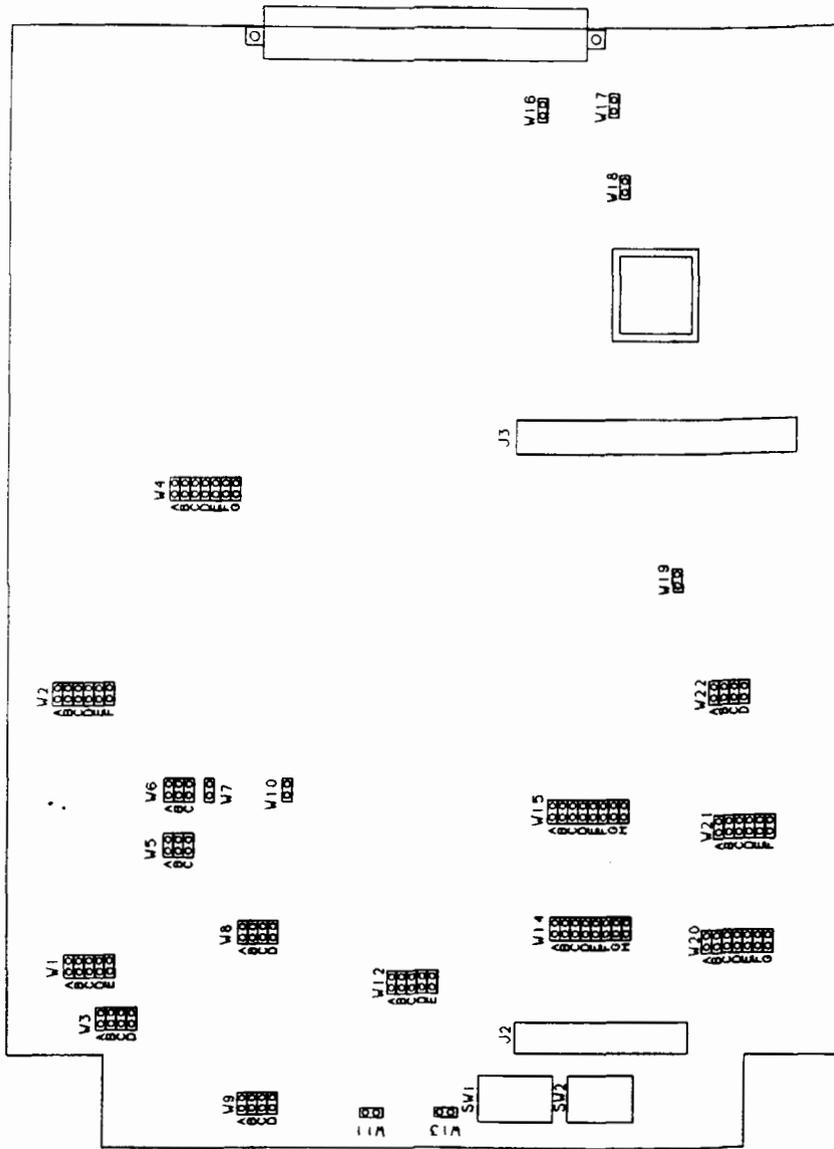

Jumper Locations on the Main Circuit Board

6 Monitor Options [Cont]

Main Board Option Settings

All monitor option jumpers for the Case Expansion Monitor are on the Main Board. Table 1 shows these options and their jumper positions.

Table 1 Option Settings on Main Board

Option	Setting	Jumper	
		Install	Remove
First Out	Enabled *	W14D	-----
	Disabled	-----	W14D
Not OK Mode	Latching	W15G	W21E
	Non-Latching *	-----	W15G
Alert Mode	Latching *	W14E	-----
	Non-Latching	-----	W14E
Danger Mode	Latching *	W14F	-----
	Non-Latching	-----	W14F
Danger Bypass Switch	Enabled	W12A	-----
	Disabled *	-----	W12A
Not Ok Channel Defeat	Enabled	W21E	W15G
	Disabled *	-----	W21E
Alarm Delay	0.1 Seconds	-----	W14A,B
	1 Seconds	W14B	W14A
	3 Seconds *	W14A	W14B
	6 Seconds	W14A,B	-----
Display Update	Slow	W21B	-----
	Fast *	-----	W21B
Channel B **	Off	W21F	-----
	On *	-----	W21F

* Options as shipped from factory
 ** When channel B is turned off, the monitor is a single channel indicator only.

6 Monitor Options [Cont]

Table 1 [continued]

Option	Setting	Jumper	
		Install	Remove
Upscale Channel A	Toward Transducer *W12C	-----	-----
	Away from Transducer-----	-----	W12C
Upscale Channel B	Toward Probe *	W12B	-----
	Away from Probe	-----	W12B

Note : Both channels must be configured in the same direction. An error code 22 will occur if both channels are not configured the same. See section 15.

Recorder Output Options

To set the recorder output, remove all jumpers from headers W1A-E, W2A-E, W3A-D, W5A-C, W6A-C, W8A-D, W9A-D, W14G AND W14H. Install jumpers specified in Table 2.

Table 2. Recorder Output Options

Recorder Output	+4 to +20 mA *	+1 to +5 Vdc	0 to -10 Vdc
Jumper Settings	W1B,C,E	W1A,D	W1A,D
	W2B,C,E	W2A,D	W2A,D
	W3A,D	W3A,D	W3B,C
	W5A	W5C	W5B
	W6A	W6C	W6B
	W8B,C	W8D	W8A
	W9B,C	W9D	W9A
		W14H	W14G

* Options as shipped from factory

Option	Setting	Jumper	
		Install	Remove
Recorder Mode	Differential *	W12E	-----
	Direct	-----	W12E

6 Monitor Options [Cont]

Transducer Type Options

To set the monitor up for the correct transducer type, remove all jumpers from headers W22A-D, W21C and D, W4A-F, W16 and W17. Install jumpers specified in Table 3.

Table 3. Transducer Type Options

Transducer Type	Install Jumpers
1 Inch LVDT, 9 V/Inch	W4C,F, W22B,D, W21C,D
2 Inch LVDT, 10 V/Inch	W4C,F, <u>W22B,C</u> , <u>W21C,D</u>
4 Inch LVDT, 3.5 V/Inch	W4C,F, W22B,C,D, W21C,D

Note : Changing the transducer type option requires re-calibration of both channels. See section 13.

Full Scale Range Options

To set the monitor full scale range option, remove jumpers W15A-E. Install jumpers specified in Table 4.

Table 4. Full Scale Range Options

Full Scale Range	Install Jumpers
0 - 1.0 Inches *	W15D,E
0 - 25 mm *	W15C,E
0 - 2.0 Inches **	<u>W15C,D,E</u>
0 - 50mm **	W15B,E
0 - 4.0 Inches ***	W15B,D,E
0 - 100 mm ***	W15B,C,E

Note : Changing the full scale range requires re-calibration of both channels. See section 13.

* Requires 1 Inch LVDT

** Requires 2 Inch LVDT

*** Requires 4 Inch LVDT


7

Meter Scale Replacement

The Monitor meter scales can be replaced for operation with different full scale ranges. The replacement meter scales are located in the back of this manual.

To replace a meter scale :

1. Set the monitor full scale range. (See section 6. Monitor Options)
2. Cut the meter scale from the back of this manual. Be sure to cut along the marked outline so the meter scale will fit properly.
3. Insert the meter scale in the front panel.

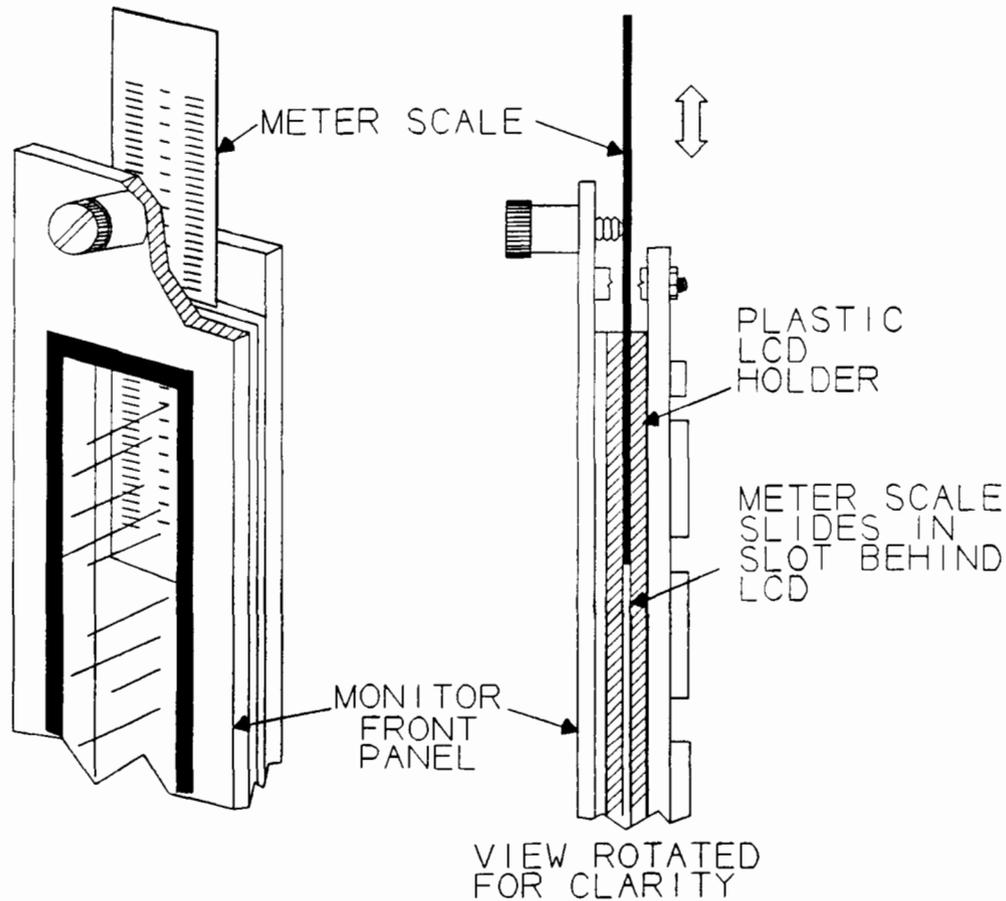


8 Alarm Setpoint Adjust

The 3300 Case Expansion Monitor has alarm setpoints for the differential values only. The alarm setpoints are adjusted on the left side of the display. To adjust the differential alarm setpoints, use the following procedure.

1. Open front panel.


2. Set switch AA (Adjust Alarms) to the left (ON). The bar graph will start flashing.

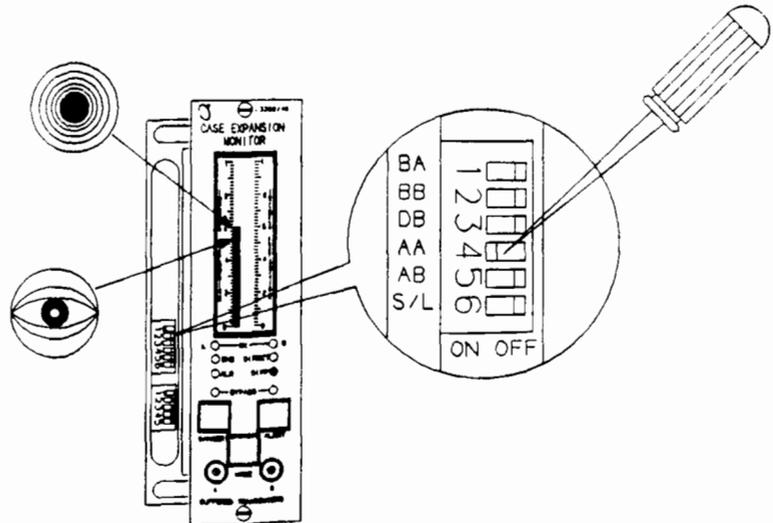

3. To adjust ALERT or DANGER set points, press and hold ALERT or DANGER switch on the front panel.

4. Use the (↑) or (↓) switches on the System Monitor to adjust the setpoint level up or down.

5. Reset AA to the right (OFF); close front panel.

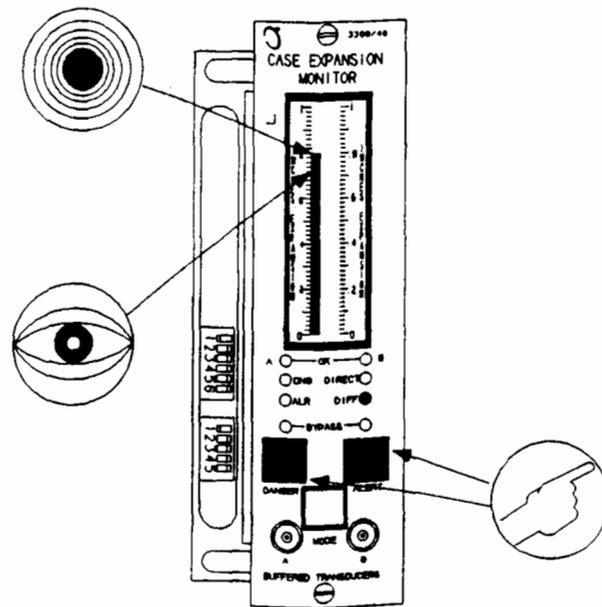

9 Bypass Monitor Channel


Set BA (Bypass Channel A) or BB (Bypass channel B) switch to the left (ON). The corresponding Bypass LED goes on, the OK LED goes off, and the Case Expansion reading is clamped to Zero. If either monitor channel is bypassed, the differential alarming is disabled. If the monitor is in the Differential mode, the display will go blank. The monitor must have two non-bypassed, OK transducers to display a differential value on the bar graph.

CAUTION

Machine Protection will be lost while Channel Bypass is on.

NOTE

When Channel Bypass is switched on, channel alarms are cleared.

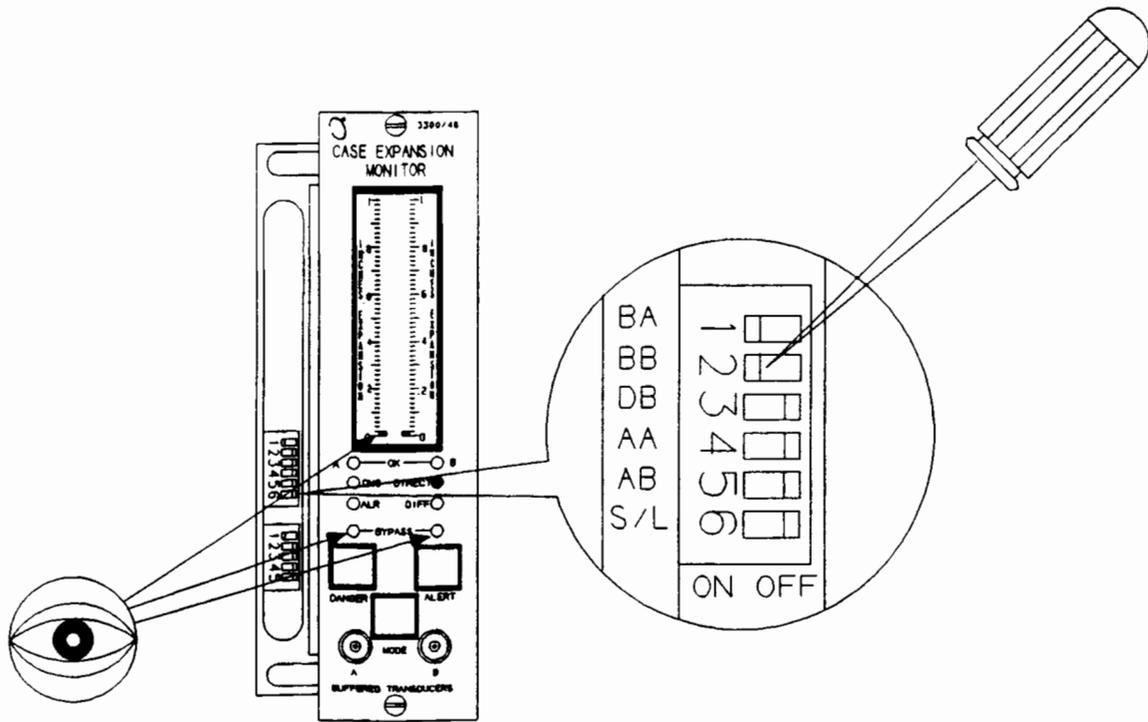

NOTE


When Channel Bypass is turned off, a ten second settling time is added to the alarm time delay.

10 Danger Bypass


Set DB (Danger Bypass) switch to the left (ON). Both channel Bypass LEDs go on. The Danger alarm LEDs on the front panel can go on but the danger relay drive will not be activated if a Danger Setpoint is exceeded.

CAUTION

Machine Protection will be lost while Danger Bypass is on.

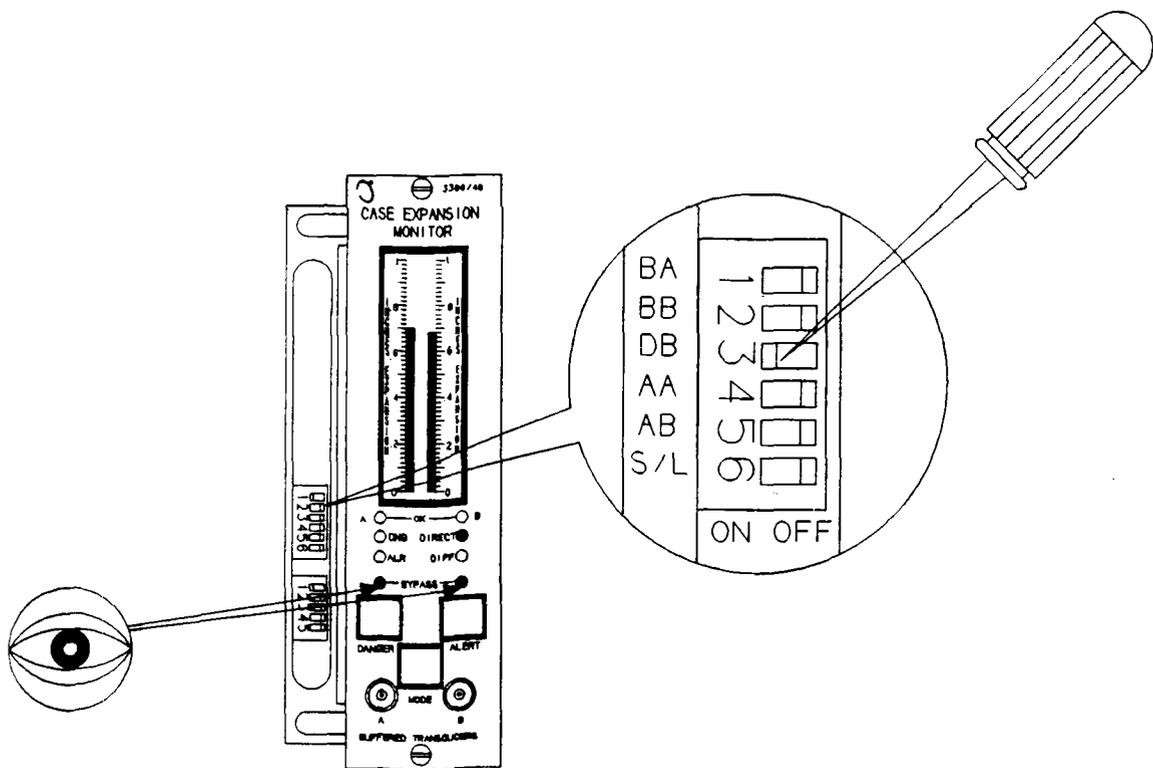

11 Test Channel Alarms

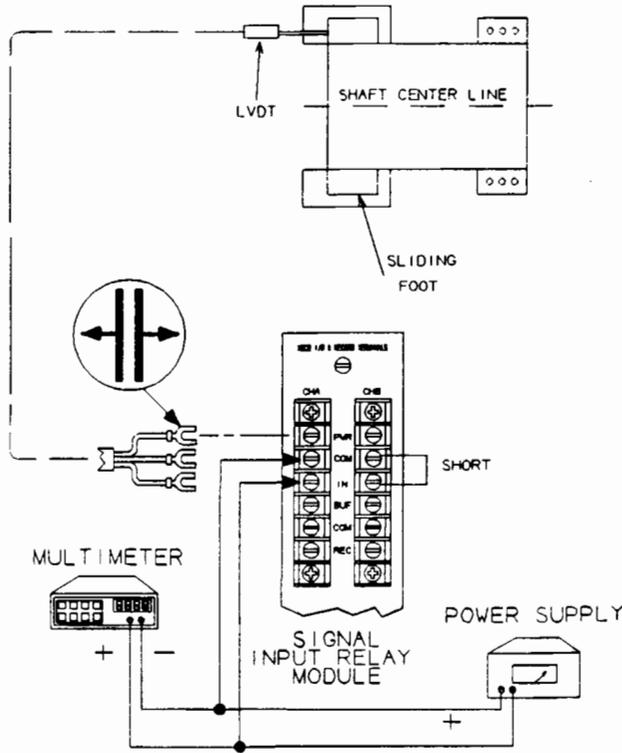

CAUTION

Tests will exceed alarm setpoint levels causing alarms to activate. This could result in relay contact to change state. See Danger Bypass section 10.


WARNING

High Voltage present
Could cause shock, burns
or death.

Do Not touch exposed
wires or terminals.


Note : The DC LVDT transducer outputs can swing both positive and negative. In order to simulate a bi-polar transducer swing it will sometimes be necessary to reverse the polarity of the power supply by swapping the test leads. Also, Alert and Danger alarms must be set below mid-scale for this test.

1. Disconnect COM and IN wiring from the channel A terminals on the Signal Input Relay Module.
2. Connect the multimeter and the power supply to channel A as shown.
3. Adjust the voltage for Zero (0.0) Vdc. Use the mode switch to put the monitor in the DIFF mode.
4. Press the RESET switch and verify the OK LEDs are on, and the ALERT and DANGER LEDs are off.

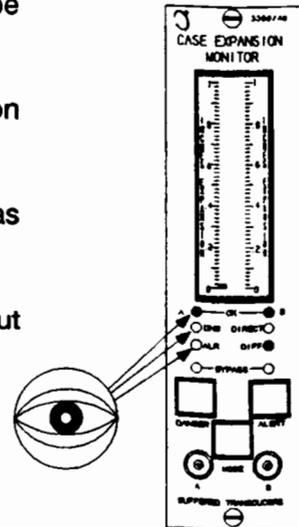


11 Test Channel Alarms

5. Adjust the power supply voltage past the alert setpoint level and verify that the ALERT LED goes on (Flashing if the first out option is selected). It may be necessary to switch the polarity at the power supply to exceed the setpoint.
6. Verify that the ALERT RELAY changed state.
7. Press the RESET switch on the system monitor and verify that the ALERT LED remains on steady.

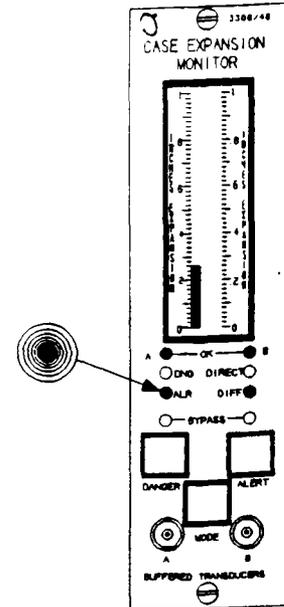


8. Adjust the power supply voltage past the DANGER setpoint level and verify that the DANGER LED goes on (Flashing if first out option is selected).
9. Verify that the DANGER Relay changed state. If DANGER "AND" voting logic is selected, the relay will not change states until both channels exceed their DANGER setpoints. "AND" voting is not active if either channel is bypassed; Also, the Relay will not change states if the Danger Bypass is on.

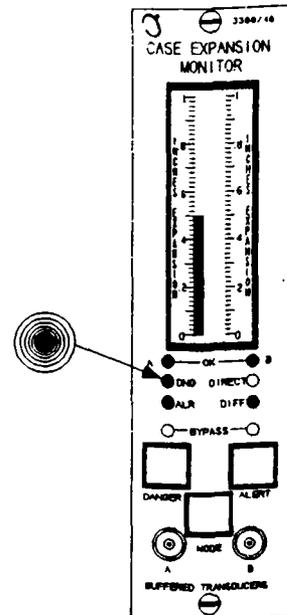


11 Test Channel Alarms [Cont]

10. Press RESET switch on system monitor. Verify that ALERT and DANGER LEDs remain on and steady.

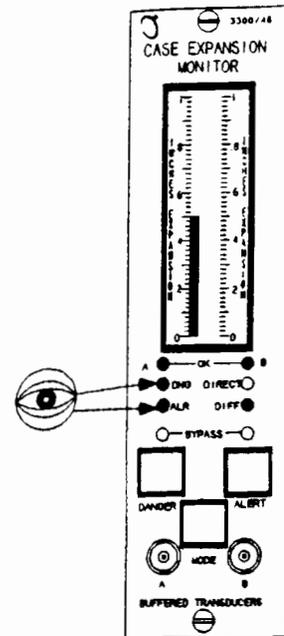

11. Reduce the power supply voltage to below the alarm set points and observe that the ALERT and DANGER LEDs go off (if non-latching alarm jumper is installed). Press RESET switch on system monitor to reset latching alarms.

12 Test OK Limits

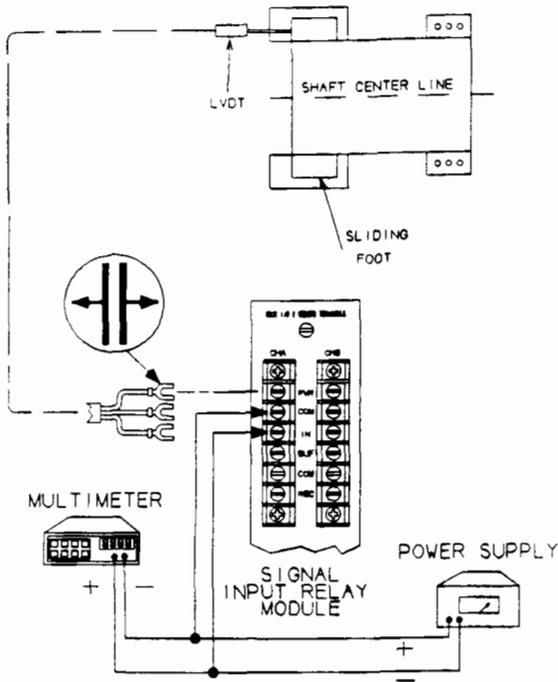

CAUTION


Tests will exceed alarm set point levels causing alarms to activate. This could result in relay contact to change state. See Danger Bypass section 10.

⚠ WARNING

High Voltage present
Could cause shock, burns or death.

Do Not touch exposed wires or terminals.

1. Disconnect COM and IN wiring from the channel A terminals on the Signal Input Relay Module.
2. Connect the multimeter and the power supply.
3. Adjust the power supply voltage for Zero Vdc.
4. Verify that the Channel A OK LED is on.
5. Increase the power supply voltage in the negative direction until the OK LED goes off (upper limit). Verify that the upper OK limit is within the limits specified in Table 5.
6. Verify that the OK relay changes state (de-energized). Note : all other channels in the rack must be OK or bypassed in order for the relay to change states.

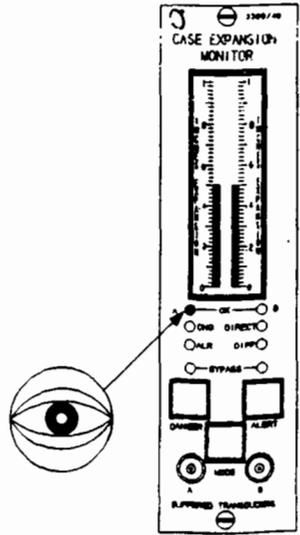

12 Test OK Limits [Cont]

7. Adjust the power supply to Zero Vdc. Verify that the OK LED comes back on and the OK relay energizes (if non-latching OK mode is selected). Press RESET switch on the system monitor to reset latching OKs.

8. Reverse the polarity of the power supply by switching the leads. Gradually increase the power supply voltage until the OK LED turns off (Lower Limit). Verify that the Lower OK Limit is within the limits specified in table 5.

9. Verify that the OK relay de-energizes.

10. When finished, disconnect the power supply and multimeter and reconnect COM and IN wiring to the channel A terminals on the Signal Input Relay Module. Verify that the OK LED comes on and the OK relay energizes (if non-latching OK mode is selected). Press RESET switch on the system monitor to reset latching OKs.


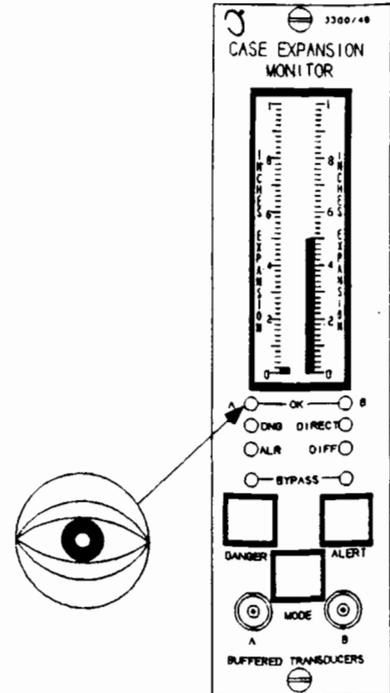


Table 5

Transducer	Lower OK Limit	Upper OK Limit
1 Inch LVDT	-5.65 to -6.05 Vdc	+5.65 to +6.05 Vdc
2 Inch LVDT	-12.80 to -13.20 Vdc	+12.80 to +13.20 Vdc
4 Inch LVDT	-8.90 to -9.30 Vdc	+8.90 to +9.30 Vdc

13 Calibrate Channels

Figure 1

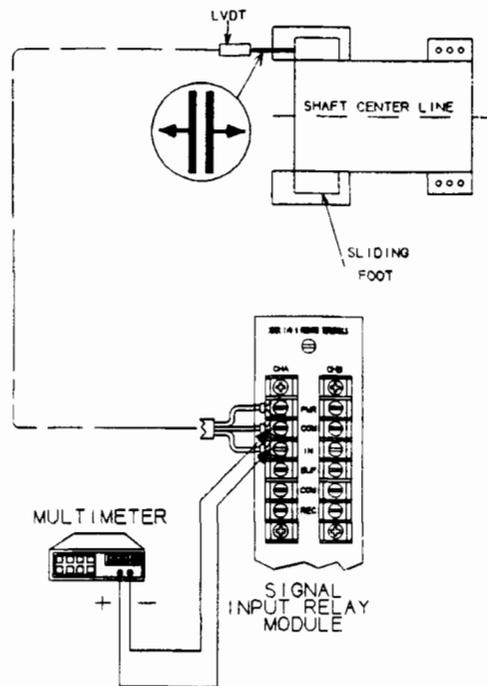

CAUTION

Both channels will be bypassed automatically during calibration. Machine Protection will be lost during calibration. See Danger Bypass section 10.

! WARNING

High Voltage present
Could cause shock, burns
or death.

Do Not touch exposed
wires or terminals.

Since the transducer sensitivity can vary as much as $\pm 20\%$, it is necessary to perform the channel calibration with the actual transducer to be used with that channel. The user may construct a gauging tool, if desired, to aid in accurately adjusting the LVDT core position during calibration.



1. Loosen and adjust the LVDT or core mounting components such that the core position can be adjusted manually throughout the entire indicator expansion measurement range.
2. Connect a multimeter to COM and IN with polarity as shown in Figure 1.
3. Open front panel.

13 Calibrate Channels [Cont]

4. Short calibration terminals (CA) using a clip lead (a jumper may be used if the monitor is on an extender card). A test pattern will appear on the display when the Calibration terminals are shorted and no Calibration switches are set. Both Bypass lights will come on.
5. Manually adjust the core position until the Digital Multimeter displays 0.00 Vdc.
6. Move the core of the LVDT as follows:
If the full scale expansion is toward the transducer, then move the core away from the transducer exactly half the full scale meter range. The transducer output voltage should be within the Zero range specified in Table 6 on page 24.

If the full scale expansion is away from the transducer, then move the core toward the transducer exactly half the full scale meter range. The transducer output voltage should be within the Zero range specified in Table 6 on page 24.


7. Activate the channel A zero adjust dipswitch (ZA) by moving it to the left. Measure the voltage at Test Point channel A (TA) using the multimeter. Press the MODE switch and use the (+) and (-) switches on the system card to adjust the voltage at TA to get $0.00 \pm 0.03\text{Vdc}$. Note the bypass light will indicate an under-range adjustment by flashing at a 5 Hz rate. If this happens back off the adjustment until the correct voltage is achieved and the bypass light is on steady.
8. De-activate the channel A zero adjust dipswitch (ZA) by moving it to the right. If the short is removed from the Calibration terminals before the dipswitch is deactivated, the adjustment will not be stored.

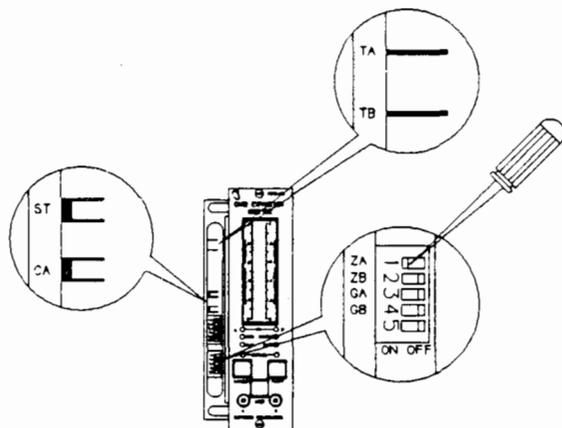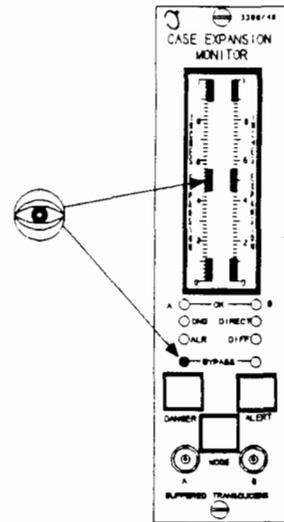

13 Calibrate Channels [Cont]


9. Move the core exactly the total linear distance of the full scale meter range in the upscale direction (opposite of direction of movement in step 6). The transducer output should be within the range indicated if Table 6 on page 24.

10. Activate the channel A gain adjust dipswitch (GA) by moving it to the left. The channel A bar graph will begin to flash. Measure the voltage at Test point channel A (TA) using the multimeter.

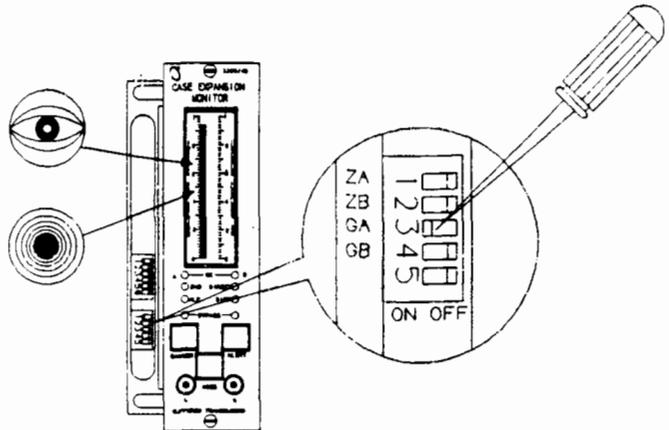

11. Press the MODE switch and use the system monitor (r) and (l) to adjust the gain until the Test point channel A (TA) is at $+5.0 \pm 0.05$ Vdc and the bypass LED is on steady (not flashing). The flashing bypass LED indicates an over-range condition. If this occurs, reduce the gain using the system monitor (l) switch.

12. De-activate the channel A gain adjust switch (GA) by moving it to the right. If the short is removed from the Calibration terminals (CA) before the dipswitch is de-activated, the adjustment will not be stored.

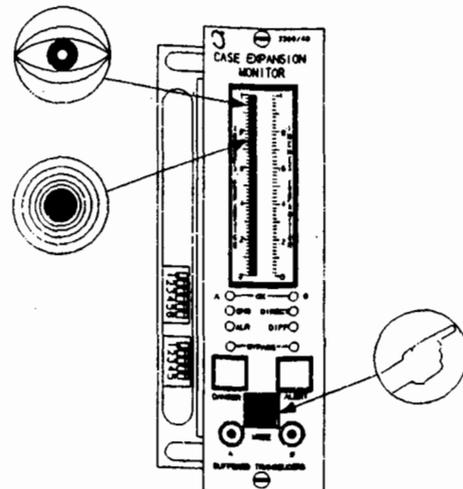

13. Remove the clip lead (or jumper) from the Calibration terminals (CA).

14. After the monitor channel is calibrated, the case expansion transducer must be reinstalled and adjusted to indicate zero expansion when the machine case is cold.

13 Calibrate Channels [Cont]

Table 6

Transducer	Zero Voltage		Full Scale Voltage	
	Toward Transducer	Away from Transducer	Toward Transducer	Away from Transducer
1 Inch LVDT	-3.6 to -5.4 Vdc	+3.6 to +5.4 Vdc	+3.6 to +5.4 Vdc	-3.6 to -5.4 Vdc
2 Inch LVDT	-4.0 to -6.0 Vdc	+4.0 to +6.0 Vdc	+4.0 to +6.0 Vdc	-4.0 to -6.0 Vdc
4 Inch LVDT	-2.8 to -4.2 Vdc	+2.8 to +4.2 Vdc	+2.8 to +4.2 Vdc	-2.8 to -4.2 Vdc


Note : If upscale direction selected is toward transducer, use the zero and full scale values under the "Toward Transducer" columns.

If upscale direction selected is away from transducer, use the zero and full scale values under the "Away from Transducer" columns.

14 Self Test

The three levels of self tests are

- power-up - performed only when the monitor is turned on
- cyclic - continuously performed by the monitor
- user-invoked - performed only when initiated by the user.

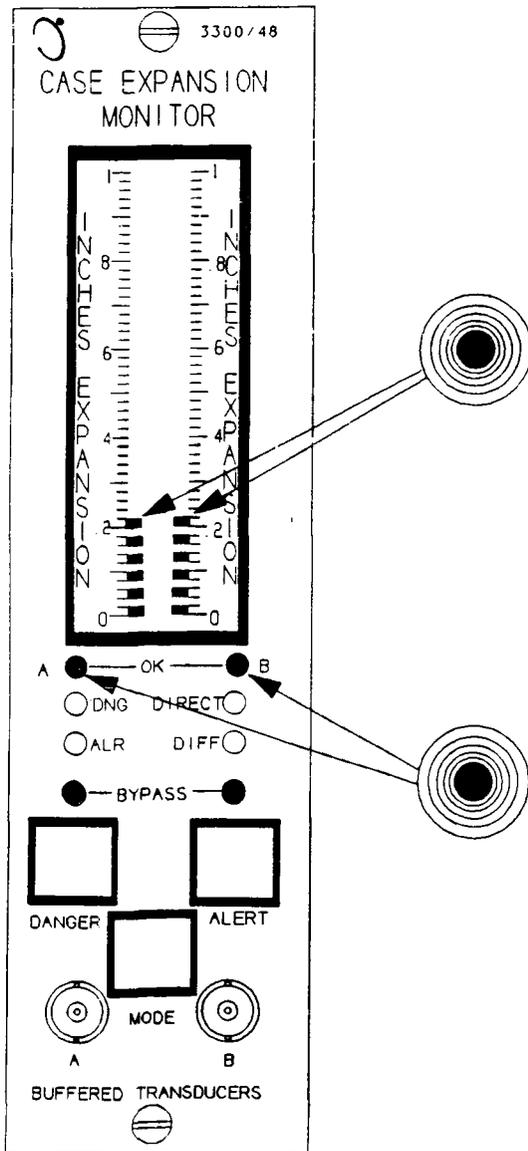

The monitor on this page is giving a signal that a continuing error has been detected during a self test. When a continuing error is detected,

monitoring is stopped until the error is resolved,


the error code is flashed on the LCD bar graph and stored in memory,

the Bypass LED comes on and the OK LED flashes at 5 Hz.

If the error goes away, monitoring is resumed and the OK LEDs flash at 5 Hz. The error code, however, remains stored in the monitor and may be read by using the user-invoked self test.

14 Self Test [Cont]

Follow these steps to read the error codes that have been stored in the monitor:

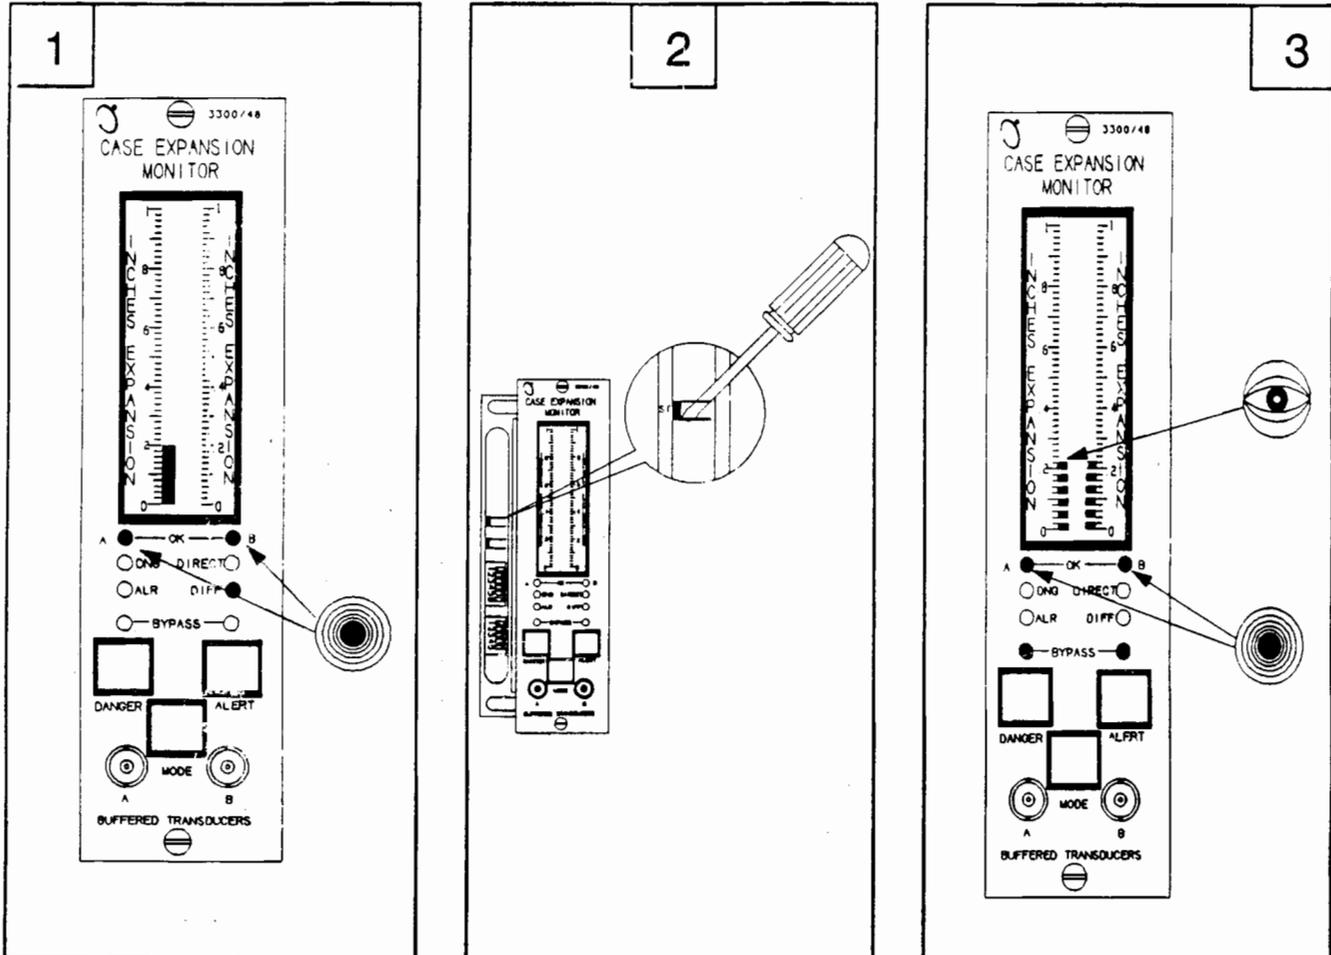

1

Flashing OK LEDs show that error codes are stored in the monitor.




2

Initiate the user-invoked test by shorting across the self-test pins behind the panel. The self-test pins are labeled ST on the inner panel.

3

The first error code is displayed on the bar graph. Read the code by counting the number of bars on one side. Error code number 6 is displayed on this monitor.

14 Self Test [Cont]

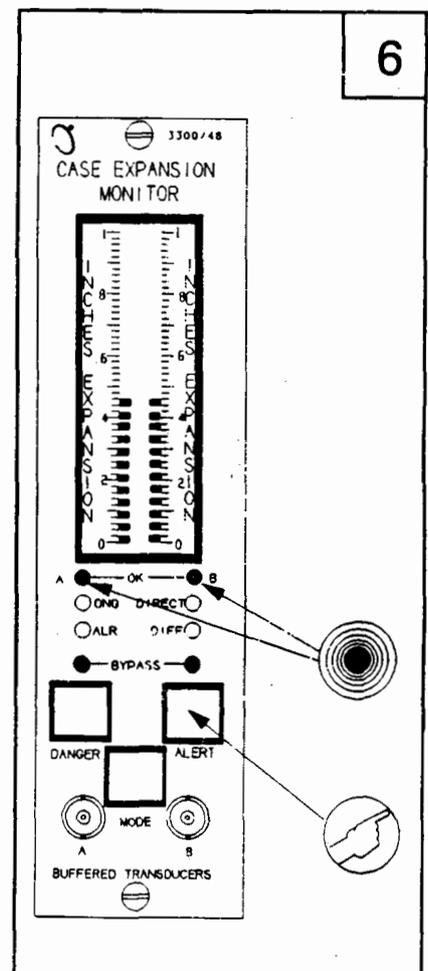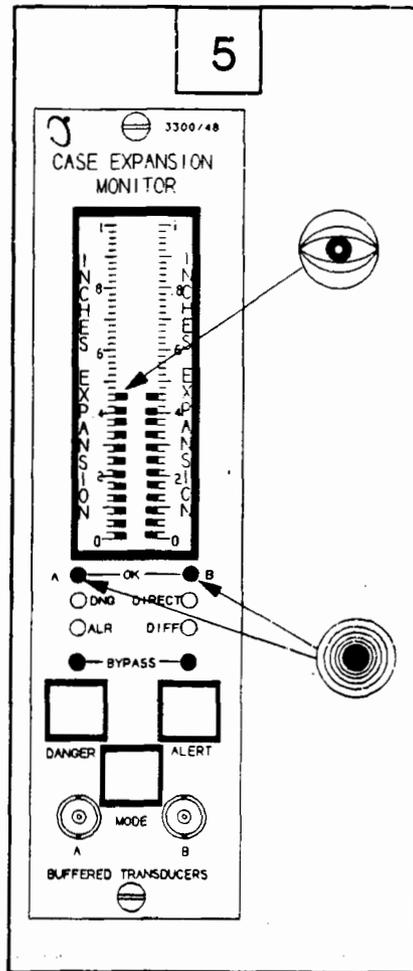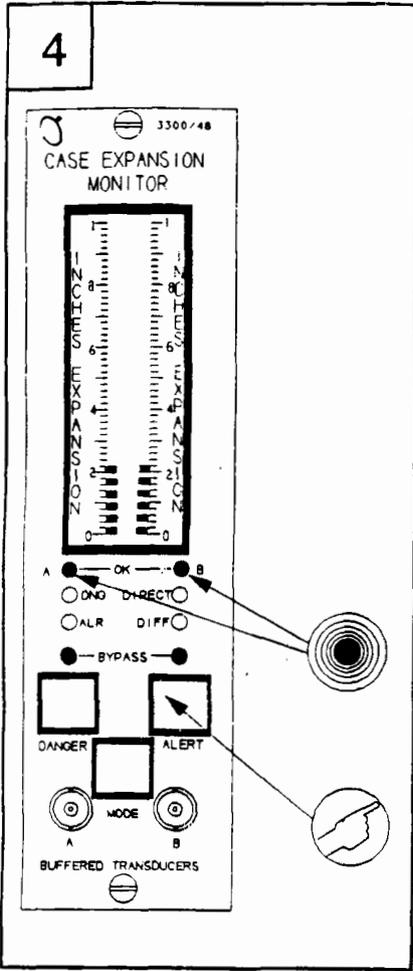

4

Press and hold the ALERT switch for 1 second to toggle to the next error code.




5

Read the second stored error code. This bar graph is displaying error code 12.

6

Read through all the other stored codes by pressing and holding the ALERT switch one second.

14 Self Test [Cont]

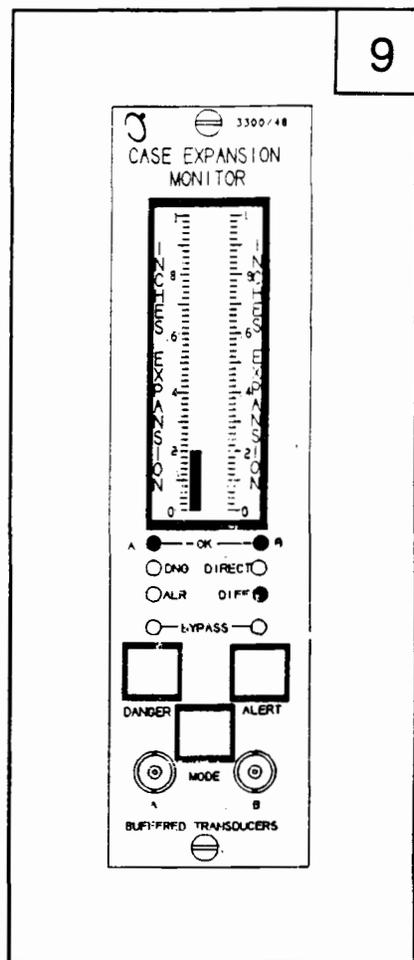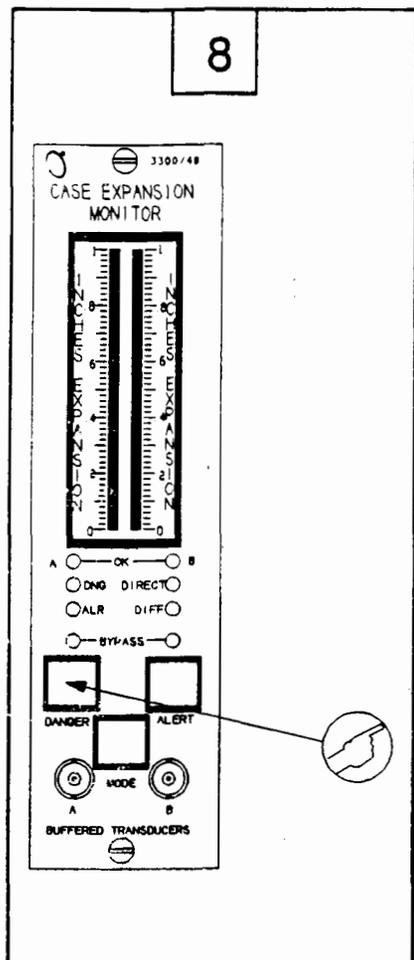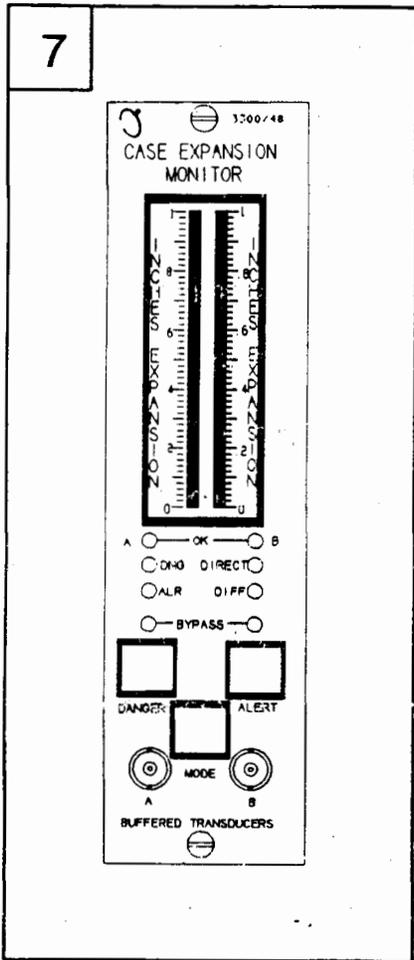

7

All codes have been read when the bar graph LCD comes on at full range of scale.


8

Press the DANGER switch to reset the monitor or Press the ALERT switch to reread the list.

9

After the monitor is reset, the error codes are removed from memory and the monitor begins operating again.

14 Self Test [Cont]

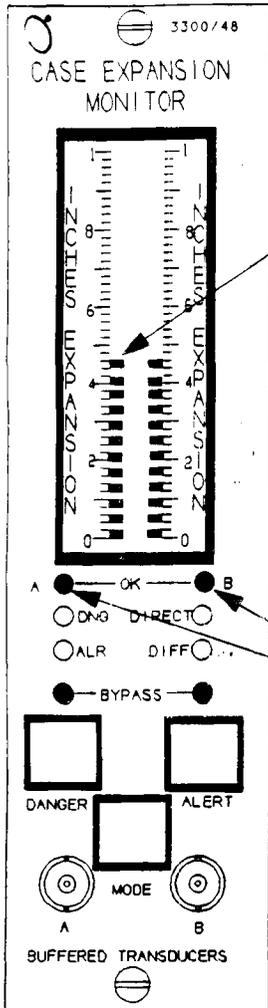

Error Code	Description
2	ROM CHECKSUM has failed. *
3	EEPROM failure number 1. **
4	EEPROM failure number 2. *** Adjust set points
5	+7.5V/-VT node out of tolerance. **
6	+VRH node out of tolerance. **
7	+5V node out of tolerance. **
8	MVREF node out of tolerance. **
9	+7.5V node out of tolerance. **
10	+VRL node out of tolerance. **
12	+5V/-7.5V node out of tolerance. **
14	RAM failure. *
17	COP Watchdog not configured.
18	+5V/-5V or +15V node out of tolerance. **
21	Incorrect switch or switch combination. ****
22	Incorrect jumper configuration. *

* Tested only at Power Up or User Invoked Self Test. This error is displayed on the front panel but is not stored in memory.


** Tested only at Cyclic Self Test. Errors 2, 3, and 14 are non-recoverable and errors 5 through 13 could be intermittent and recoverable.

*** Error 4 is a setpoint failure and may be corrected by adjusting all setpoints in the monitor.

**** Tested only when monitor is in calibration mode.

15 Field Wiring Diagram

3300/45 FIELD WIRING

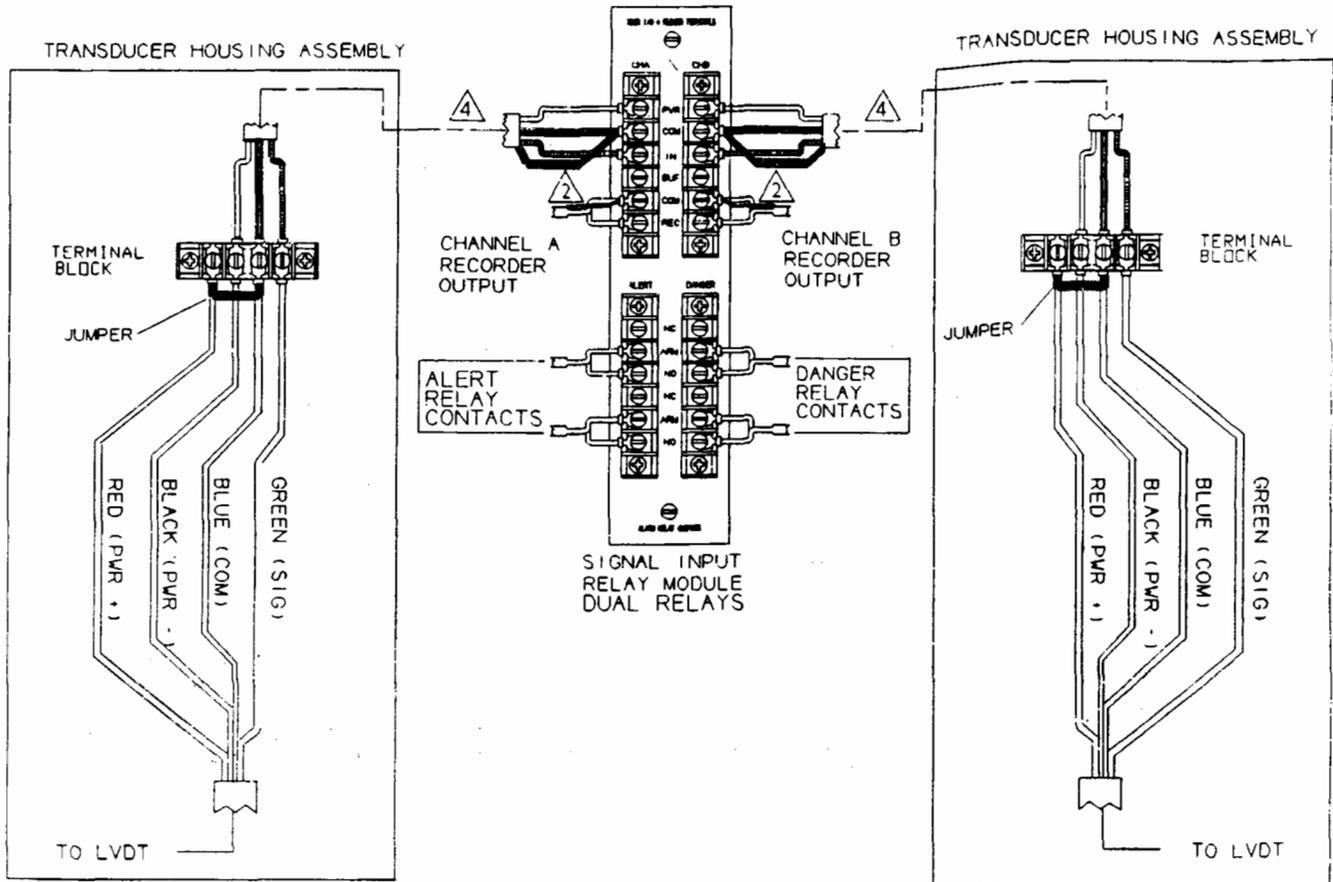

1. Wiring Recommendations:

- a. Signal Module to LVDT, 18 to 22 AWG solid or stranded 3 - wire shielded with insulating sheath. 1000 feet (305 metres) maximum.
- b. Signal Module to Recorder, 18 to 22 AWG solid or stranded 2 - wire shielded with insulating sheath.

2. Shields terminated to Signal Module Common.


3. To minimize ground loop noise problems, a single point earth ground (GND) to system common (COM) connection is recommended.

4. Maximum cable length between Signal Input Relay Module and LVDT must not exceed 1000 feet (305 metres).

16 Recommended Spare Parts

Qty	Description	Part Number
	Case Expansion Monitor	3300/48 - <input type="text"/> - <input type="text"/> - <input type="text"/> - <input type="text"/>
1	Front Panel PWA Assembly	84132-01
1	Monitor Circuit Assembly	82803-01
1	Expander Board PWA	84110-01
1	Signal Input Relay Module	
	No Relays	81544-01 <input type="text"/> <input type="text"/>
	Epoxy Sealed Relays	81545-01 <input type="text"/> <input type="text"/>
	Hermetically Sealed Relays	81546-01 <input type="text"/> <input type="text"/>

To order replacement parts, specify the complete part number according to this table as indicated on the identification decal. If the monitor has been modified, specify the modification number on the parts order. User must set programmable options (Reference section 7 of this manual). If in doubt about the part number, call your Bently Nevada Corporation representative before ordering.

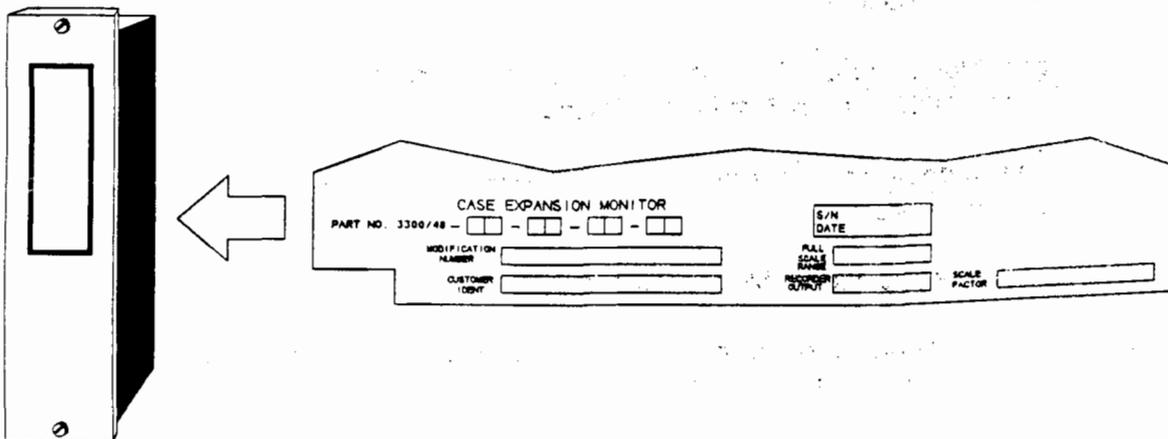

17**Specifications****INPUTS**

Signal Inputs: Two channels LVDT input, 230K Ohm input impedance.

Signal Scale Factors: 9V/inch (0.35V/mm) - 1 Inch LVDT
10V/inch (0.39V/mm) - 2 Inch LVDT
3.5V/inch (0.14V/mm) - 4 Inch LVDT

SIGNAL CONDITIONING

Monitor Range: Full scale meter range selected per Option Table.

Accuracy: $\pm 0.33\%$ of full scale error typical at $+77^{\circ}\text{F}$ ($+25^{\circ}\text{C}$).
 $\pm 1\%$ of full scale error maximum at $+77^{\circ}\text{F}$ ($+25^{\circ}\text{C}$).

ALARMS

Alarm Set Points: Alert/Danger alarm levels (adjustable from 0 to 100% of full scale).

Alarm Delay: Alarm delay times are user-programmable per options.

DISPLAYS

Meter: LCD bar graph, dual scale with outside scales marked per monitor full scale range. Bargraph resolution is 1.6% of full scale.

LEDs: Green LEDs annunciate transducer OK condition and monitor mode, red LEDs annunciate DANGER alarm, ALERT alarm, and BYPASS conditions.

CONTROLS

Front Panel: Front panel switches (3) for reading ALERT and DANGER setpoint levels, and MODE for changing between direct and differential modes.

Internal: Switches on circuit board for setpoint adjustment, Danger Bypass, Channel Bypass, and Calibration functions.

External: External remote controls: Reset, Inhibit, and SetPoint and Calibration Adjust (\uparrow and \downarrow).

OUTPUT

Recorder: Output proportional to selected full scale monitor range and protected against continuous short circuit to ground:
+4 mA to +20 mA, +12 Vdc compliance.
+1 Vdc to +5 Vdc, 100 Ohm output impedance.
0 Vdc to -10 Vdc, 100 Ohm output impedance.

Transducer Power: -24 Vdc or -18 Vdc per option selected in power supply. Output is short circuit protected.

Alarms and OK: Relay drives for ALERT, DANGER, and system OK.

RELAY CONTACT RATINGS

Dual Relays: 5 A @ 120 Vac 50/60 Hz.
 5 A @ 28 Vdc.

ENVIRONMENTAL

Temperature: Operating +32°F to +149°F (0°C to +65°C).
 Storage -40°F to +185°F (-40°C to +85°C).

Humidity: 0 to 95%, non-condensing.

	INDEX
--	-------

Adjust Alarm Setpoints	14
Alarm Delay	10
Alert	2
Alert Alarm	2
Alert Mode	10
Alert Relay	6,7
Alert Setpoints	2
Bar graph	2
Buffered Transducer Output	2
Calibrate Channels	22
Calibration Terminology	22
Channel B Off	10
Channel Bypass	2, 15
Circuit Board Removal	4
Danger	2
Danger Alarm	2
Danger Bypass	10,16
Danger Mode	10
Danger Relay	6,7
Danger Setpoints	2
Display Update Rate	10
Dual Relay Module	6
Field Wiring	30
First Out	10
Front Panel Removal	5
Full Scale Range Options	12
Main Board Option Settings	10
Meter Scale Replacement	13
Monitor Part Number	8
Monitor Removal	3
Not OK Channel Defeat	10
Not OK Mode	10
OK	2
OK LED	2
Part Number	8
Recorder Output Options	11
Relay Module	6,7
Relay Module Options	6,7
Relay Module Removal	6,7
Replacement parts	31
Side Cover Removal	4
Signal Input Relay Module	6,7

INDEX

Spare Parts 31

Specifications 32,33

Test Channel Alarms 17

Test OK Limits 20

Transducer Type Options 12

Upscale Channel A 11


Upscale Channel B 11

User-programmable options 9

Wiring Recommendations 31


APPENDIX

SCHEMATICS AND PWA DRAWINGS

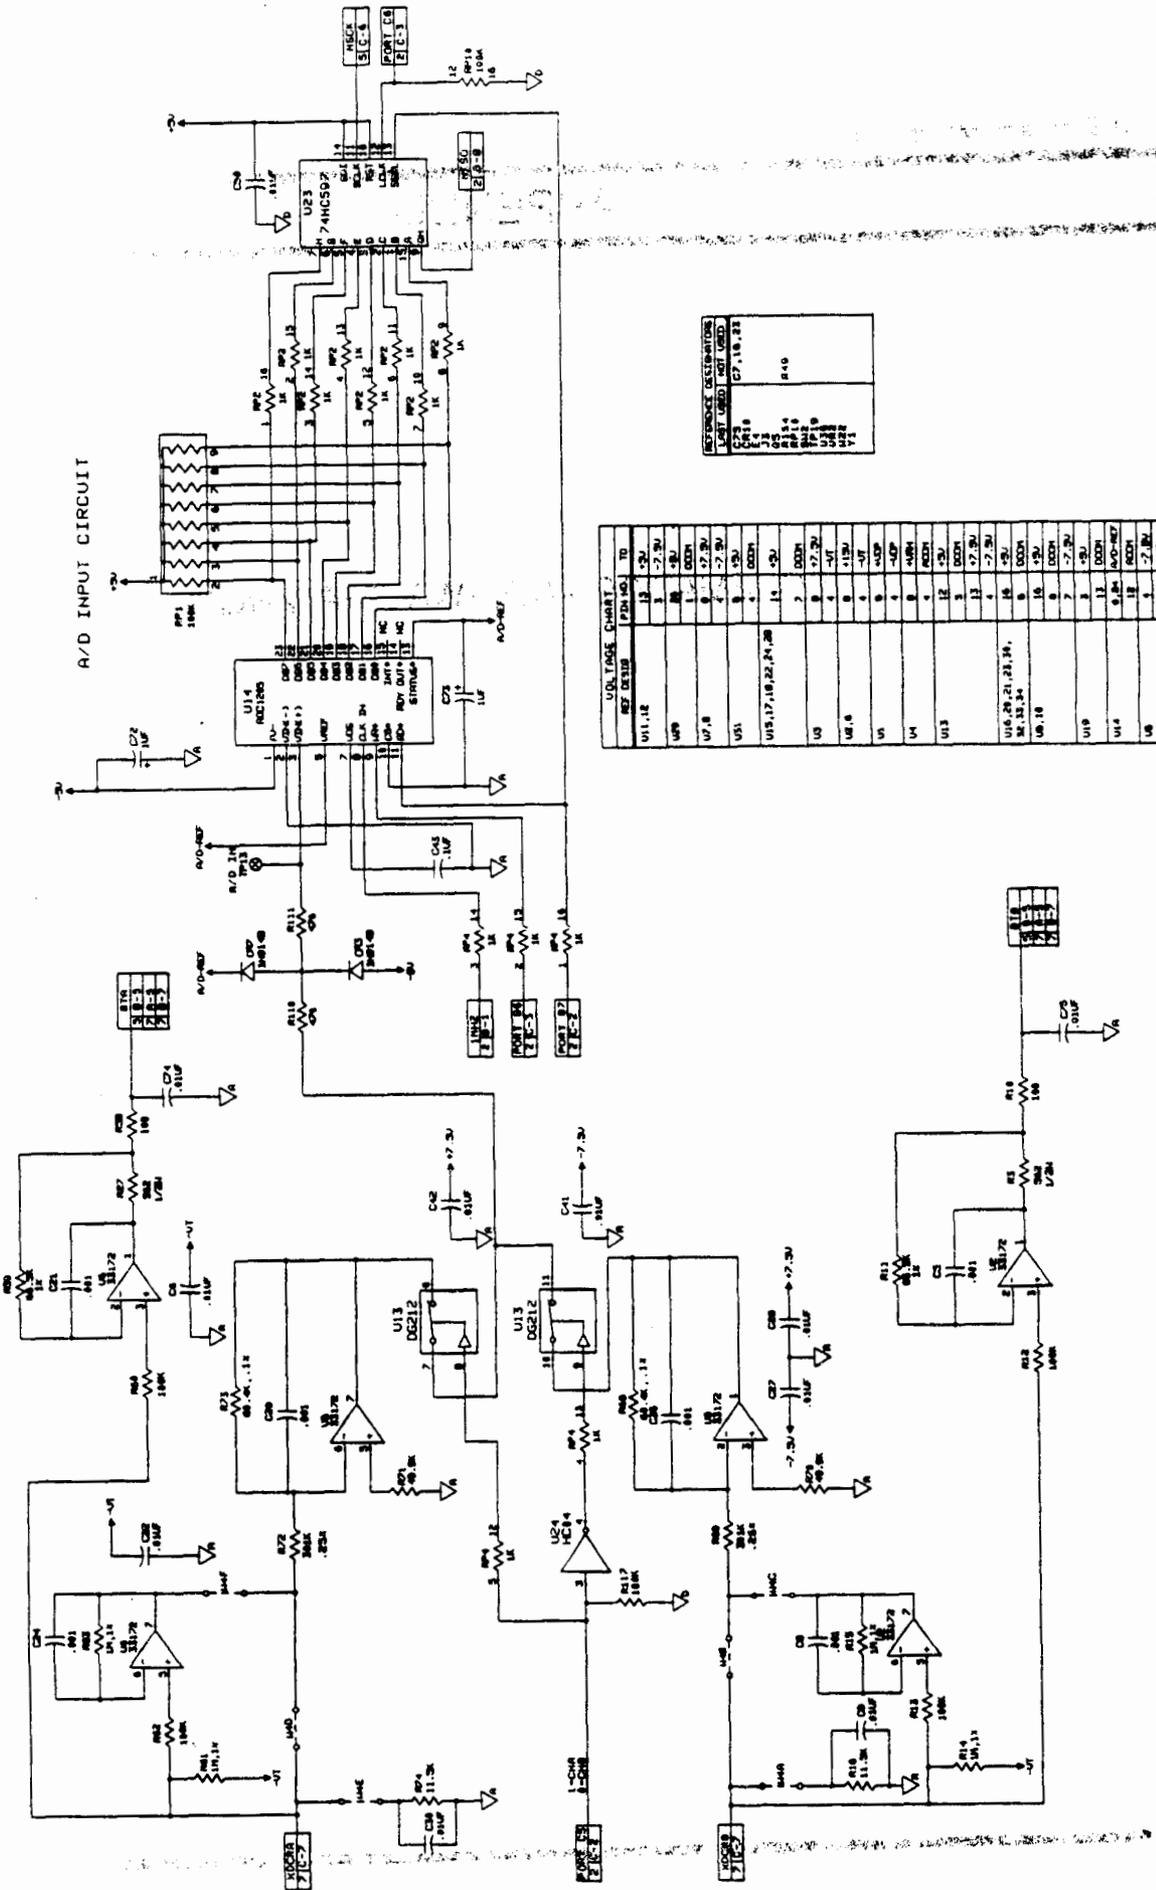


U/I	VALUE	QTY	REF. DESIG.	TO
U11,12	74147	2	74147	1
U13	74148	1	74148	1
U14	74149	1	74149	1
U15,17,18,22,24,28	74138	1	74138	1
U16	74145	1	74145	1
U19	74145	1	74145	1
U20	74145	1	74145	1
U21	74145	1	74145	1
U22	74145	1	74145	1
U23	74HC595	1	74HC595	1
U24	74145	1	74145	1
U25	74145	1	74145	1
U26	74145	1	74145	1
U27	74145	1	74145	1
U28	74145	1	74145	1
U29	74145	1	74145	1
U30	74145	1	74145	1
U31	74145	1	74145	1
U32	74145	1	74145	1
U33	74145	1	74145	1
U34	74145	1	74145	1
U35	74145	1	74145	1
U36	74145	1	74145	1
U37	74145	1	74145	1
U38	74145	1	74145	1
U39	74145	1	74145	1
U40	74145	1	74145	1
U41	74145	1	74145	1
U42	74145	1	74145	1
U43	74145	1	74145	1
U44	74145	1	74145	1
U45	74145	1	74145	1
U46	74145	1	74145	1
U47	74145	1	74145	1
U48	74145	1	74145	1
U49	74145	1	74145	1
U50	74145	1	74145	1
U51	74145	1	74145	1
U52	74145	1	74145	1
U53	74145	1	74145	1
U54	74145	1	74145	1
U55	74145	1	74145	1
U56	74145	1	74145	1
U57	74145	1	74145	1
U58	74145	1	74145	1
U59	74145	1	74145	1
U60	74145	1	74145	1
U61	74145	1	74145	1
U62	74145	1	74145	1
U63	74145	1	74145	1
U64	74145	1	74145	1
U65	74145	1	74145	1
U66	74145	1	74145	1
U67	74145	1	74145	1
U68	74145	1	74145	1
U69	74145	1	74145	1
U70	74145	1	74145	1
U71	74145	1	74145	1
U72	74145	1	74145	1
U73	74145	1	74145	1
U74	74145	1	74145	1
U75	74145	1	74145	1
U76	74145	1	74145	1
U77	74145	1	74145	1
U78	74145	1	74145	1
U79	74145	1	74145	1
U80	74145	1	74145	1
U81	74145	1	74145	1
U82	74145	1	74145	1
U83	74145	1	74145	1
U84	74145	1	74145	1
U85	74145	1	74145	1
U86	74145	1	74145	1
U87	74145	1	74145	1
U88	74145	1	74145	1
U89	74145	1	74145	1
U90	74145	1	74145	1
U91	74145	1	74145	1
U92	74145	1	74145	1
U93	74145	1	74145	1
U94	74145	1	74145	1
U95	74145	1	74145	1
U96	74145	1	74145	1
U97	74145	1	74145	1
U98	74145	1	74145	1
U99	74145	1	74145	1
U100	74145	1	74145	1


Case Expansion Monitor Schematic Sheet (1 of 11)

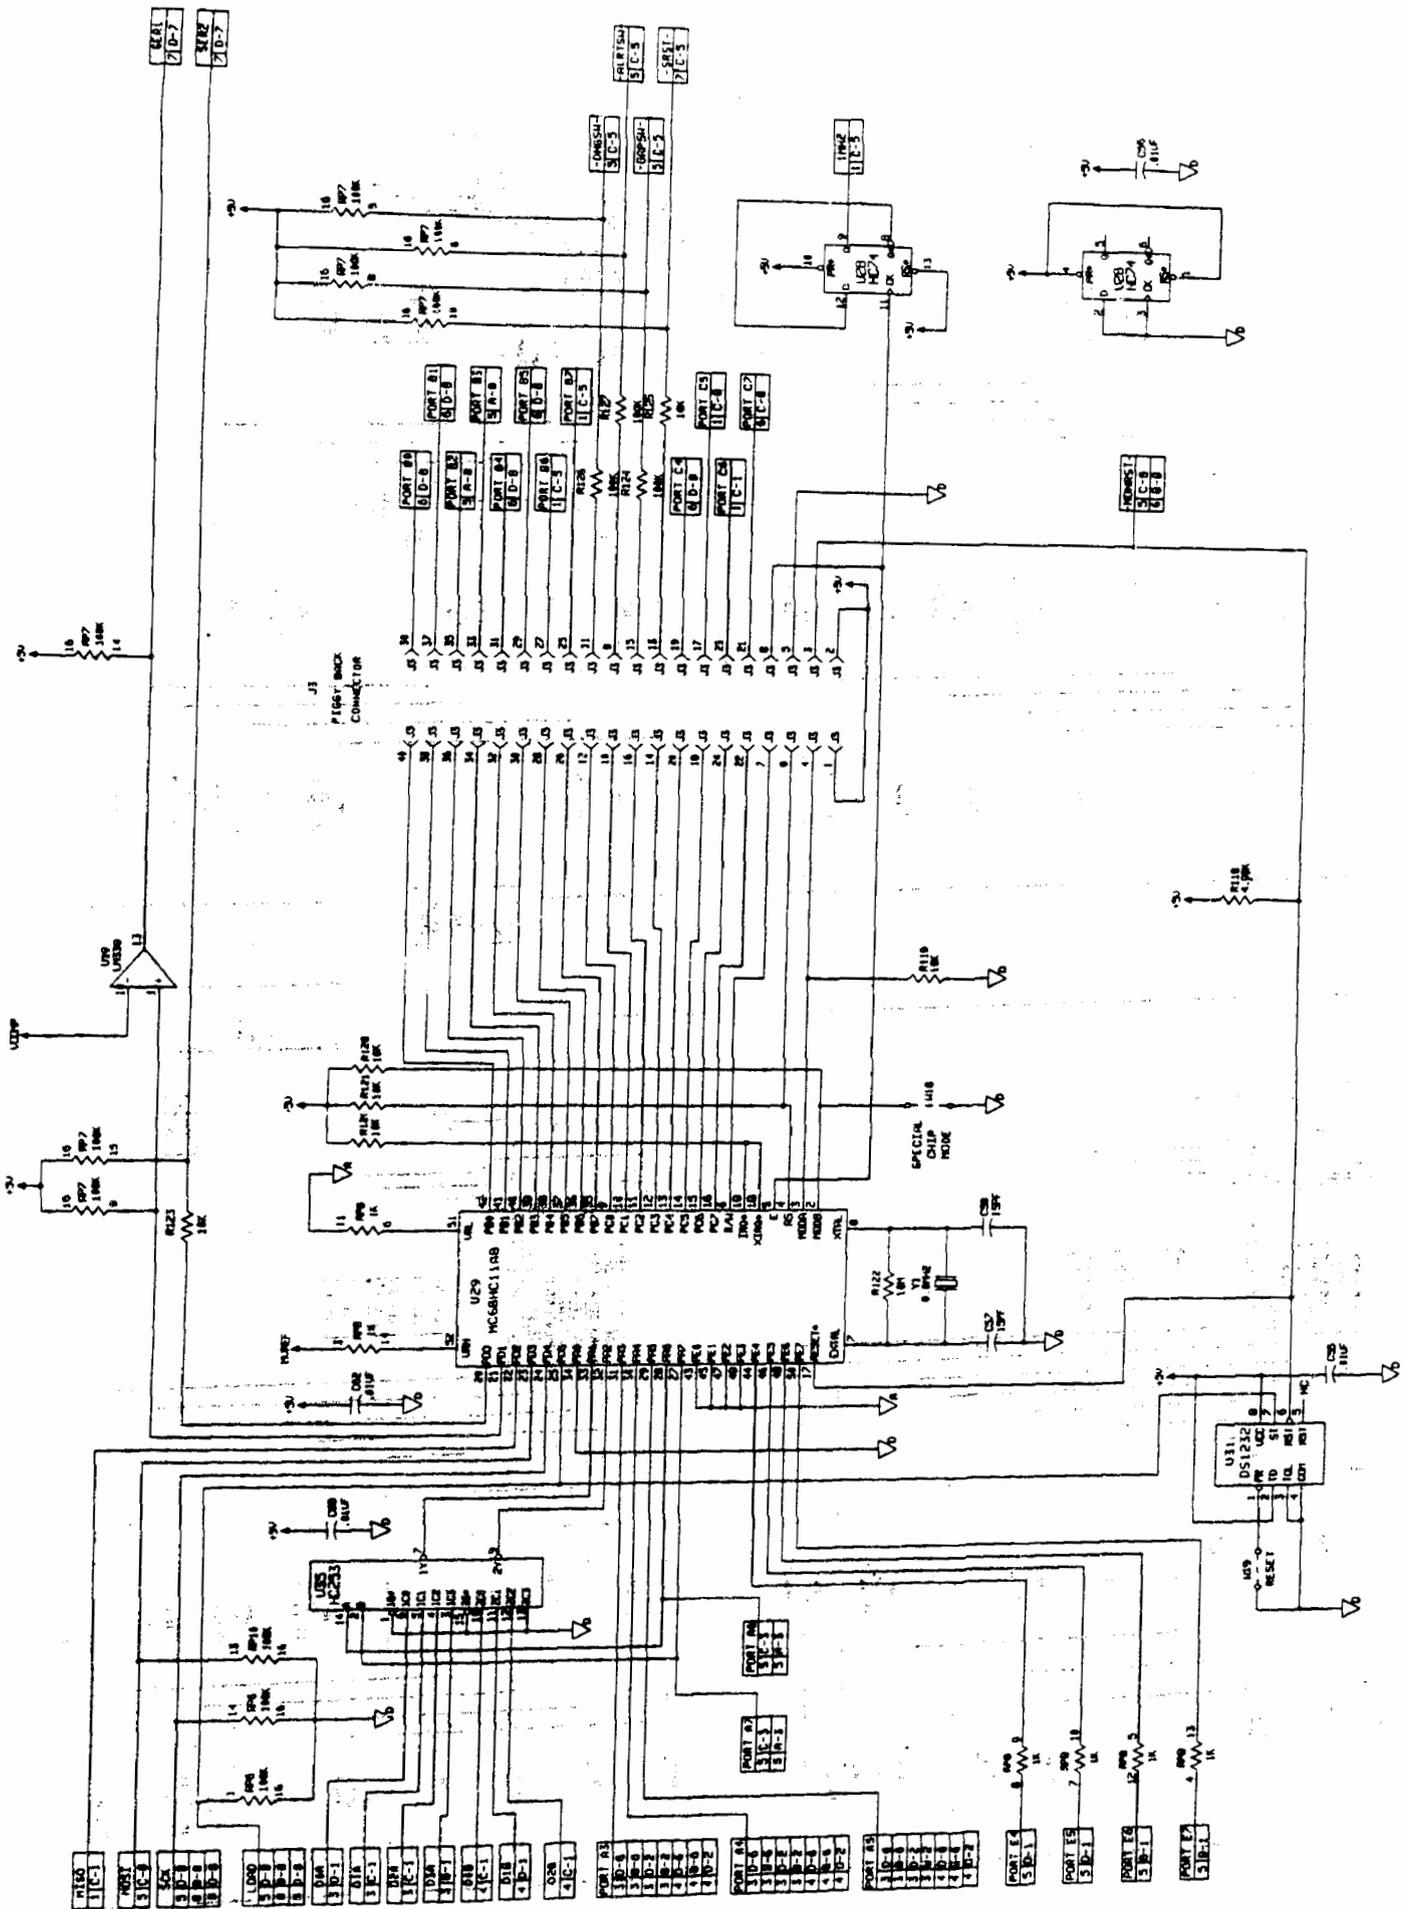


Case Expansion Monitor Schematic Sheet (2 of 11)

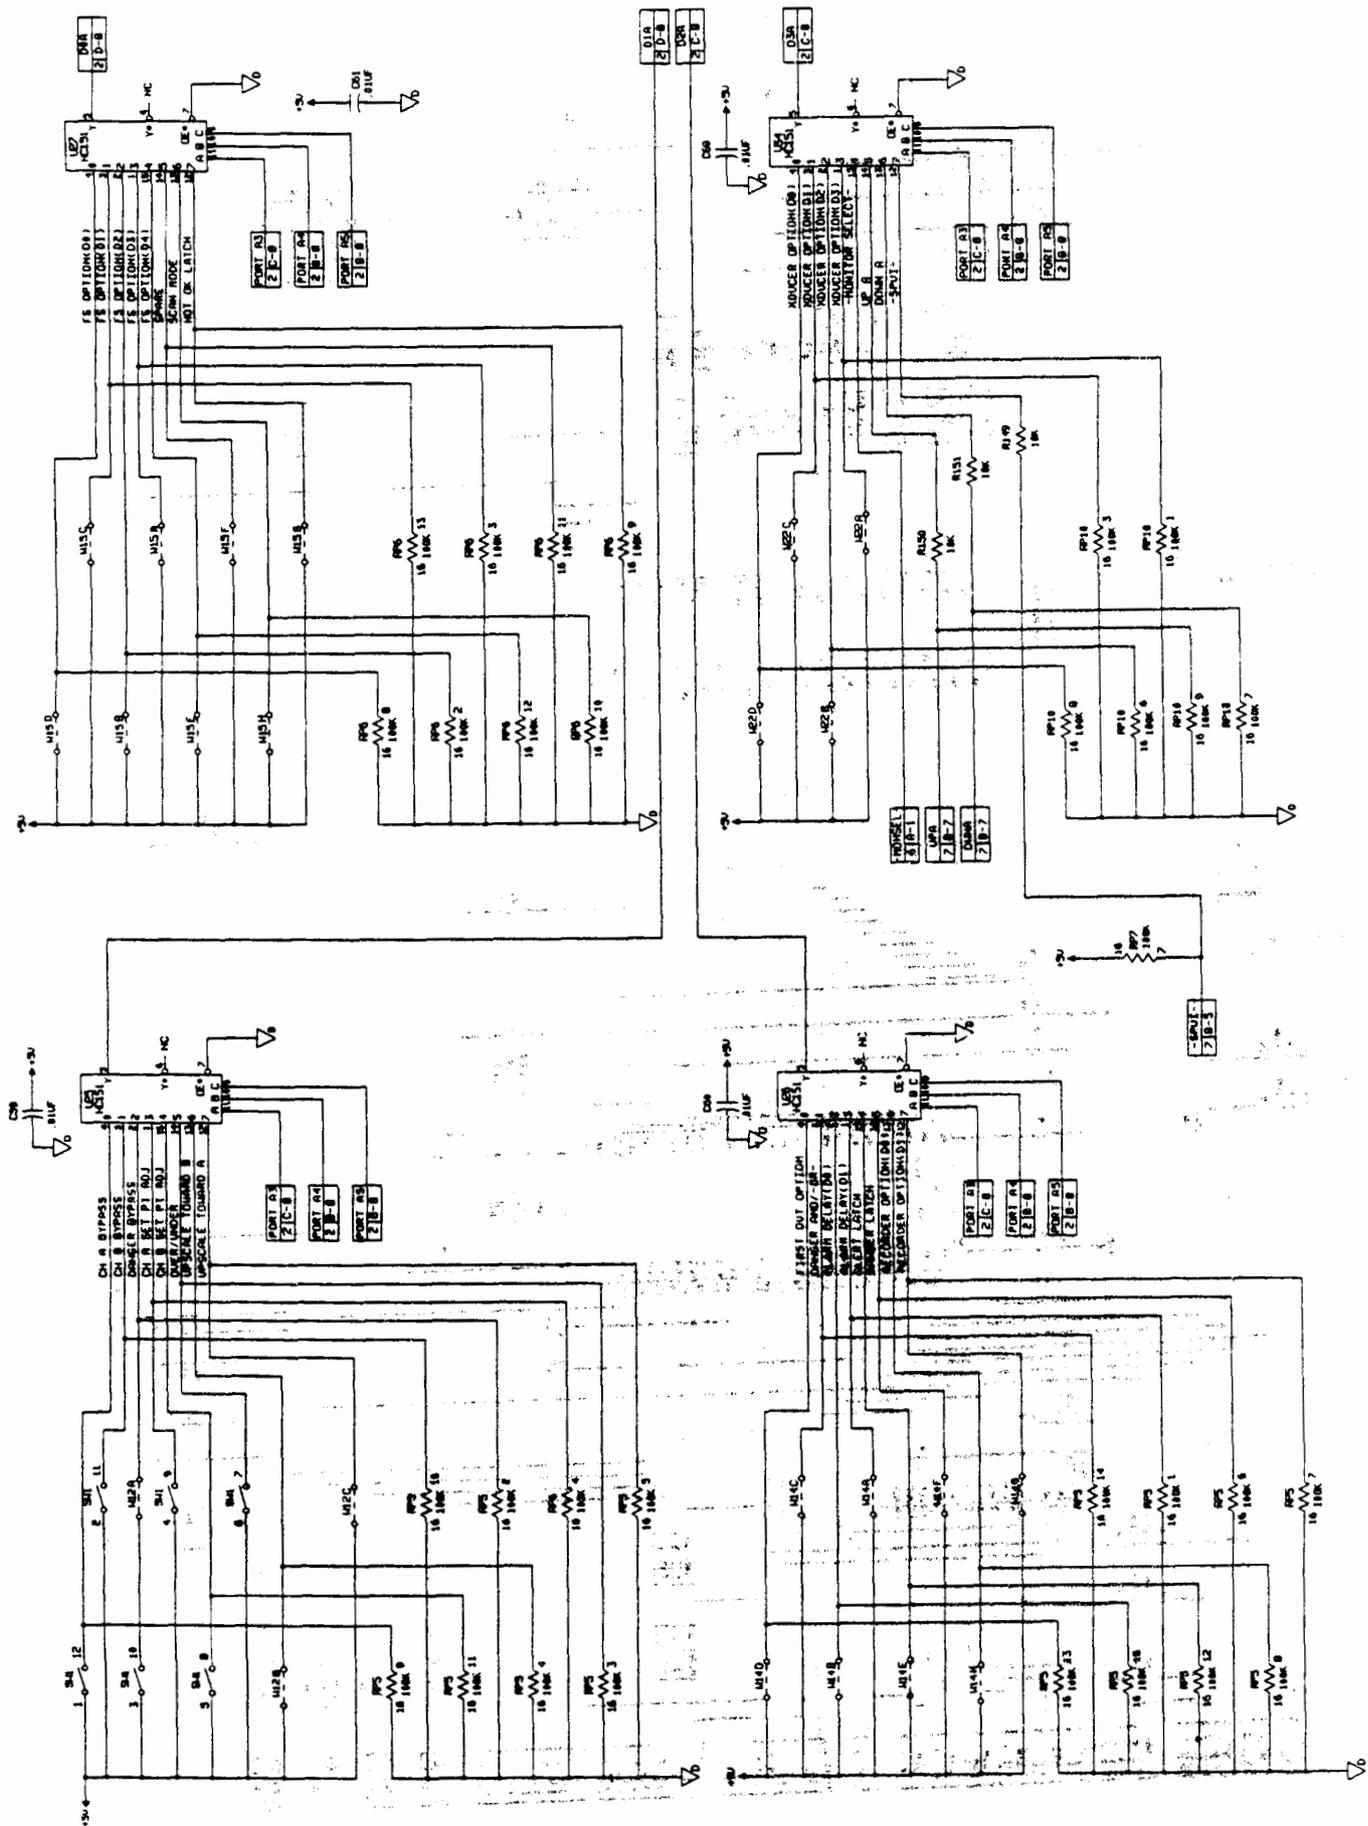

Case Expansion Monitor Schematic Sheet (3 of 11)

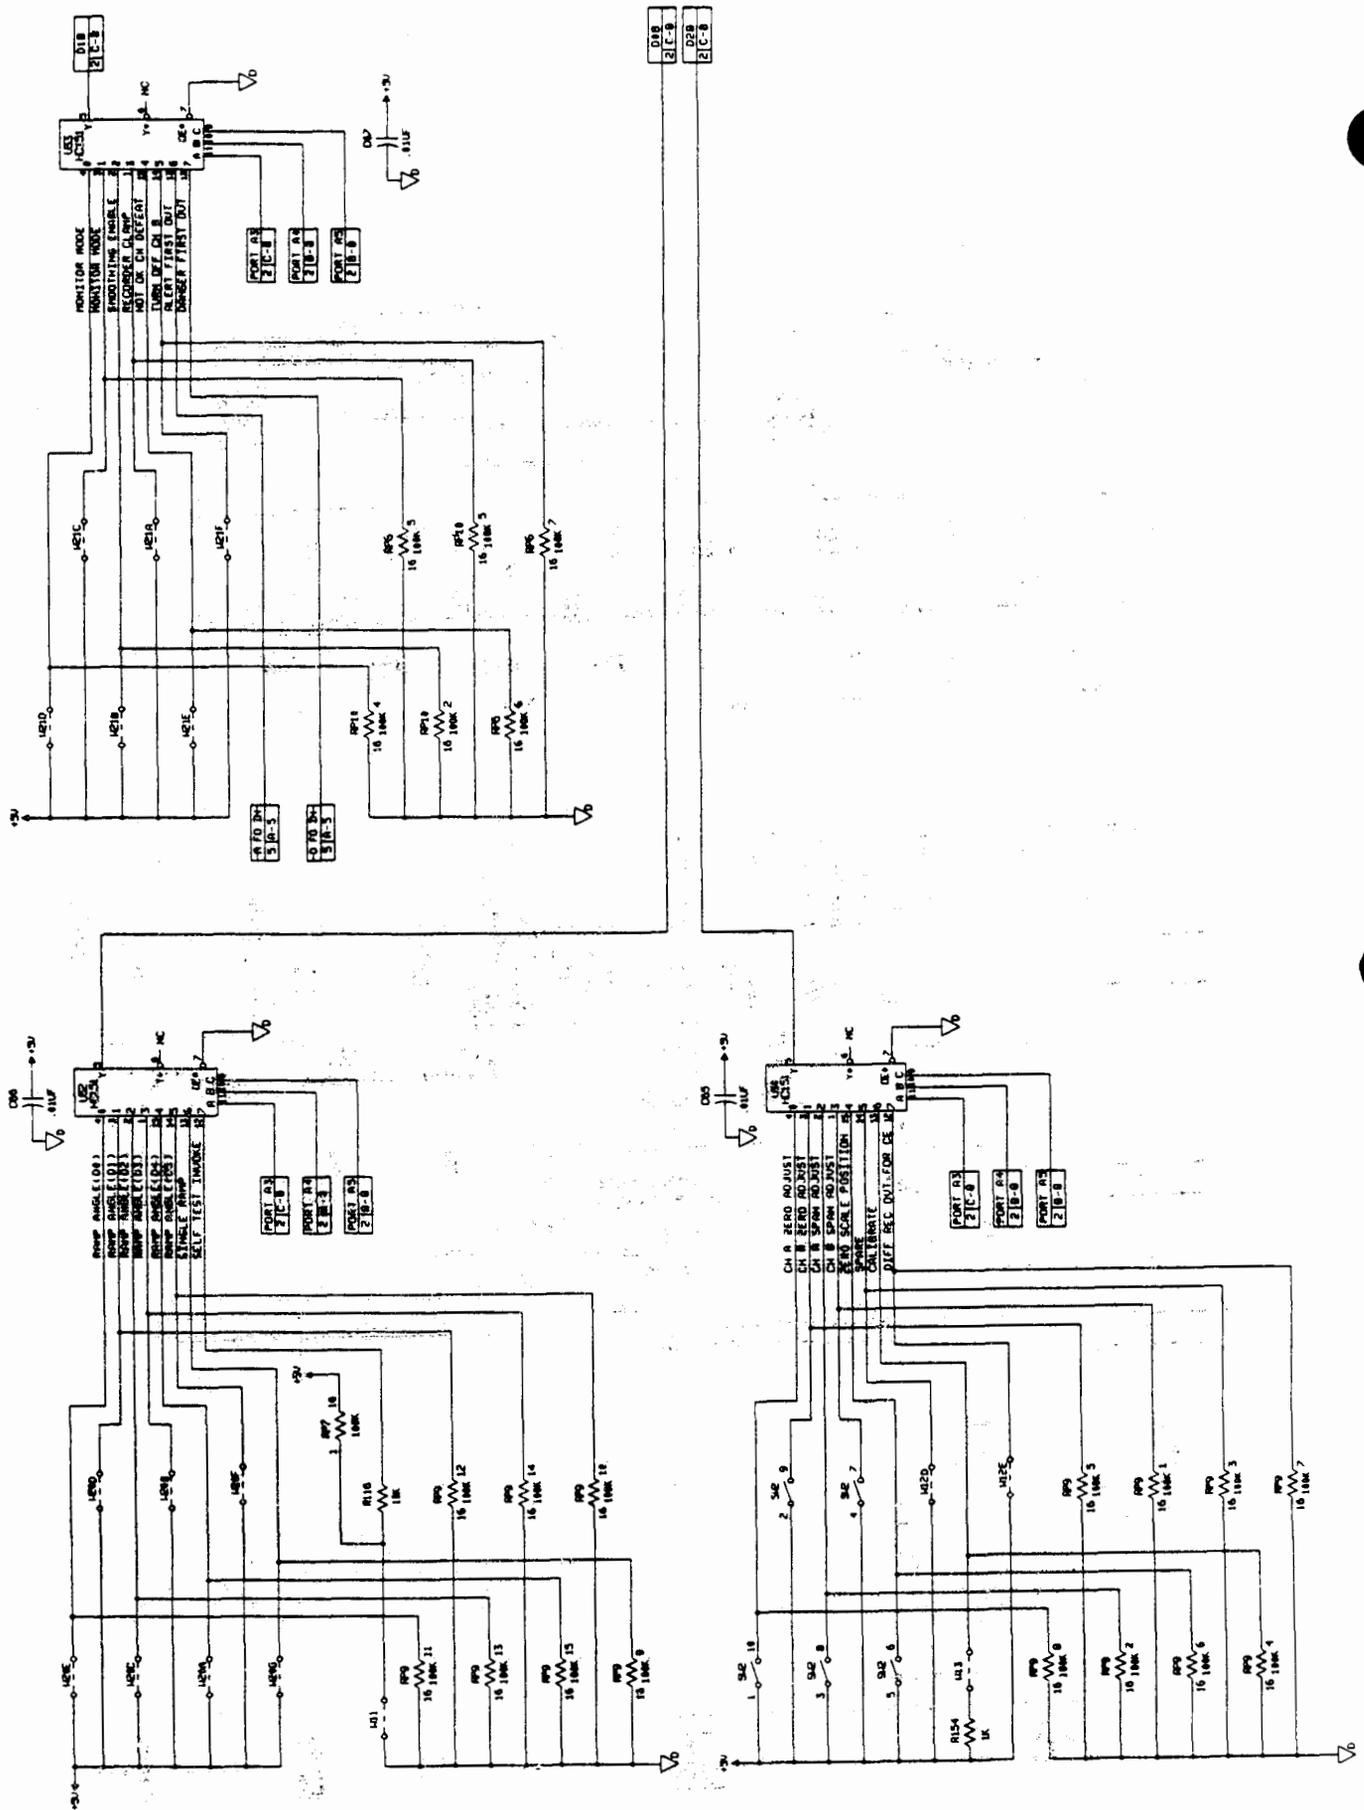




Case Expansion Monitor Schematic
Sheet (4 of 11)

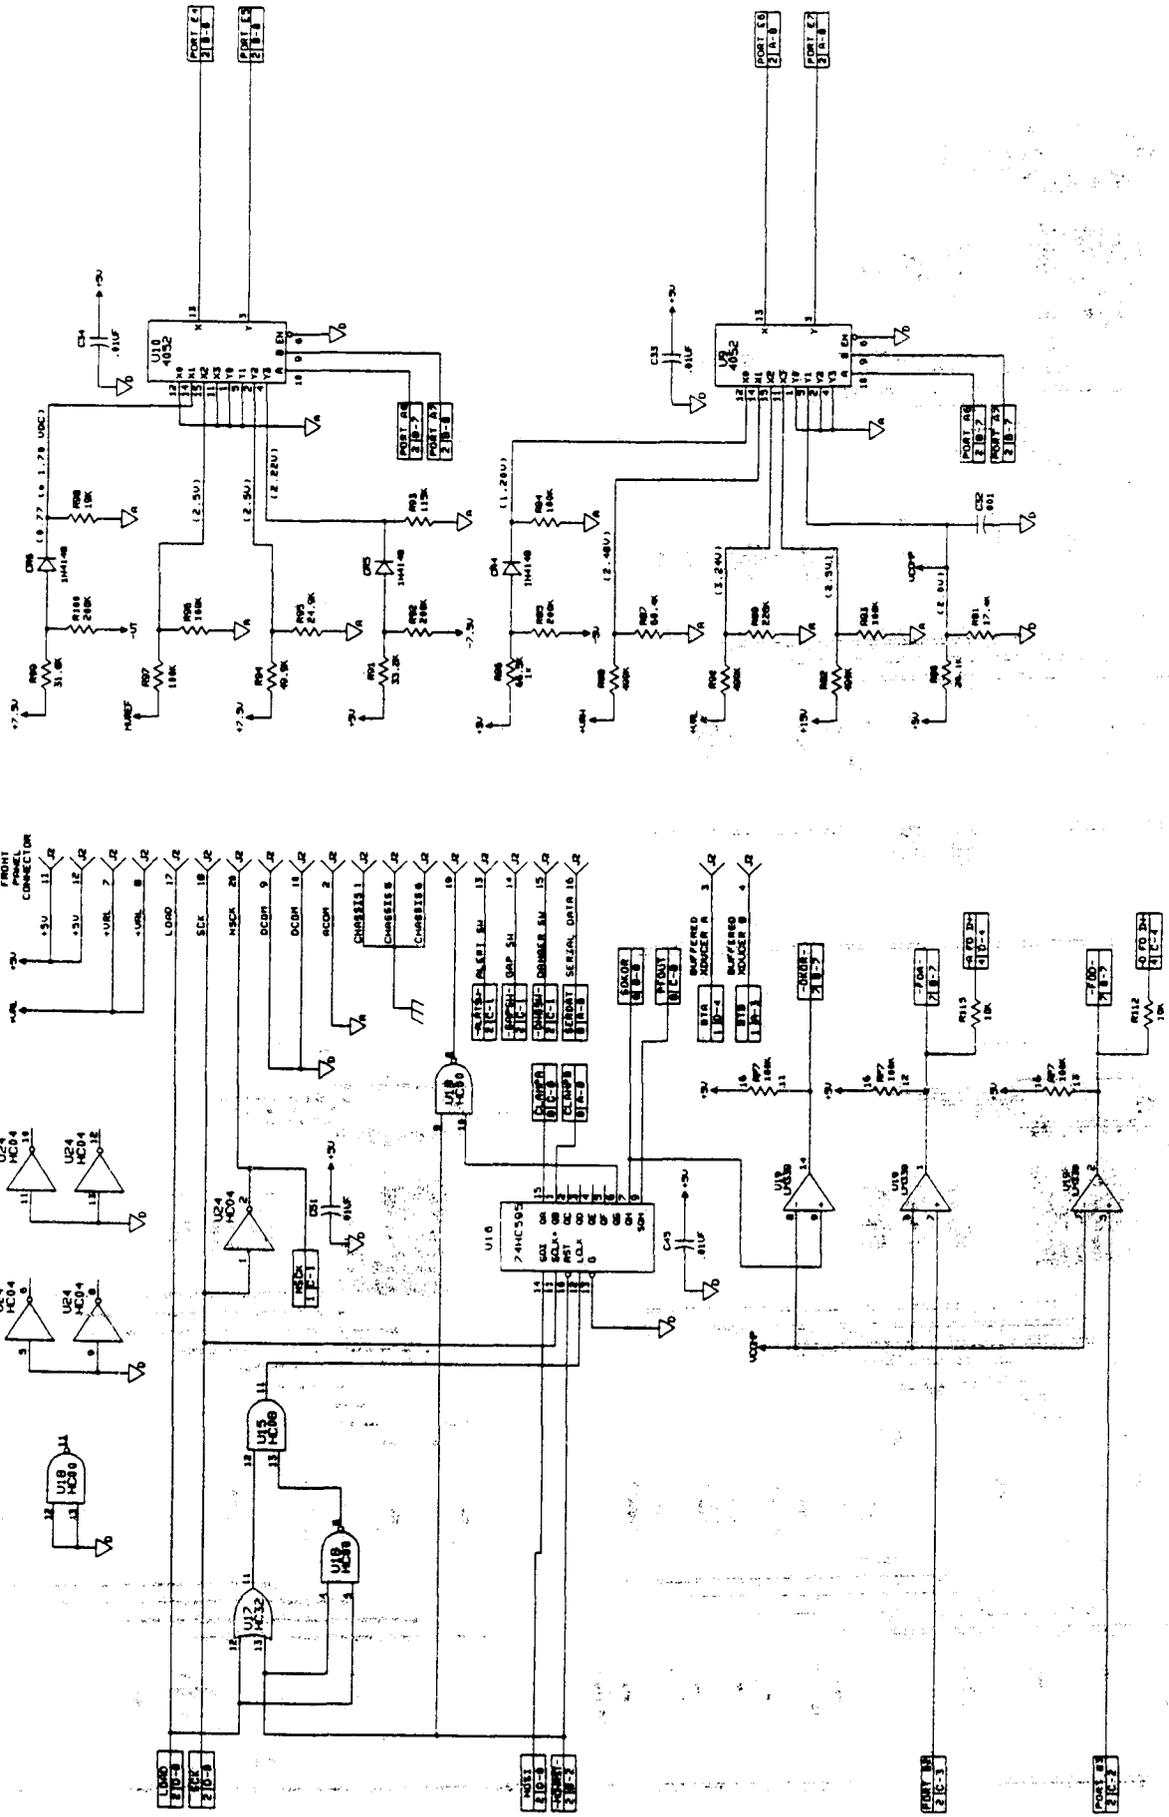


Case Expansion Monitor Schematic
Sheet (5 of 11)


DATA MANAGER INTERFACE

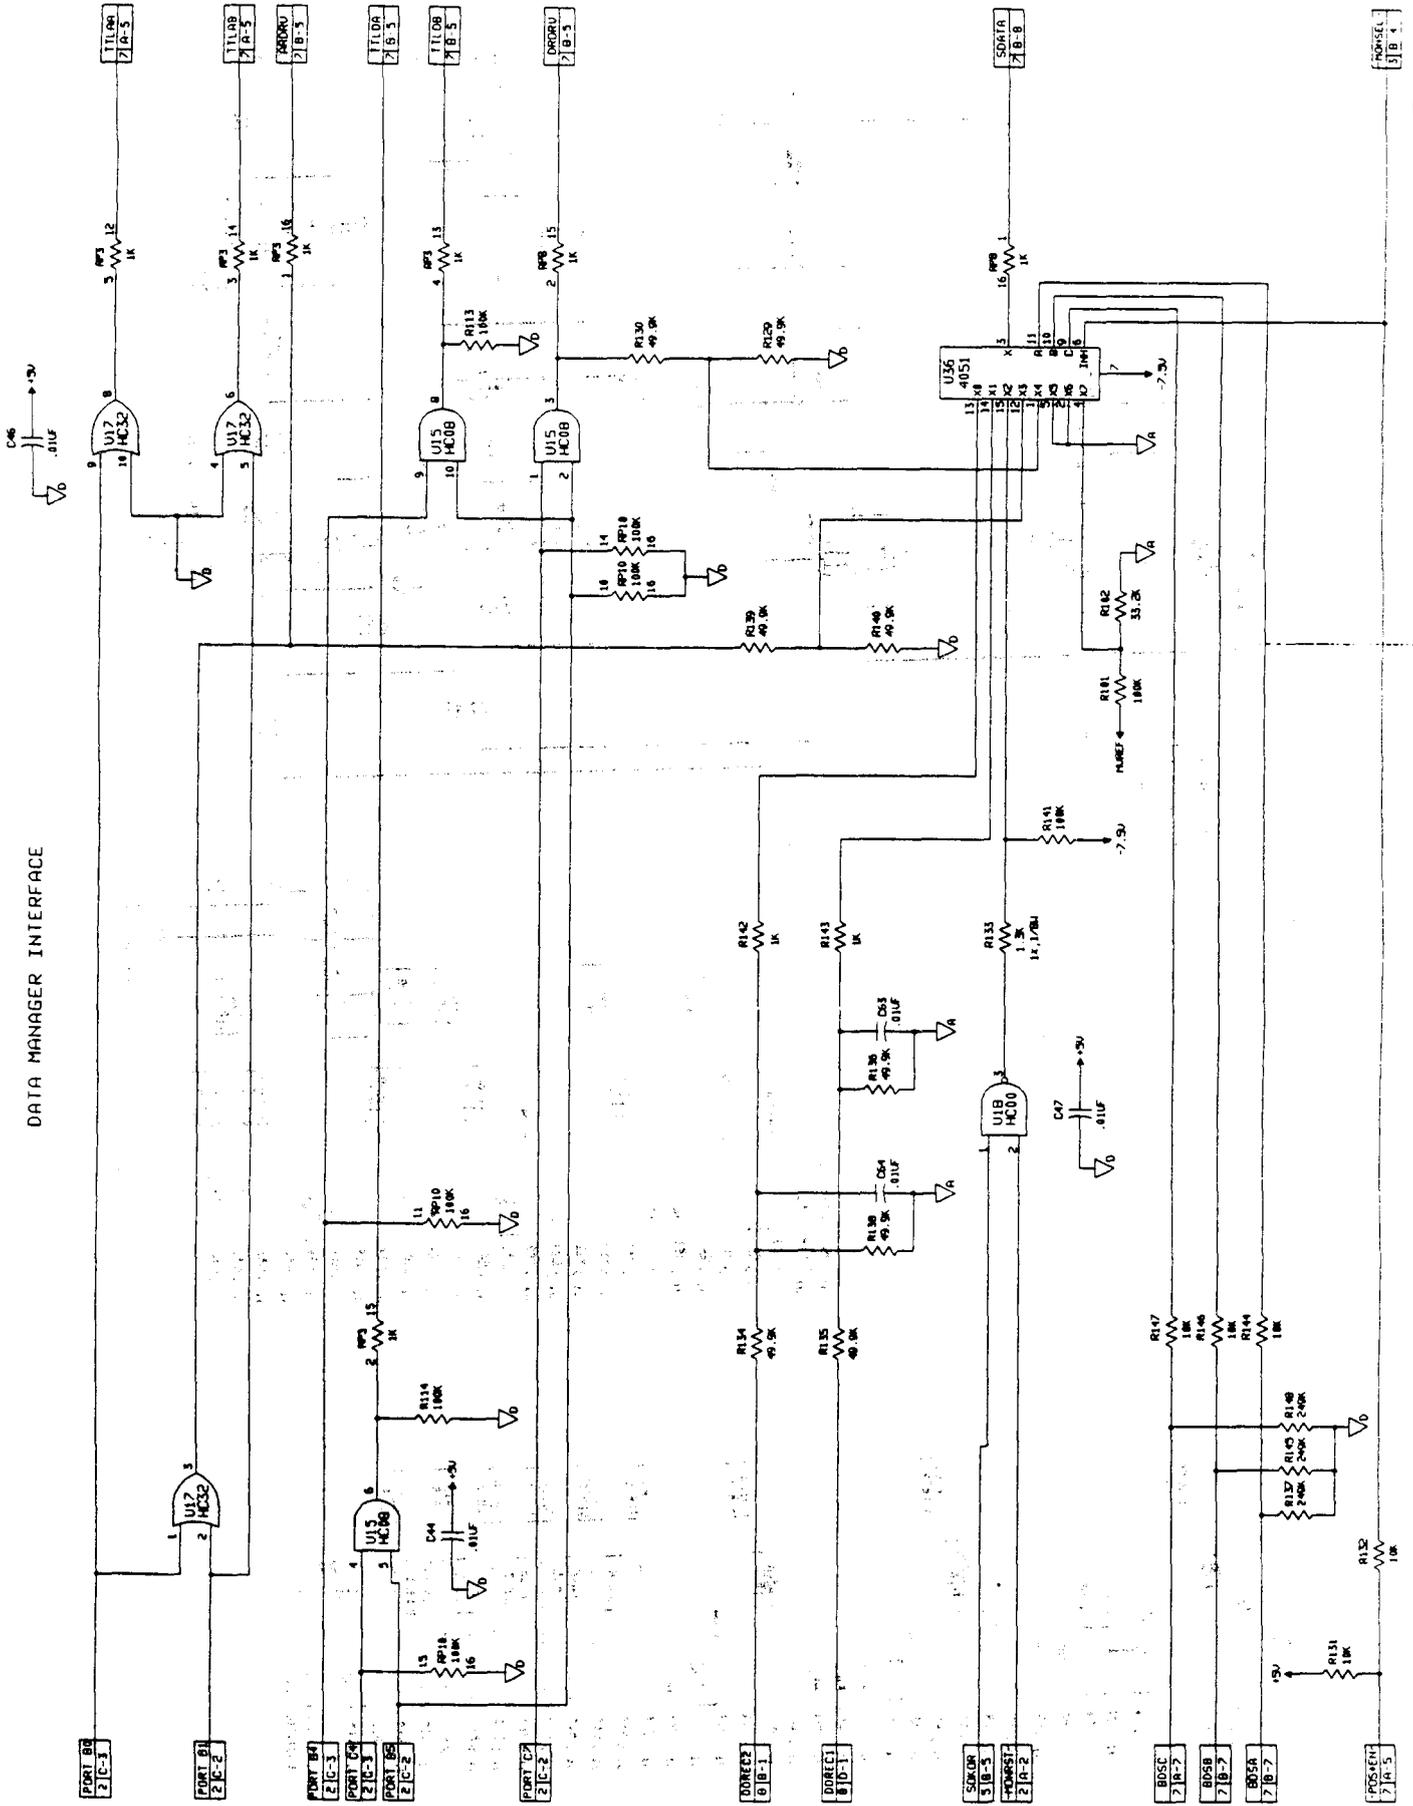

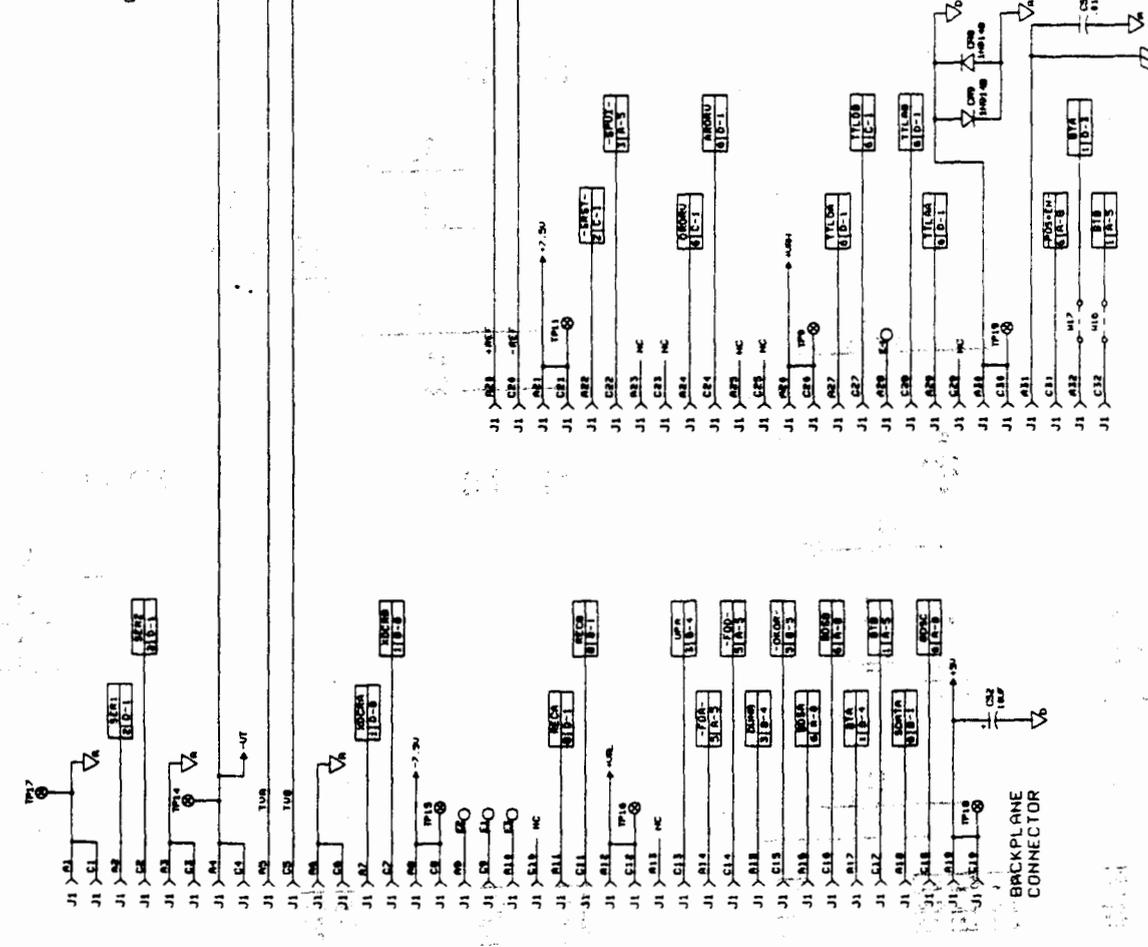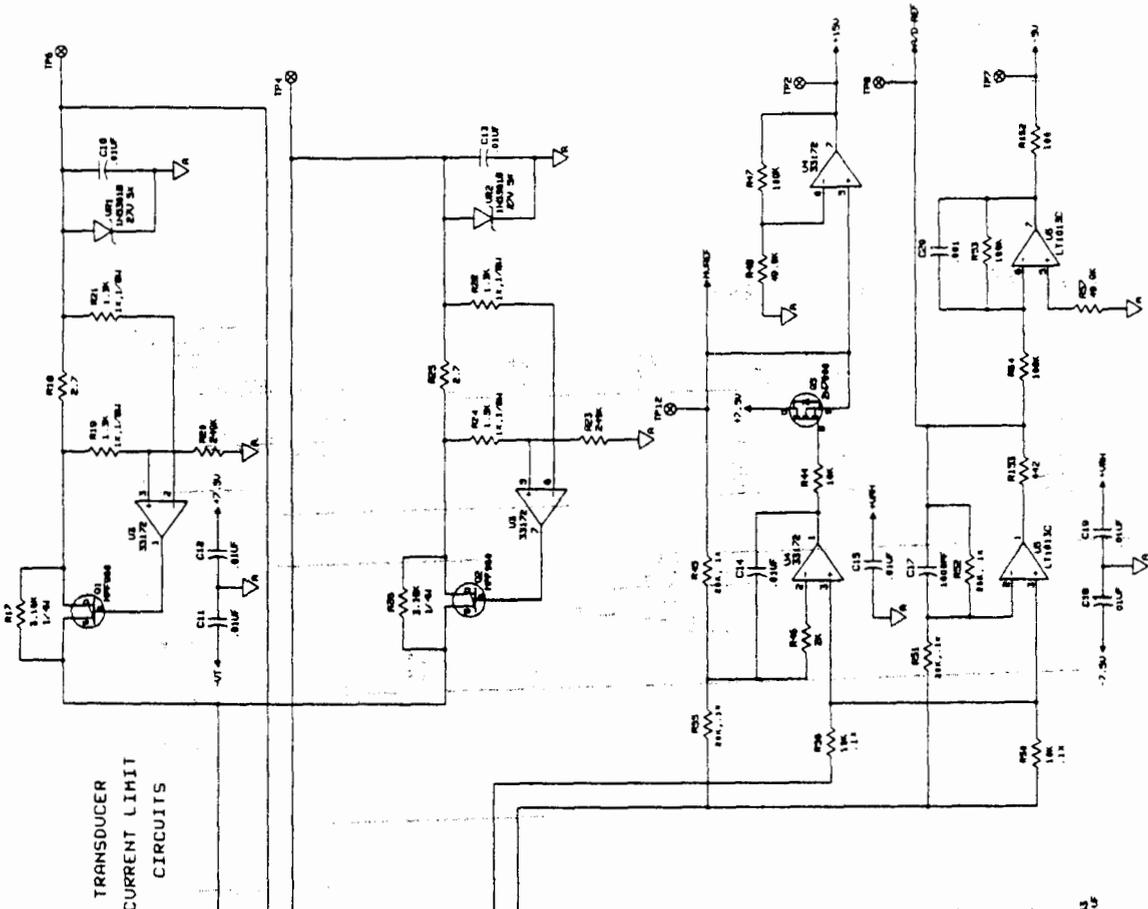

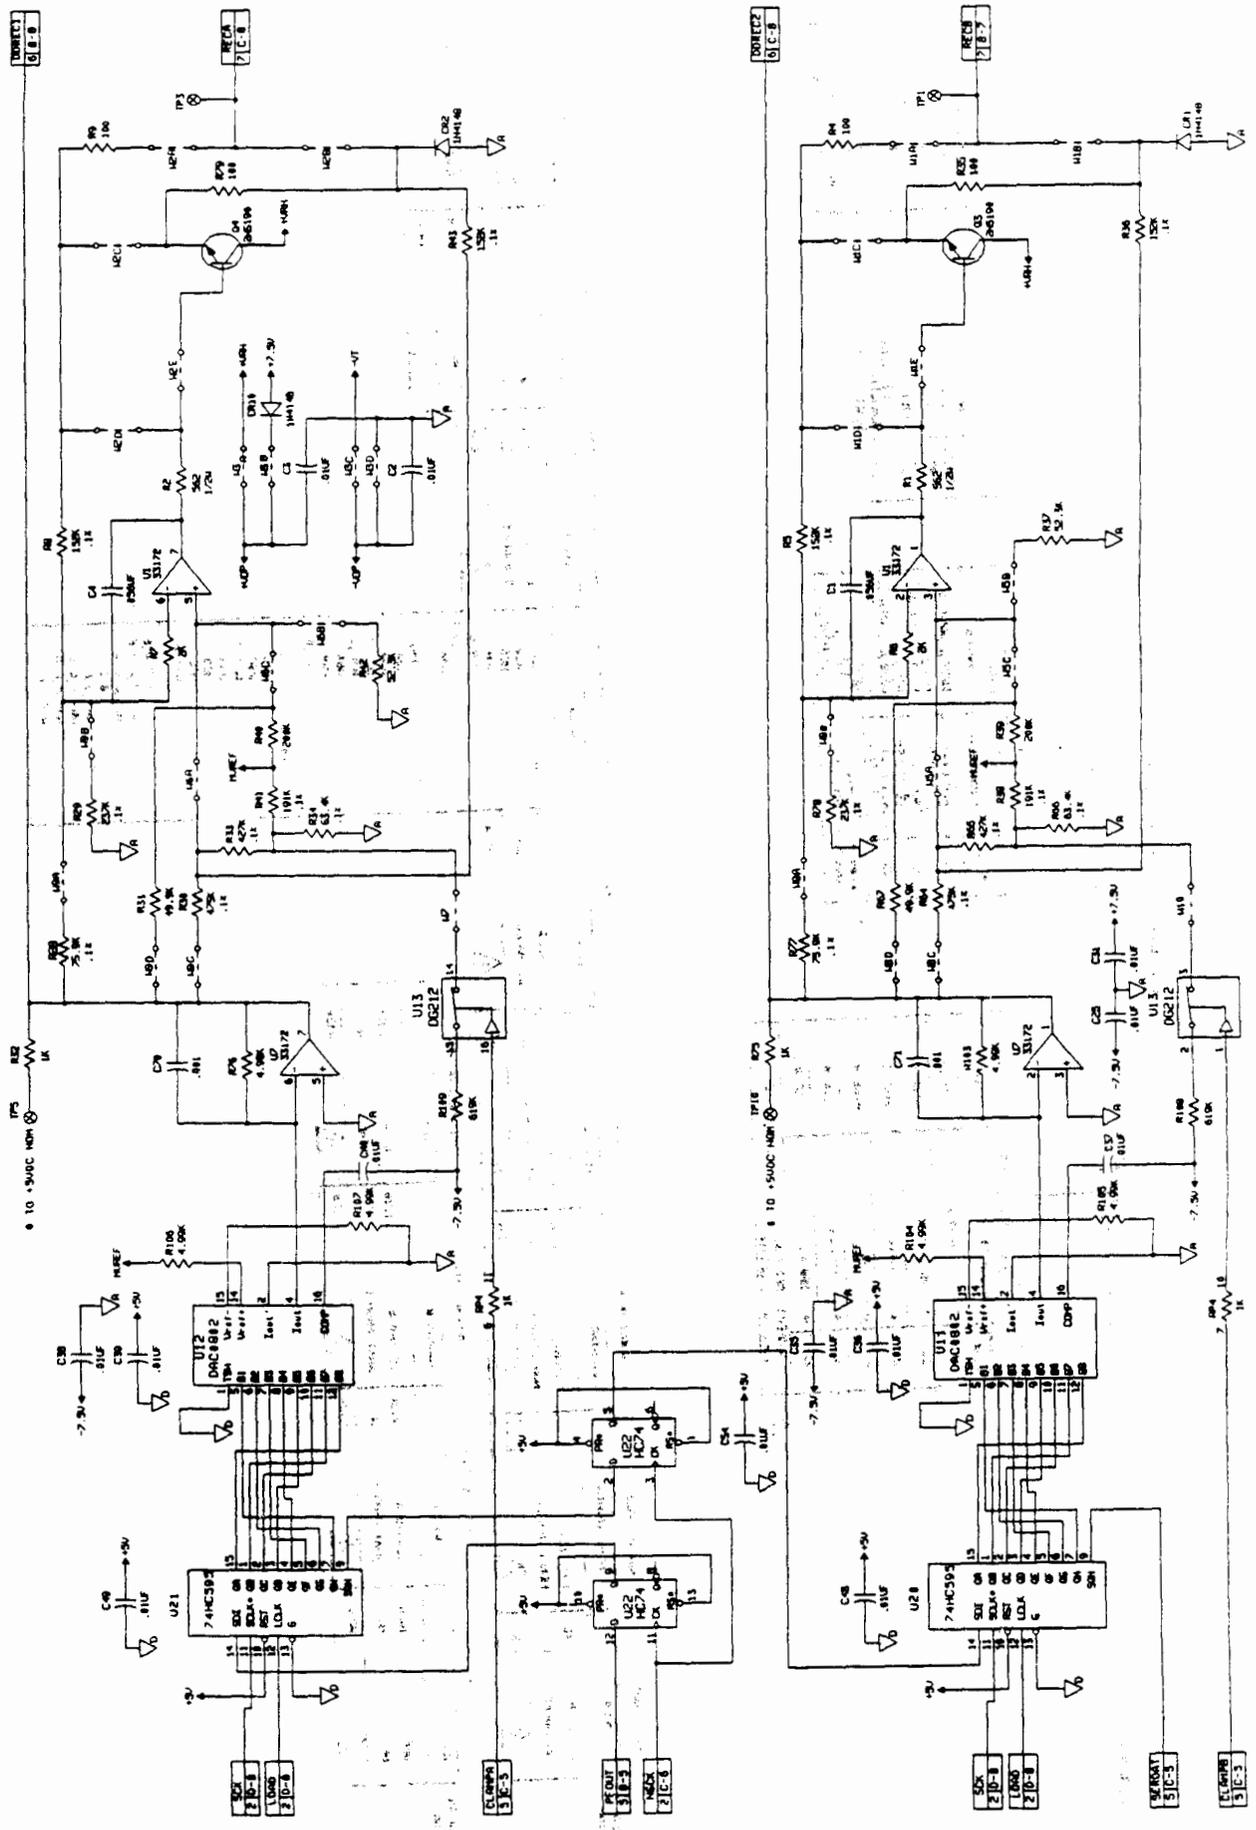


Case Expansion Monitor Schematic Sheet (8 of 11)

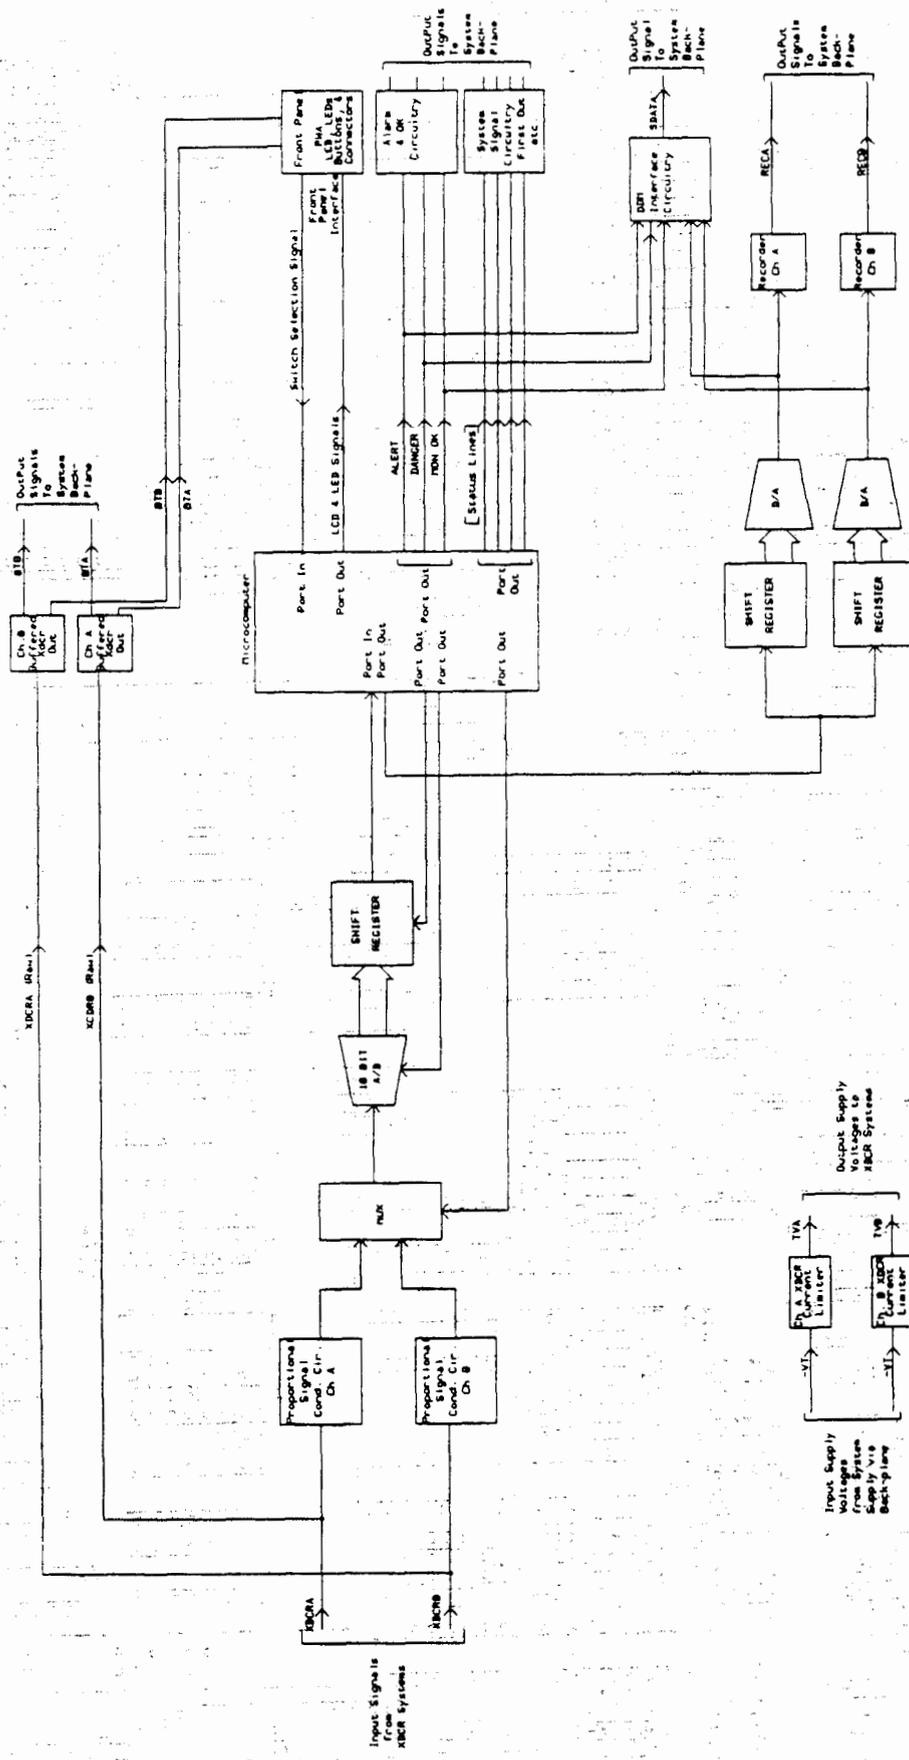

Case Expansion Monitor Block Diagram
 Sheet (10 of 11)

82803-01

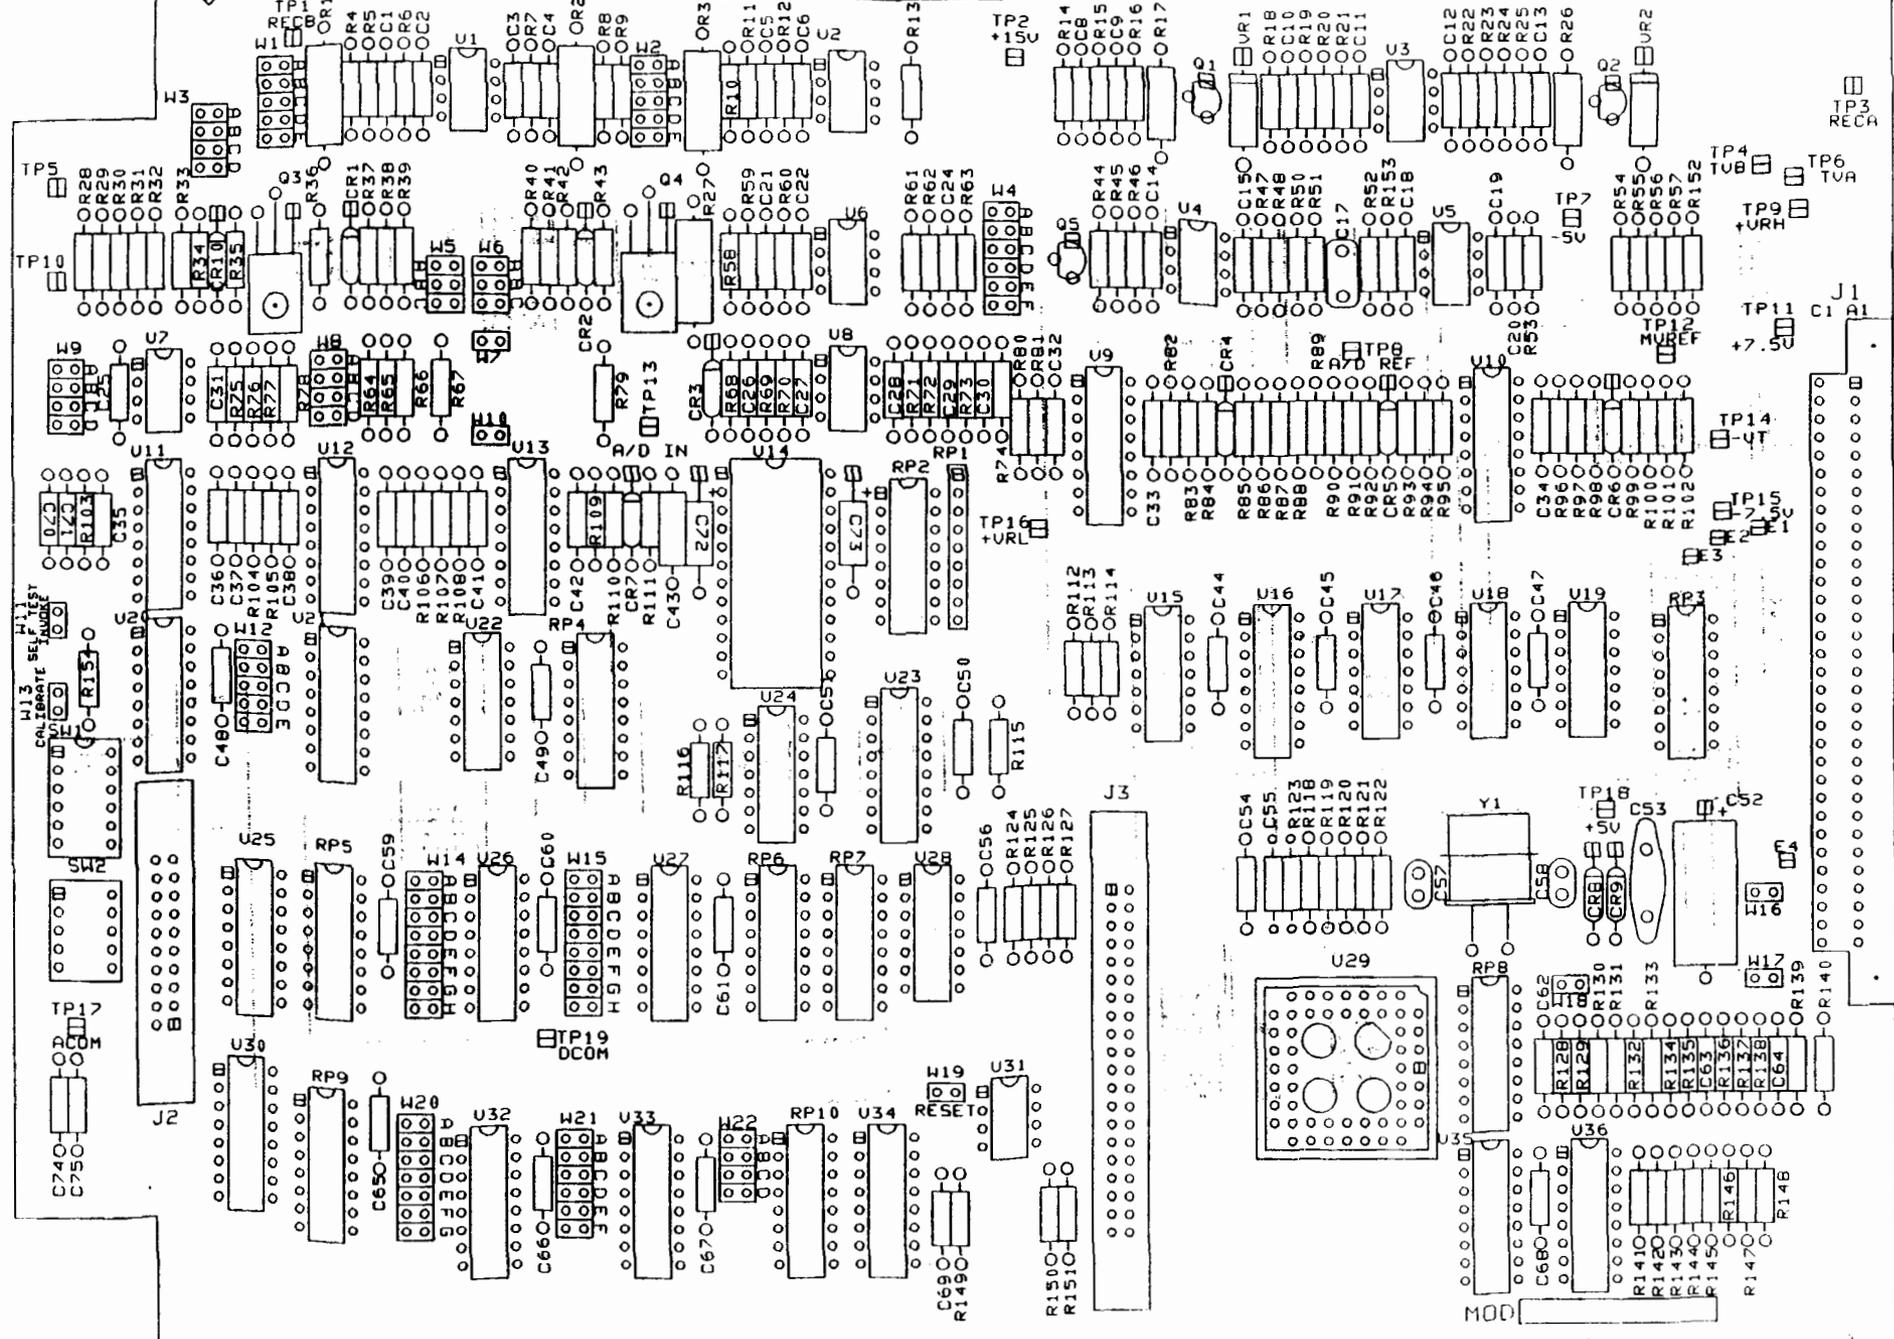

TP3 RECA

TP6 TR

TP11 C1 A1

TP14 -UT

TP15

TP16

TP18

TP19

TP20

TP21

TP22

TP23

TP24

TP25

TP26

TP27

TP28

TP29

TP30

TP31

TP32

TP33

TP34

TP35

TP36

TP37

TP38

TP39

TP40

TP41

TP42

TP43

TP44

TP45

TP46

TP47

TP48

TP49

TP50

TP51

TP52

TP53

TP54

TP55

TP56

TP57

TP58

TP59

TP60

TP61

TP62

TP63

TP64

TP65

TP66

TP67

TP68

TP69

TP70

TP71

TP72

TP73

TP74

TP75

TP76

TP77

TP78

TP79

TP80

TP81

TP82

TP83

TP84

TP85

TP86

TP87

TP88

TP89

TP90

TP91

TP92

TP93

TP94

TP95

TP96

TP97

TP98

TP99

TP100

TP101

TP102

TP103

TP104

TP105

TP106

TP107

TP108

TP109

TP110

TP111

TP112

TP113

TP114

TP115

TP116

TP117

TP118

TP119

TP120

TP121

TP122

TP123

TP124

TP125

TP126

TP127

TP128

TP129

TP130

TP131

TP132

TP133

TP134

TP135

TP136

TP137

TP138

TP139

TP140

TP141

TP142

TP143

TP144

TP145

TP146

TP147

TP148

TP149

TP150

TP151

TP152

TP153

TP154

TP155

TP156

TP157

TP158

TP159

TP160

TP161

TP162

TP163

TP164

TP165

TP166

TP167

TP168

TP169

TP170

TP171

TP172

TP173

TP174

TP175

TP176

TP177

TP178

TP179

TP180

TP181

TP182

TP183

TP184

TP185

TP186

TP187

TP188

TP189

TP190

TP191

TP192

TP193

TP194

TP195

TP196

TP197

TP198

TP199

TP200

TP201

TP202

TP203

TP204

TP205

TP206

TP207

TP208

TP209

TP210

TP211

TP212

TP213

TP214

TP215

TP216

TP217

TP218

TP219

TP220

TP221

TP222

TP223

TP224

TP225

TP226

TP227

TP228

TP229

TP230

TP231

TP232

TP233

TP234

TP235

TP236

TP237

TP238

TP239

TP240

TP241

TP242

TP243

TP244

TP245

TP246

TP247

TP248

TP249

TP250

TP251

TP252

TP253

Artisan Technology Group is an independent supplier of quality pre-owned equipment

Gold-standard solutions

Extend the life of your critical industrial, commercial, and military systems with our superior service and support.

We buy equipment

Planning to upgrade your current equipment? Have surplus equipment taking up shelf space? We'll give it a new home.

Learn more!

Visit us at artisanng.com for more info on price quotes, drivers, technical specifications, manuals, and documentation.

Artisan Scientific Corporation dba Artisan Technology Group is not an affiliate, representative, or authorized distributor for any manufacturer listed herein.

We're here to make your life easier. How can we help you today?

(217) 352-9330 | sales@artisanng.com | artisanng.com

