

ABB C100 controller to ABB Control Master CM10 controller Conversion chart

The ABB C100 controllers have been replaced by the ControlMaster CM10 models.

Listed below is a conversion table to convert the C100 model numbers to the new CM10 Control Master model numbers. In most cases the equivalent model offers more features than the old model. Please verify with the new CM10 data sheet to confirm your specific requirements or contact us and we can make certain you select the correct model.

We provide full support and will program and provide technical assistance on all of these controllers.

**ABB Commander
C100**



**ABB ControlMaster
CM10**



C100/0000/STD	=	CM10/000S0E0/STD	C100/0000/CUS	=	CM10/000S0E0/CUS
C100/0100/STD	=	CM10/100S0E0/STD	C100/0100/CUS	=	CM10/100S0E0/CUS
C100/0200/STD	=	CM10/200S0E0/STD	C100/0200/CUS	=	CM10/200S0E0/CUS
C100/0300/STD	=	CM10/20MS0E0/STD	C100/0300/CUS	=	CM10/20MS0E0/CUS
C100/0010/STD	=	CM10/000S1E0/STD	C100/0010/CUS	=	CM10/000S1E0/CUS
C100/0110/STD	=	CM10/100S1E0/STD	C100/0110/CUS	=	CM10/100S1E0/CUS
C100/0210/STD	=	CM10/200S1E0/STD	C100/0210/CUS	=	CM10/200S1E0/CUS
C100/0310/STD	=	CM10/20MS1E0/STD	C100/0310/CUS	=	CM10/20MS1E0/CUS
C100/0001/STD	=	CM10/000U0E0/STD	C100/0001/CUS	=	CM10/000U0E0/CUS
C100/0101/STD	=	CM10/100U0E0/STD	C100/0101/CUS	=	CM10/100U0E0/CUS
C100/0201/STD	=	CM10/200U0E0/STD	C100/0201/CUS	=	CM10/200U0E0/CUS
C100/0301/STD	=	CM10/20MU0E0/STD	C100/0301/CUS	=	CM10/20MU0E0/CUS
C100/0011/STD	=	CM10/000U1E0/STD	C100/0011/CUS	=	CM10/000U1E0/CUS
C100/0111/STD	=	CM10/100U1E0/STD	C100/0111/CUS	=	CM10/100U1E0/CUS
C100/0211/STD	=	CM10/200U1E0/STD	C100/0211/CUS	=	CM10/200U1E0/CUS
C100/0311/STD	=	CM10/20MU1E0/STD	C100/0311/CUS	=	CM10/20MU1E0/CUS
C100/0002/STD	=	CM10/000U0E0/STD	C100/0002/CUS	=	CM10/000U0E0/CUS
C100/0102/STD	=	CM10/100U0E0/STD	C100/0102/CUS	=	CM10/100U0E0/CUS
C100/0202/STD	=	CM10/200U0E0/STD	C100/0202/CUS	=	CM10/200U0E0/CUS
C100/0302/STD	=	CM10/20MU0E0/STD	C100/0302/CUS	=	CM10/20MU0E0/CUS
C100/0012/STD	=	CM10/000U1E0/STD	C100/0012/CUS	=	CM10/000U1E0/CUS
C100/0112/STD	=	CM10/100U1E0/STD	C100/0112/CUS	=	CM10/100U1E0/CUS
C100/0212/STD	=	CM10/200U1E0/STD	C100/0212/CUS	=	CM10/200U1E0/CUS
C100/0312/STD	=	CM10/20MU1E0/STD	C100/0312/CUS	=	CM10/20MU1E0/CUS

