

Trusted 40 Channel Analogue or Digital Output Versatile FTA

Product Overview

The T8845 Trusted® 40 Channel Analogue or Digital Output Versatile Field Termination Assembly (VFTA) is designed to act as the main interface between the Trusted Triple Modular Redundant (TMR) Low Voltage Output Modules and output field devices.

Features:

- 40 output channels per VFTA.
- Industry standard field device connections (3-wire).
- Standard DIN rail compatibility.
- Simple installation and connection.
- 24 Vdc operation.

Page intentionally left blank

PREFACE

In no event will Rockwell Automation be responsible or liable for indirect or consequential damages resulting from the use or application of this equipment. The examples given in this manual are included solely for illustrative purposes. Because of the many variables and requirements related to any particular installation, Rockwell Automation does not assume responsibility or reliability for actual use based on the examples and diagrams.

No patent liability is assumed by Rockwell Automation, with respect to use of information, circuits, equipment, or software described in this manual.

All trademarks are acknowledged.

DISCLAIMER

It is not intended that the information in this publication covers every possible detail about the construction, operation, or maintenance of a control system installation. You should also refer to your own local (or supplied) system safety manual, installation and operator/maintenance manuals.

REVISION AND UPDATING POLICY

This document is based on information available at the time of its publication. The document contents are subject to change from time to time. The latest versions of the manuals are available at the Rockwell Automation Literature Library under "Product Information" information "Critical Process Control & Safety Systems".

TRUSTED RELEASE

This technical manual applies to **Trusted Release: 3.6.1.**

LATEST PRODUCT INFORMATION

For the latest information about this product review the Product Notifications and Technical Notes issued by technical support. Product Notifications and product support are available at the Rockwell Automation Support Centre at

<http://rockwellautomation.custhelp.com>

At the Search Knowledgebase tab select the option "By Product" then scroll down and select the Trusted product.

Some of the Answer ID's in the Knowledge Base require a TechConnect Support Contract. For more information about TechConnect Support Contract Access Level and Features please click on the following link:

https://rockwellautomation.custhelp.com/app/answers/detail/a_id/50871

This will get you to the login page where you must enter your login details.

IMPORTANT A login is required to access the link. If you do not have an account then you can create one using the "Sign Up" link at the top right of the web page.

DOCUMENTATION FEEDBACK

Your comments help us to write better user documentation. If you discover an error, or have a suggestion on how to make this publication better, send your comment to our technical support group at <http://rockwellautomation.custhelp.com>

SCOPE

This manual specifies the maintenance requirements and describes the procedures to assist troubleshooting and maintenance of a Trusted system.

WHO SHOULD USE THIS MANUAL

This manual is for plant maintenance personnel who are experienced in the operation and maintenance of electronic equipment and are trained to work with safety systems.

SYMBOLS

In this manual we will use these notices to tell you about safety considerations.



SHOCK HAZARD: Identifies an electrical shock hazard. If a warning label is fitted, it can be on or inside the equipment.



WARNING: Identifies information about practices or circumstances that can cause an explosion in a hazardous environment, which can cause injury or death, property damage or economic loss.



ATTENTION: Identifies information about practices or circumstances that can cause injury or death.



CAUTION: Identifies information about practices or circumstances that can cause property damage or economic loss.



BURN HAZARD: Identifies where a surface can reach dangerous temperatures. If a warning label is fitted, it can be on or inside the equipment.



This symbol identifies items which must be thought about and put in place when designing and assembling a Trusted controller for use in a Safety Instrumented Function (SIF). It appears extensively in the Trusted Safety Manual.

IMPORTANT Identifies information that is critical for successful application and understanding of the product.

NOTE Provides key information about the product or service.

TIP Tips give helpful information about using or setting up the equipment.

WARNINGS AND CAUTIONS

**WARNING: EXPLOSION RISK**

Do not connect or disconnect equipment while the circuit is live or unless the area is known to be free of ignitable concentrations or equivalent

**AVERTISSEMENT - RISQUE D'EXPLOSION**

Ne pas connecter ou déconnecter l'équipement alors qu'il est sous tension, sauf si l'environnement est exempt de concentrations inflammables ou équivalente

**MAINTENANCE**

Maintenance must be carried out only by qualified personnel. Failure to follow these instructions may result in personal injury.

**CAUTION: RADIO FREQUENCY INTERFERENCE**

Most electronic equipment is influenced by Radio Frequency Interference. Caution should be exercised with regard to the use of portable communications equipment around such equipment. Signs should be posted in the vicinity of the equipment cautioning against the use of portable communications equipment.

**CAUTION:**

The module PCBs contains static sensitive components. Static handling precautions must be observed. DO NOT touch exposed connector pins or attempt to dismantle a module.

ISSUE RECORD

Issue	Date	Comments
5	Sep 05	Format
6	Jun 16	Rebranded and updated to incorporate IEEE standards with correction of typographical errors and also standardise the Relative Humidity Range and Operating Temperature statements in the Specification Section.

Page intentionally left blank

Table of Contents

1. Description	3
2. Installation	5
3. Associated Cable Selection	7
4. Assembly Pinout Connections	9
4.1. TBFP1 to TBFP5 Connections	9
4.2. TBG1 Connections	9
4.3. TBG2 Connections	10
4.4. TBG3 Connections	10
4.5. TBG4 Connections	11
4.6. TBG5 Connections	11
4.7. TBSS Connections	12
4.8. TB1 to TB40 Connections	13
5. Specifications.....	15

Page intentionally left blank

1. Description

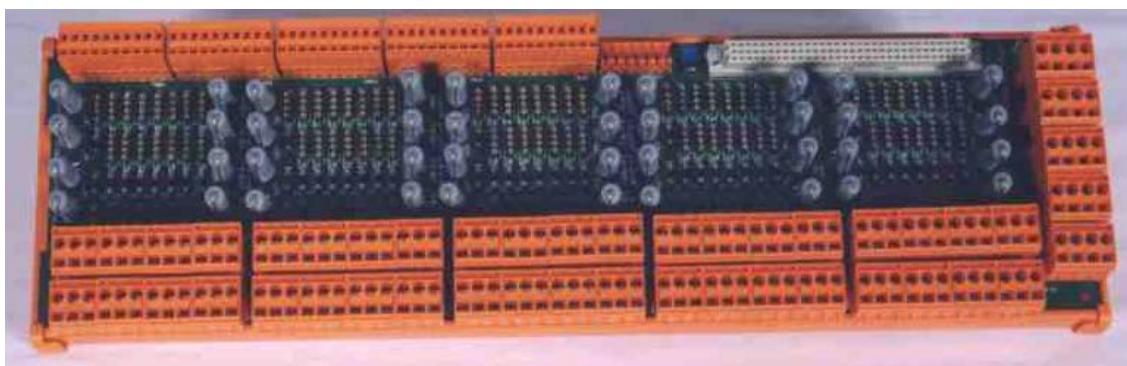


Figure 1 T8845 Layout

The T8845 Trusted 40 Channel Analogue or Digital Output Versatile FTA provides termination for a maximum of 40 output field loops. The 40 channels are arranged in five groups each comprising eight identical channels. Figure 2 below shows the configuration of a single channel within a group.

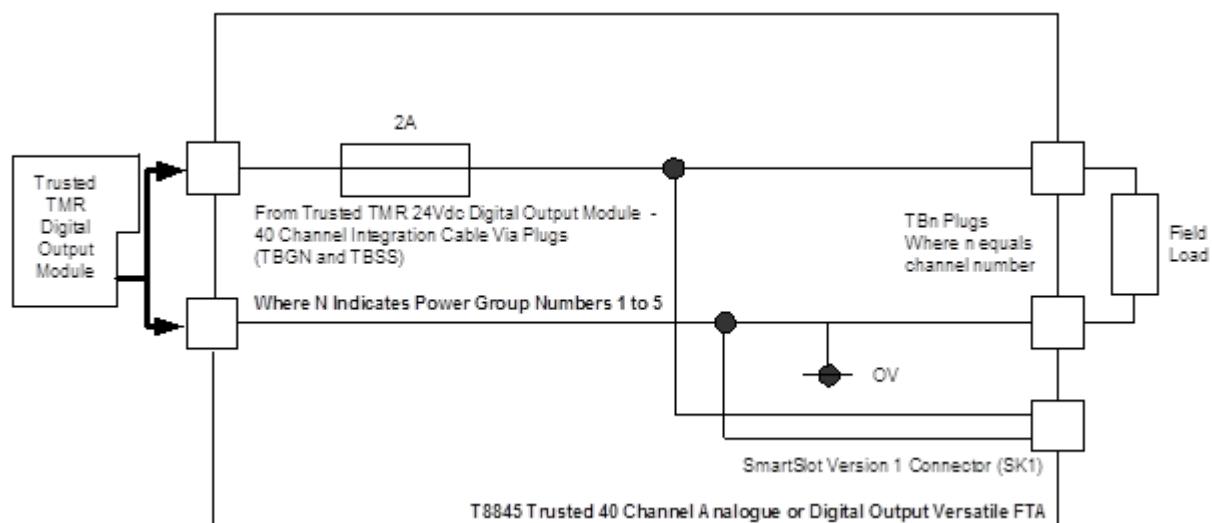


Figure 2 Single Channel Schematic

The field power supply terminals available on the VFTA are not used in this application.

The output signal to the field device is fed via the 2 A fuse.

The cable linking the 40 channels on the output module to the VFTA is terminated at five 10-way connectors (TBG1 to TBG5). SmartSlot (Version 1) signals from the module are connected to a single 7-way connector (TBGSS). Forty 3-way connectors are used for the field loops (TB1 to TB40).

Page intentionally left blank

2. Installation

Trusted T8845 40 Channel Analogue or Digital Output Versatile FTA is designed to be mounted on either of the TS32 or TS35 DIN rails in the horizontal or vertical positions as required.

Page intentionally left blank

3. Associated Cable Selection

Refer to the product descriptions detailed below:

PD-TC000 Trusted Power Cables

PD-TC200 Trusted I/O Companion Slot Cables

PD-TC500 Trusted I/O SmartSlot Cables

Page intentionally left blank

4. Assembly Pinout Connections

4.1. TBFP1 to TBFP5 Connections

The pin connections of TBFP1 to TBFP5 are identical and are detailed below:

Pin	Service
1	24 V-1
2	0 V
3	0 V
4	24 V-2

Table 1 TBFP1 to TBFP5 Connections

4.2. TBG1 Connections

Pin	Service
1	V Field Return Group 1
2	Channel 1
3	Channel 2
4	Channel 3
5	Channel 4
6	Channel 5
7	Channel 6
8	Channel 7
9	Channel 8
10	V Field Return Group 1

Table 2 TBG1 Connections

4.3. TBG2 Connections

Pin	Service
1	V Field Return Group 2
2	Channel 9
3	Channel 10
4	Channel 11
5	Channel 12
6	Channel 13
7	Channel 14
8	Channel 15
9	Channel 16
10	V field Return Group 2

Table 3 TBG2 Connections

4.4. TBG3 Connections

Pin	Service
1	V Field Return Group 3
2	Channel 17
3	Channel 18
4	Channel 19
5	Channel 20
6	Channel 21
7	Channel 22
8	Channel 23

Pin	Service
9	Channel 24
10	V Field Return Group 3

Table 4 TBG3 Connections

4.5. TBG4 Connections

Pin	Service
1	V Field Return Group 4
2	Channel 25
3	Channel 26
4	Channel 27
5	Channel 28
6	Channel 29
7	Channel 30
8	Channel 31
9	Channel 32
10	V Field Return Group 4

Table 5 TBG4 Connections

4.6. TBG5 Connections

Pin	Service
1	V Field return Group 5
2	Channel 33
3	Channel 34
4	Channel 35
5	Channel 36

Pin	Service
6	Channel 37
7	Channel 38
8	Channel 39
9	Channel 40
10	V Field return Group 5

Table 6 TBG5 Connections

4.7. TBSS Connections

Pin	Service
1	Not used
2	Not used
3	SmartSlot link
4	SmartSlot link
5	SmartSlot link
6	Not Used
7	Not Used

Table 7 TBSS Connections

4.8. TB1 to TB40 Connections

The pin connections of TB1 (Channel 1) to TB40 (Channel 2) are identical and are detailed below:

Pin	Service
1	Not Used
2	Signal out
3	0 V

Table 8 TB1 to TB40 Connections

Page intentionally left blank

5. Specifications

Voltage Range	18 Vdc to 28 Vdc
Fuses	40-off 2 A
ICS Triplex Technology Part No	813409
Maximum Current	10 mA
Power Consumption	0.25 W
Operating Temperature	0 °C to +60 °C (+32 °F to +140 °F)
Non-operating Temperature	-25 °C to +70 °C (-13 °F to +158 °F)
Relative Humidity range (operating, storage & transport)	10 % – 95 %, non-condensing
Environmental Specifications	Refer to Document 552517
Dimensions	
Height	110 mm (4.33 in)
Width	360 mm (14.17 in)
Depth	68 mm (2.67 in)
Weight	950 g (2.1 lb)