


Customer Maintenance Parts List

EJA510E and EJA530E Absolute and Gauge Pressure Transmitters

DPharp **EJA**™

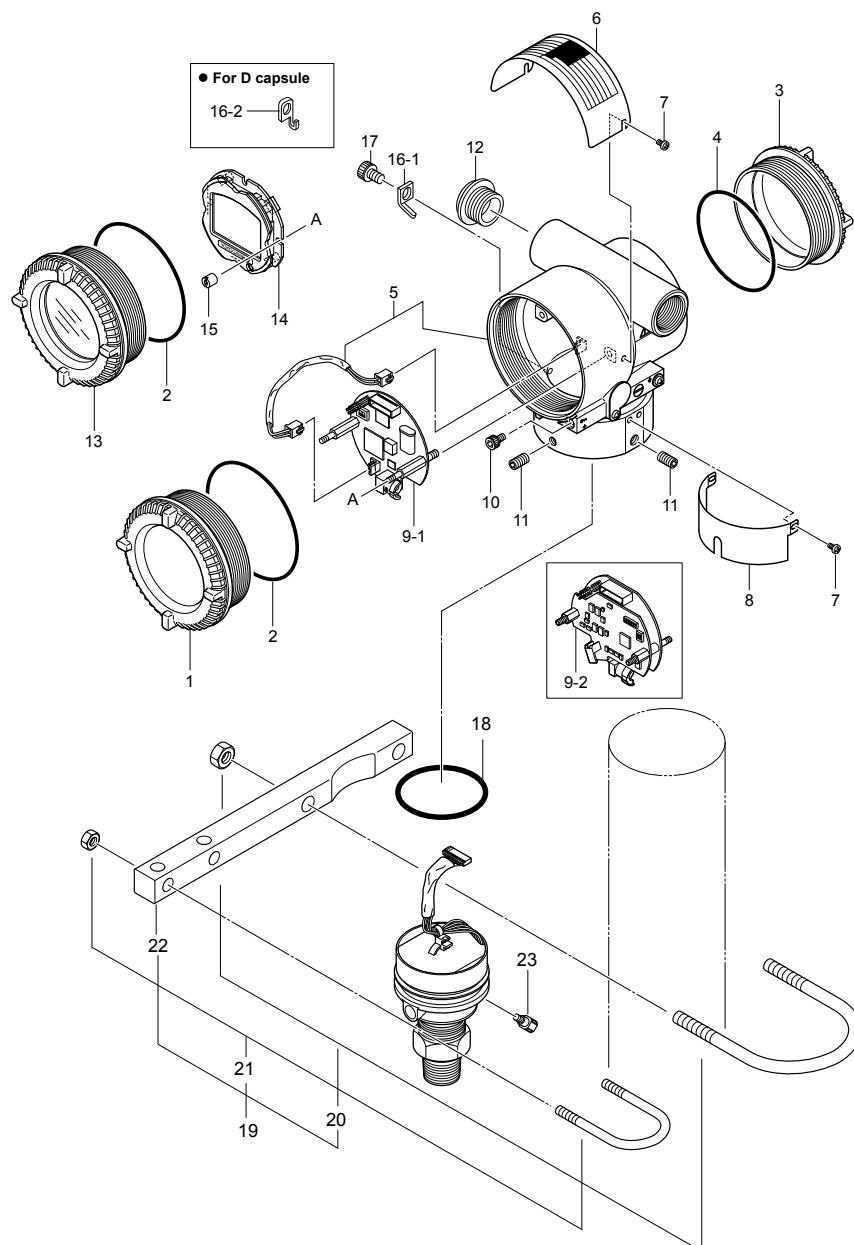

Item	Part No.	Qty	Description
1	Below F9913TQ F9913VP F9913SC F9913SD F9913CQ F9913DP	1	Cover (Note 1) Cast-aluminum alloy Cast-aluminum alloy (Option code /PR) ASTM CF-8M ASTM CF-8M (Option code /PR) Cast-aluminum alloy with corrosion resistance properties Cast-aluminum alloy with corrosion resistance properties (Option code /PR)
2	Below F9341JP F9900GS	1	O-ring Buna-N Fluoro-rubber (Option code /HE)

Item	Part No.	Qty	Description	
3	Below F9913TG F9913VF F9913SA F9913SB F9913CG F9913DF	1	Cover (Note 1) Cast-aluminum alloy Cast-aluminum alloy (Option code /PR) ASTM CF-8M ASTM CF-8M (Option code /PR) Cast-aluminum alloy with corrosion resistance properties Cast-aluminum alloy with corrosion resistance properties (Option code /PR)	
4	Below F9910LE F9900GR	1	O-ring Buna-N Fluoro-rubber (Option code /HE)	
5	—	1	Case Assembly	
6	—	1	Name Plate	
7	Below F9900RG F9900RR F9900RE	4	Screw For cast-aluminum alloy case assembly, 316 SST For ASTM CF-8M case assembly, 316 SST	
8	F9900RE	1	Tag Plate, 316 SST	
9-1	Below F9920BE F9920BN	1	CPU Assembly (Note 2) For BRAIN protocol version For HART 5/7 protocol version (Note 3)	
9-2	Below F9921AB	1	CPU Assembly (Note 2) For FOUNDATION Fieldbus protocol version (Note 4) (Note 5)	
10	F9900RP	2	Bolt for Option code /KF22, /KU22, or /SF2	
11	Below F9900GC F9900RH	2	Screw SUSXM7 316 SST (for ASTM CF-8M case assembly, or Option code /HC)	
12	Below F9900GQ F9900GY F9900GP F9900GX G9612EB F9900GL F9900GK F9900GN	1	Plug For G1/2, Cast-aluminum alloy For G1/2, Cast-aluminum alloy (Option code /HE) For M20, Cast-aluminum alloy For M20, Cast-aluminum alloy (Option code /HE) For 1/2 NPT, 304 SST For G1/2, 316 SST For M20, 316 SST For 1/2 NPT, 316 SST	
13	Below F9913JG F9913JX F9913KG F9913KX F9913JZ F9913JY F9913KZ F9913KY F9913GG F9913GX F9913HG F9913HX	1	Cover Assembly (Note 1) Cast-aluminum alloy Cast-aluminum alloy (Option code /PR) Cast-aluminum alloy (Option code /HE) Cast-aluminum alloy (Option code /PR and /HE) ASTM CF-8M ASTM CF-8M (Option code /PR) ASTM CF-8M (Option code /HE) ASTM CF-8M (Option code /PR and /HE) Cast-aluminum alloy with corrosion resistance properties Cast-aluminum alloy with corrosion resistance properties (Option code /PR) Cast-aluminum alloy with corrosion resistance properties (Option code /HE) Cast-aluminum alloy with corrosion resistance properties (Option code /PR and /HE)	} For integral indicator
14	Below F9920LU F9920LV	1	LCD Board Assembly Without range-setting switch With range-setting switch	
15	F9342MK	2	Mounting Screw	
16-1	F9900GE	1	Plate (for A, B, or C capsule), 316 SST	
16-2	F9940WG	1	Hook (for D capsule), 316 SST	
17	F9900RJ	1	Bolt, 316(L) SST	
18	Below F9900GH F9900GT	1	O-Ring Buna-N Fluoro-rubber O-ring (Option code /HE)	
19	F9900SJ	1	Bracket Assembly, 316 SST and ASTM CF-8M	
20	F9900SN	1	U-Bolt/Nut Assembly, 316 SST	
21	F9900SK	1	U-Bolt/Nut Assembly, 316 SST	
22	F9900SF	1	Bracket, ASTM CF-8M	
23	F9940WF	1	Pipe Assembly (for A, B, or C capsule)	

(Note 1) Not applicable for option code /X2.

(Note 2) Applicable for general use type. In case of explosionproof type, consult Yokogawa local office.

(Note 3) This CPU assembly is available for both HART protocol revisions, but is shipped with setting of HART protocol revision 5.
Change the revision number by editing the parameter before using it when HART protocol revision 7 is required.

(Note 4) Not applicable for option code /EE.

(Note 5) Applicable for the device revision 1.